
Service Manual

Ventilating Fan (North America Market)



FV-0810VSSL1

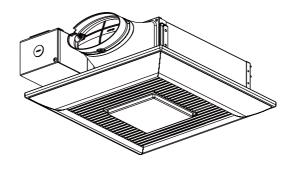

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

IMPORTANT SAFETY NOTICE

There are special components used in this equipment which are important for safety. These parts are marked by \triangle in the Schematic Diagrams, Exploded Views and Replacement Parts List. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent shock, fire or other hazards. Do not modify the original design without permission of manufacture. We suggest to handle such parts after the static electricity prevention.

It is forbidden to touch the PCB parts by bare hands during the repairing process.

CONTENTS	PAGE
1.Specifications	1
2.Parts Identification	2~3
3. Wiring Diagram	4
4.Parts List	5


Panasonic

1. Specifications

Model No.	Air direction	Voltage (V)	Frequency (Hz)	Duct diameter (inches)	Air volume at 0.1" WG (CFM)	Noise (sones)	Speed (rpm)	Power (W)	Weight lb.(kg)
					30	<0.3	711	3.4	
					40	<0.3	723	3.8	
					50	<0.3	733	4.5	7.9
FV-0810VSSL1	Exhaust 120	120	60	4	60	<0.3	770	5.3	(3.6)
					70	<0.3	805	6.5	
					80	0.4	856	8.5	
					100	0.9	954	12.4	

HVI Certified performance based on HVI Procedures 915, 916, and 920.


Main Body Section

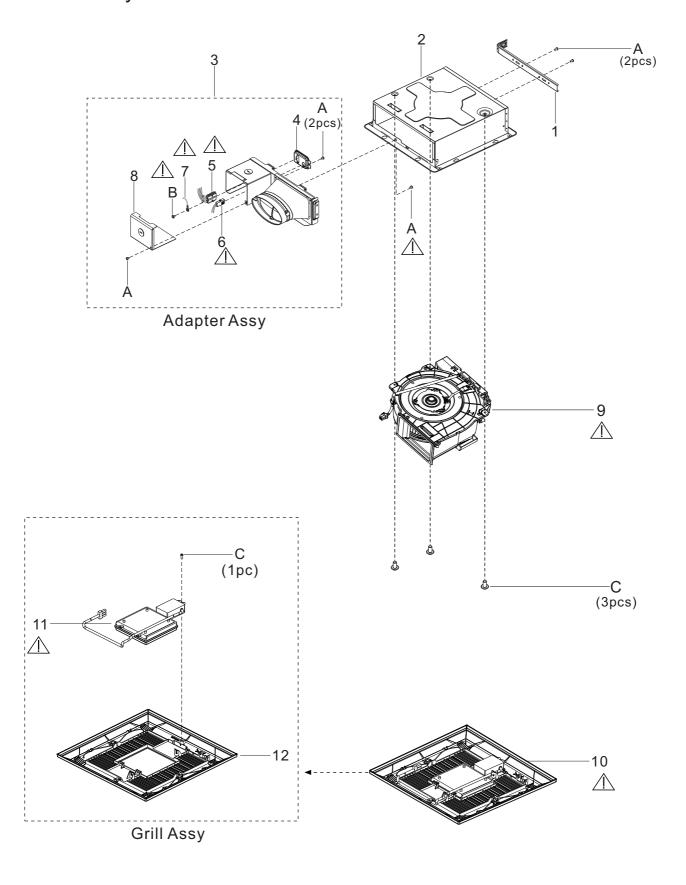


2. Parts Identification


FV-0810VSSL1

Main Labels

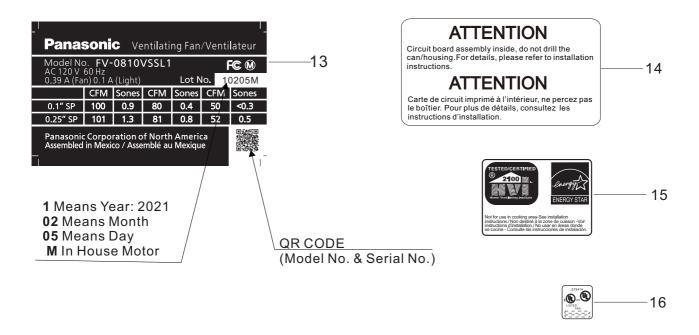

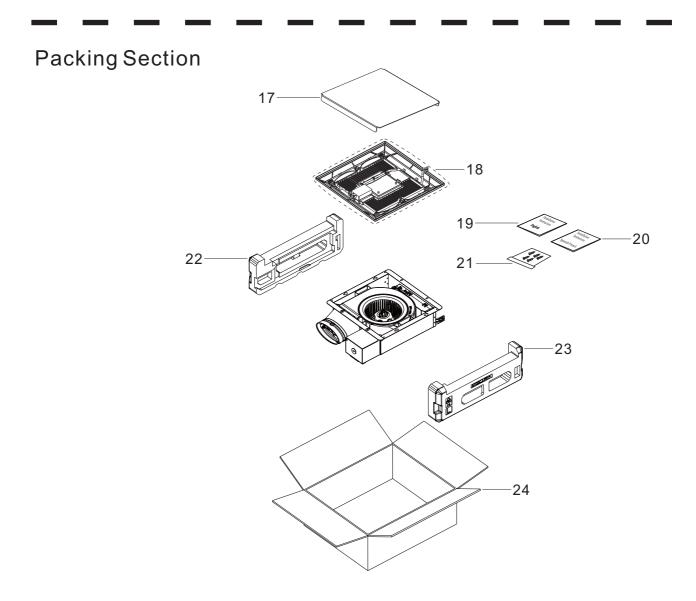



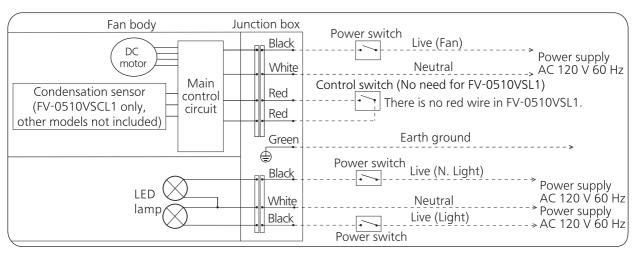

Main Body Section

No.	Part No.	Part Name	Q´ty	Remark
1	FFV5710025S	Suspension Bracket	1	
2	FFV1600159S	Frame Assy	1	
3	FFV0000171S	Adapter Assy	1	\triangle
4	FFV0900054S	Connector Plate	1	
5	FFV0900069S	Connector Assy (L)	1	\triangle
6	FFV0900073S	ConnectorAssy(V)	1	\triangle
7	FFV3450010S	Earth Lead Wire	1	\triangle
8	FFV2800027S	Junction Cover	1	
9	FFV0810VSS1M	Casing Section	1	\triangle
10	FFV3400147S	Louver Assy	1	\triangle
11	FFV3400148S	Led Unit	1	\triangle
12	FFV3400149S	Louver Unit	1	
Α	FFV7000108S	Truss Tap Screw	5	\triangle
В	FFV7000227S	Earth Screw Assy	1	Include Spring Washer
С	FFV7000202S	Bind Tap Screw	4	

Main Labels

No.	Part No.	Part Name	Q´ty	Remark
13	FFV810SL115	Name Plate	1	
14	FFV6730110S	Warning Label	1	
15	FFV0810011S	Caution Label 1	1	
16	FFV2260003S	UL Mark	1	

Packing Section

No.	Part No.	Part Name	Q´ty	Remark
17	FFV4710381S	Louver Case Assy	1	
18	FFV4650016S	Poly Cover	1	
19	FFV510SCL420	Installation Instructions	1	English / Spanish,For USA Market
20	FFV510SCL420	Installation Instructions	1	English / French, For Canada Market
21	FFV0010267S	Accessory A	1	
22	FFV4710431S	Right Pad	1	
23	FFV4710432S	Left Pad	1	
24	FFV9001337S	Packing Case Assy	1	