

Wired Remote Controller Wi-Fi 7 Day Programmable

Model: KSACN1401AAA


Submittal Data

Job Data: _____ Location: _____

Buyer: _____ Buyer P.O. #: _____ Carrier #: _____

Unit Number: _____ Model Number: _____

Performance Data Certified By: _____ Date: _____

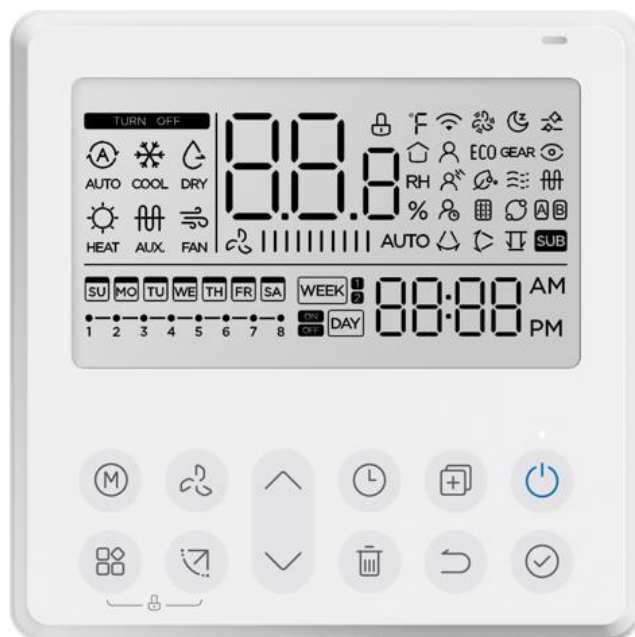

(KSACN1401AAA)

Parts Included

- Installation Manual
- Owner's Manual
- Screws M4X25
- Plastic Screw Bars
- Wall Plugs
- Battery: CR2032
- Wired Remote Controller
- Connection Cable 19ft (6m)

Features

- LCD display
- Malfunction code display
- 4-way wire layout design
- Room temperature display
- Weekly Timer
- Infrared Sensor
- Wi-Fi Control Feature Display

Function

- **Mode:** Choose Auto-Cool-Dry- Heat -Fan
- Fan speed: Auto/Low/Med/High speed
- Swing Horizontal/Vertical (some models)
- Timer ON/OFF
- Temperature setting
- Weekly timer
- Follow me
- Turbo
- 24-hour System
- 12-hour System
- Auto-restart
- Individual louver control (some models)
- Automatic airflow test
- Dual Control
- Group Control
- Child Lock
- Delay Off Display
- Turbo Feature Display
- ECO Feature Display
- Purify Feature Display
- Active Clean Display
- Filter Reminder Display
- Intelligent Eye Display
- Electric Heat Display
- Sleep Feature Display
- Rotation Display

Accessories, Sold Separately (XYE connection only)

Additional extension cable 19 ft (6m) available through Replacement Components. Part Number: **17401204011789**

Specifications

Input Voltage	DC 12V
Ambient Temperature	0~43°C(32~110°F)
Ambient Humidity	40%RH ~ 90%RH

Wiring Specification (HA/HB connection: Field Supplied)

Wiring Type	Size	Maximum Length
Sheathed vinyl cord or cable	16 – 18AWG (0.75 – 1.25mm ²)	66ft (20m)


COMPATIBILITY

This wired controller is compatible with R454b & R410a
R454b models shown below

Indoor Type	Model	Tier	Connections
High Wall	45MPHAQ	High	XYE
High Wall	45MAHAQ	Mid	XYE
High Wall (Light Commercial)	45MAHAQ	Mid	XYE
1- Way Cassette	45MCCAQ	Mid	HA/HB
4 – Way Cassette	45MBCAQ	Mid	HA/HB
4 – Way Cassette (Light Commercial)	45MBCAQ	Mid	HA/HB
Floor Console	45MBFAQ	Mid	XYE
High Wall	45MHHAQ	Entry	XYE
High Wall	D5MVHAQ	Value	XYE
High Wall - Cooling Only	45MHHAC	Entry	XYE
Low Static Ducted	45MBDAQ	Mid	HA/HB
High Static Ducted	45MBDAQ	Mid	HA/HB
Celling and Floor Console	45MCFAQ	Mid	HA/HB
Celling and Floor Console (Light Commercial)	45MCFAQ	Mid	HA/HB
Air Handler	45MBAAQ	Mid	HA/HB
Air Handler	45MUAAQ	Mid	HA/HB
Air Handler	45MUHAQ	High	HA/HB

NOTE: This controller will not work with R410a High Wall or R410a Floor Console


Construction View

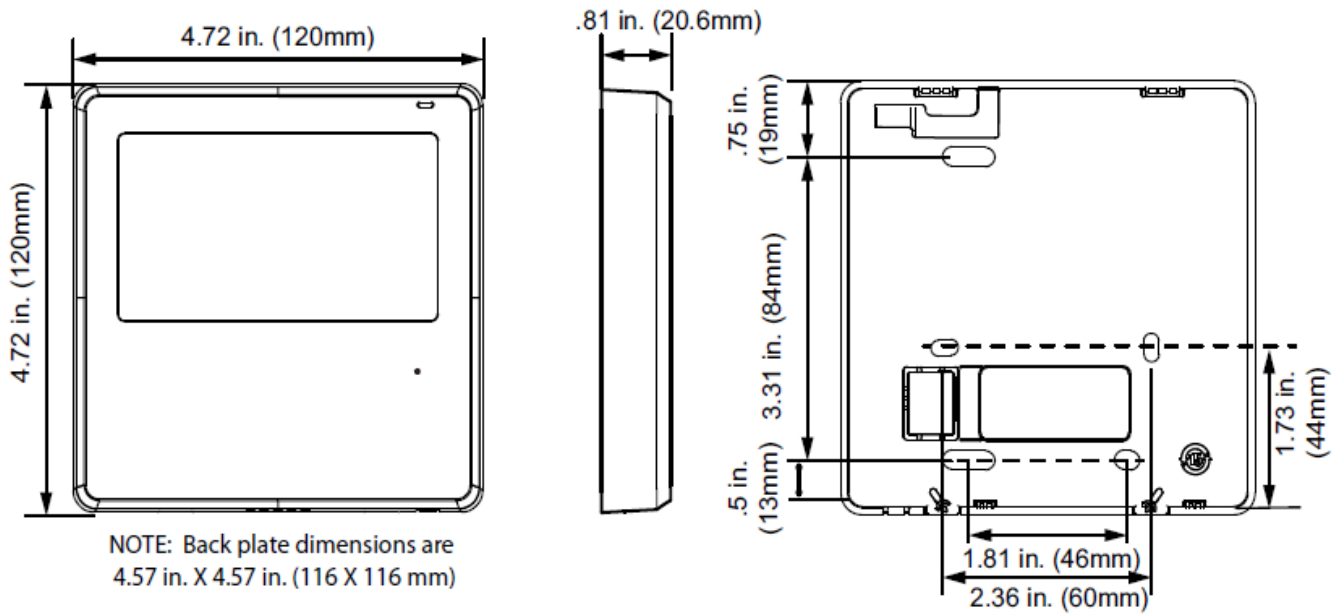

Wiring Configuration


Option A connects to (12V) XYE or CN connection on the Indoor Main Control Board

Option A XYE

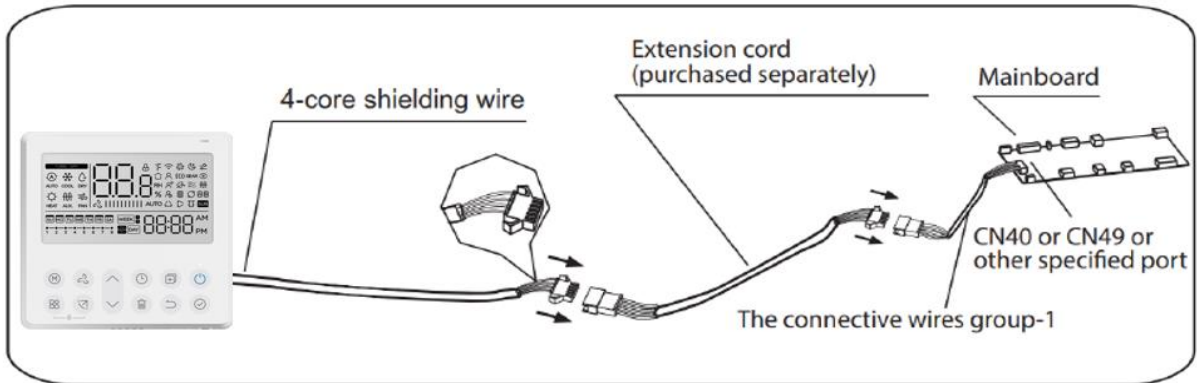

Option B connects to (12V) HA/HB terminals on the Indoor Main Control Board

Option B HA/HB

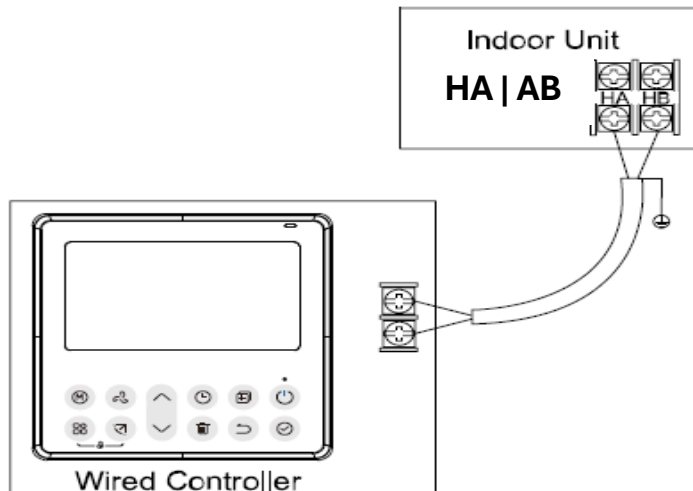


Controller Group Control

The main/secondary wired controller can be used to enable two wired controllers to control one unit, and the wired controllers connect to the unit HA/HB port through the HA/HB port on the controller. There is no polarity between HA and HB.

NOTE: Wired controller with Wireless function does not have this function.

NOTE: Only applicable to light commercial units and units that have HA/HB connections

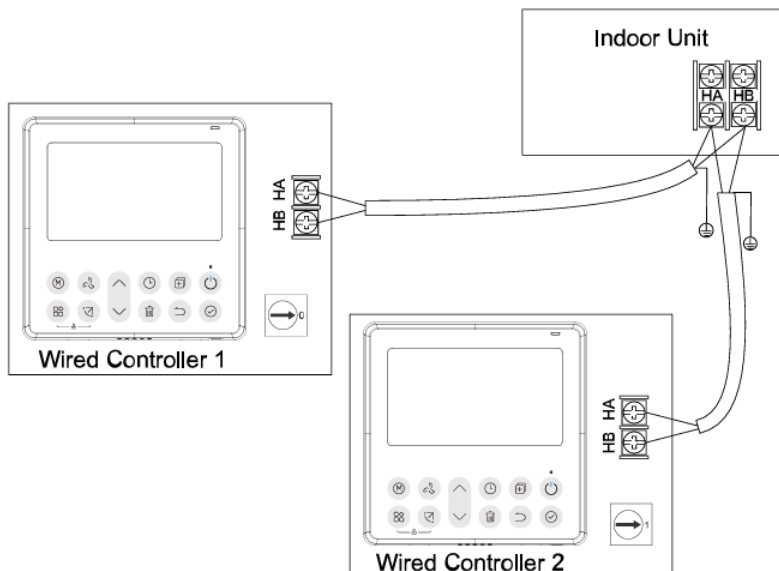

Controller Group Control: Query Mode



To enter QUERY Mode, power off the indoor unit with the controller. Press "COPY" for 3 seconds, first display P:00, if connected to an indoor unit, display P:00, if connected to multiple indoor units, press "∧" or "∨" to display P:01, P:02, and then press "Confirm" to enter the query indoor unit T_n(T₁~T₄) temperature and fan fault(CF), press "∧" or "∨" to select.

Controller Group Control: Two Wire Controller Address Settings



In Query Mode use "∧" or "∨" to select Adr, the temperature zone will display -- or A, B. Where -- refers to the code setting of the wirecontroller.

Press "Confirm" into setting state, press "∧" or "∨" to select, then press "Confirm" to complete it.

Adr

-- : The code setting  of the wire controller shall prevail.

Adr : The wire controller address setting.

For more information refer to the installation and owner's manual