

#### ABBREVIATIONS

EA: Exhaust Air to outside  
 OA: Outside Air intake  
 RA: Room Air to be exhausted  
 SA: Supply Air to inside


#### INSTALLATION ORIENTATION

Unit must be installed in orientation shown.

#### NOTE

1. UNLESS OTHERWISE SPECIFIED, DIMENSIONS ARE ROUNDED TO THE NEAREST EIGHTH OF AN INCH.

2. SPECIFICATIONS MAY BE SUBJECT TO CHANGE WITHOUT NOTICE.

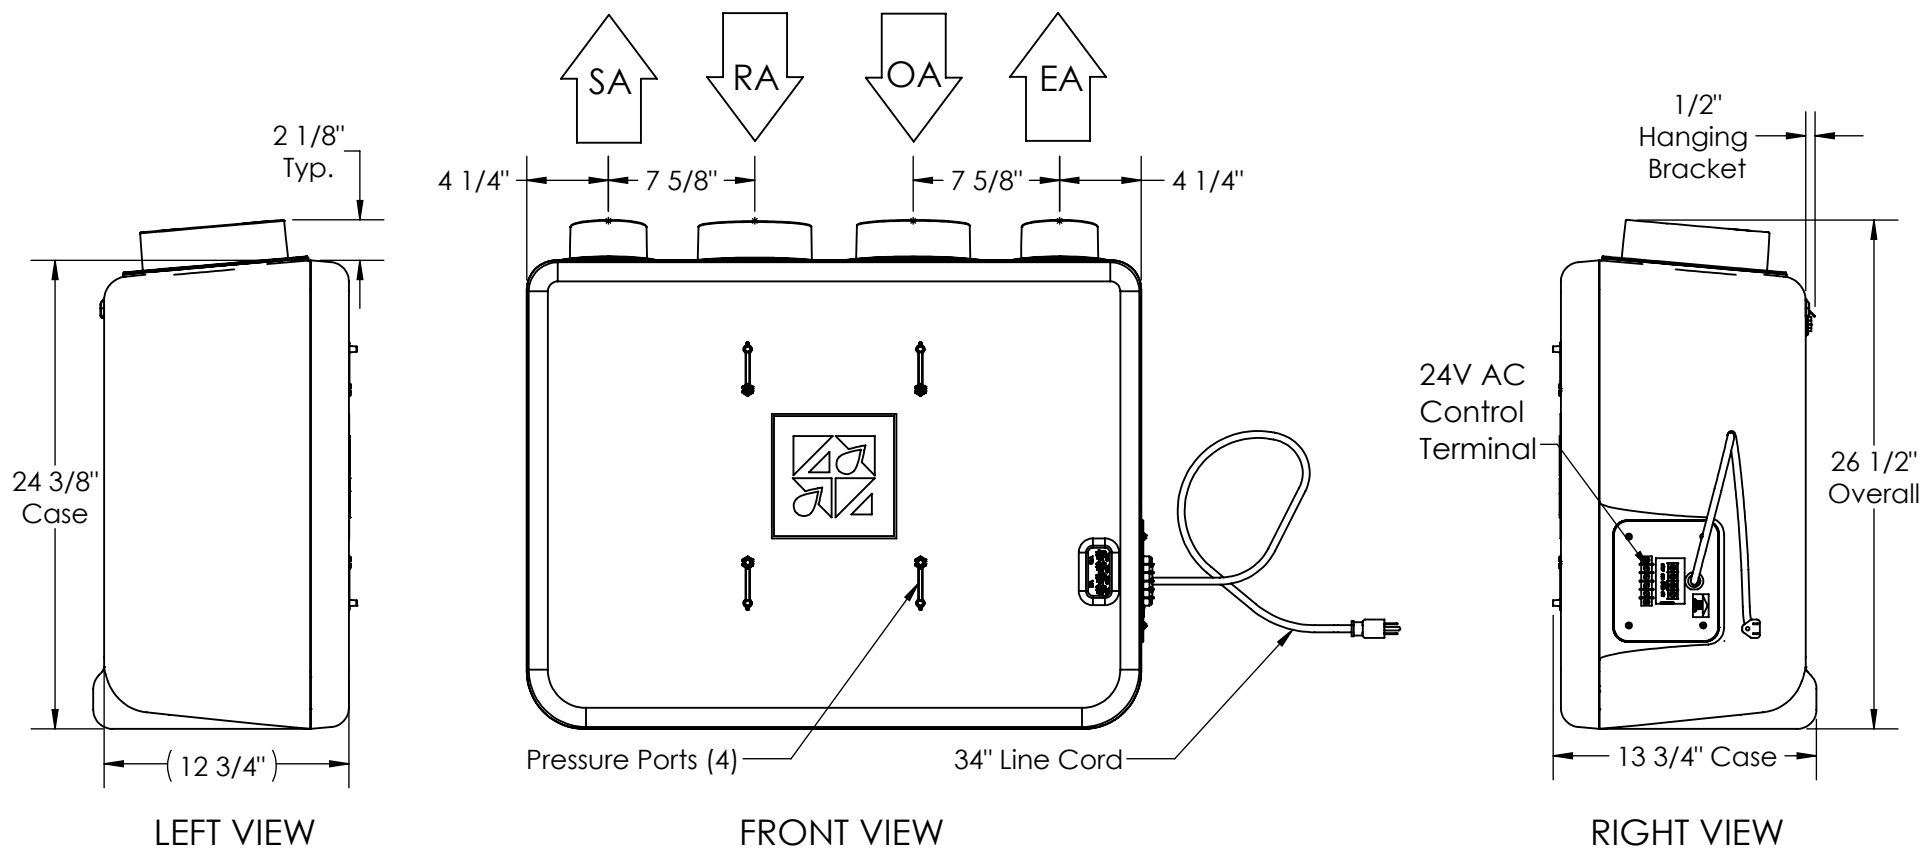

Model: ET-255MF-P340-XC0  
 Drawing Type: Unit Dimension  
 Version: JAN25

**RenewAire**  
 Energy Recovery Ventilation