


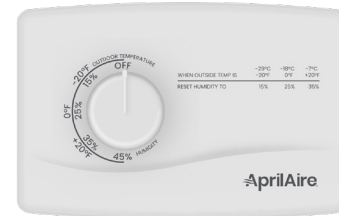


620 & 720
HUMIDIFIER

Wiring Instructions

for Various Applications




Model 60 Standard Wiring

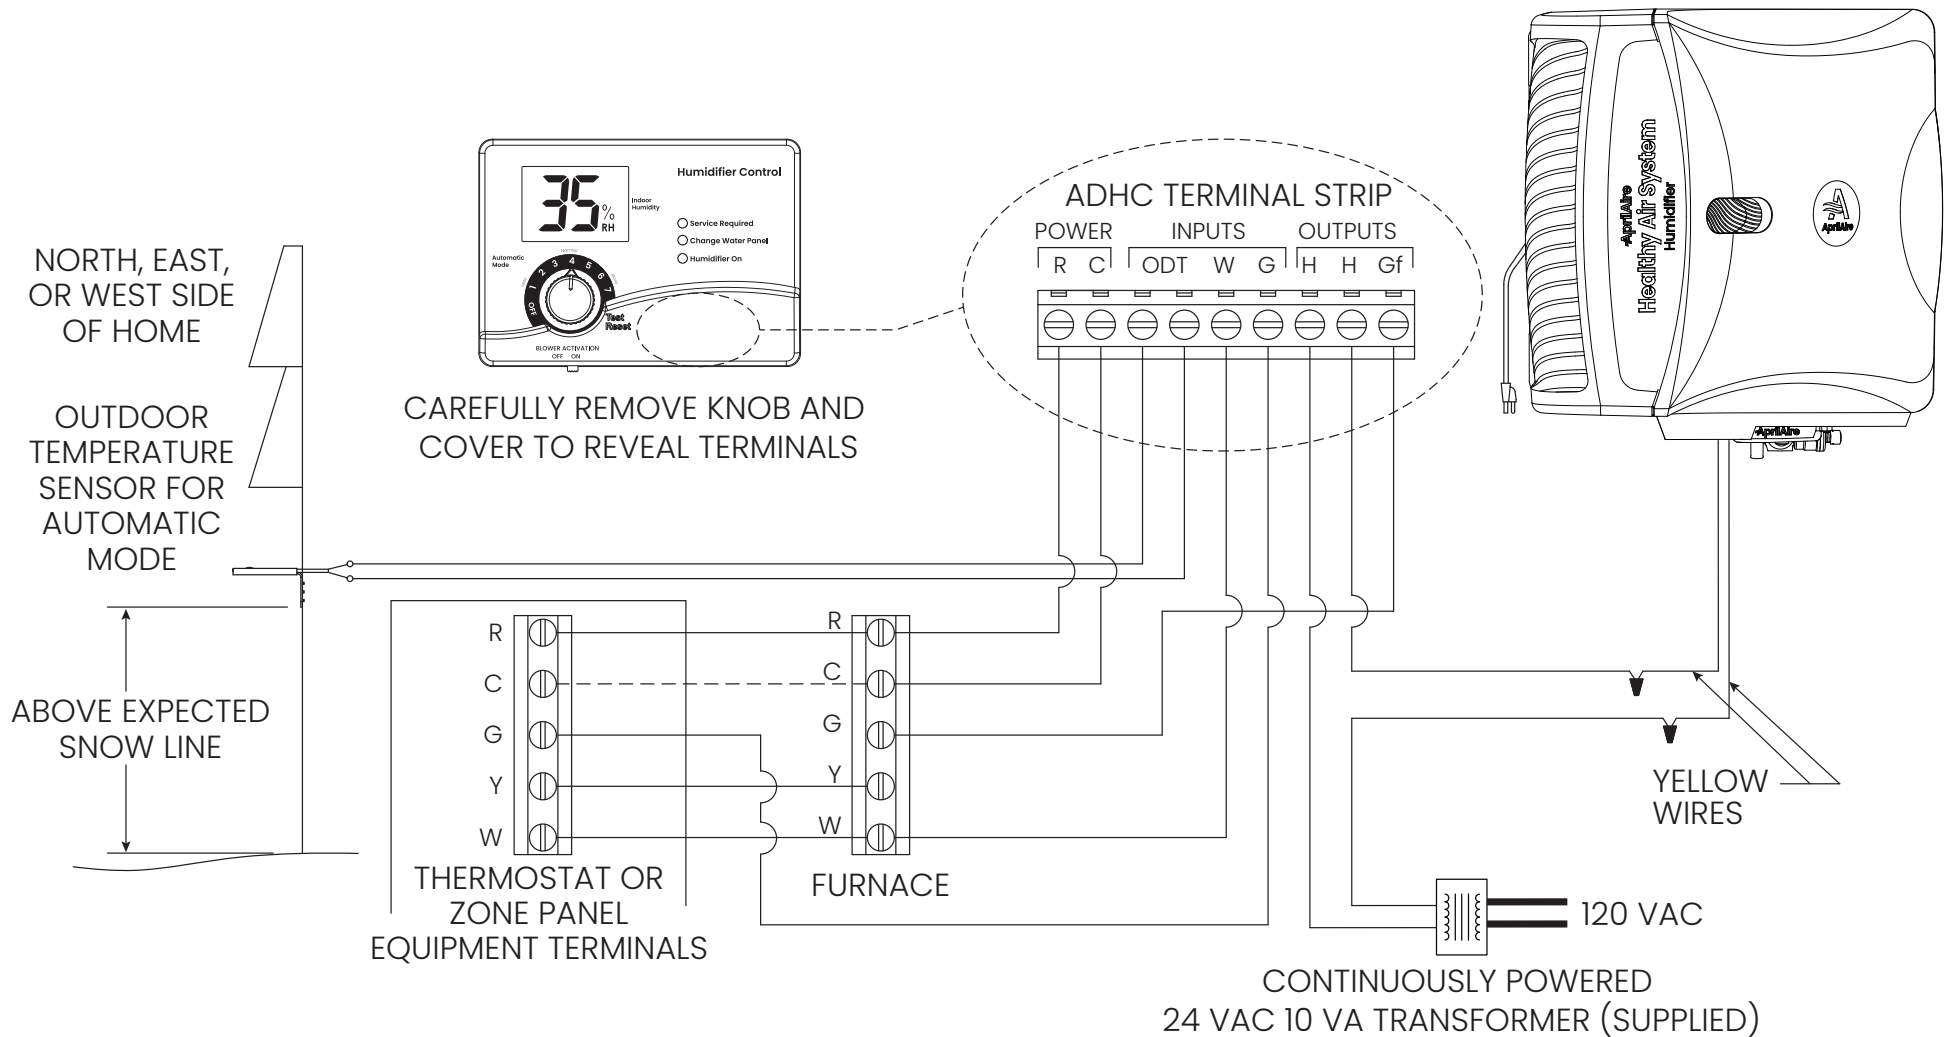


720 Humidifier is shown for reference; wiring is the same for 620 and 720 models.

Model 4655 Wired to HUM Terminal

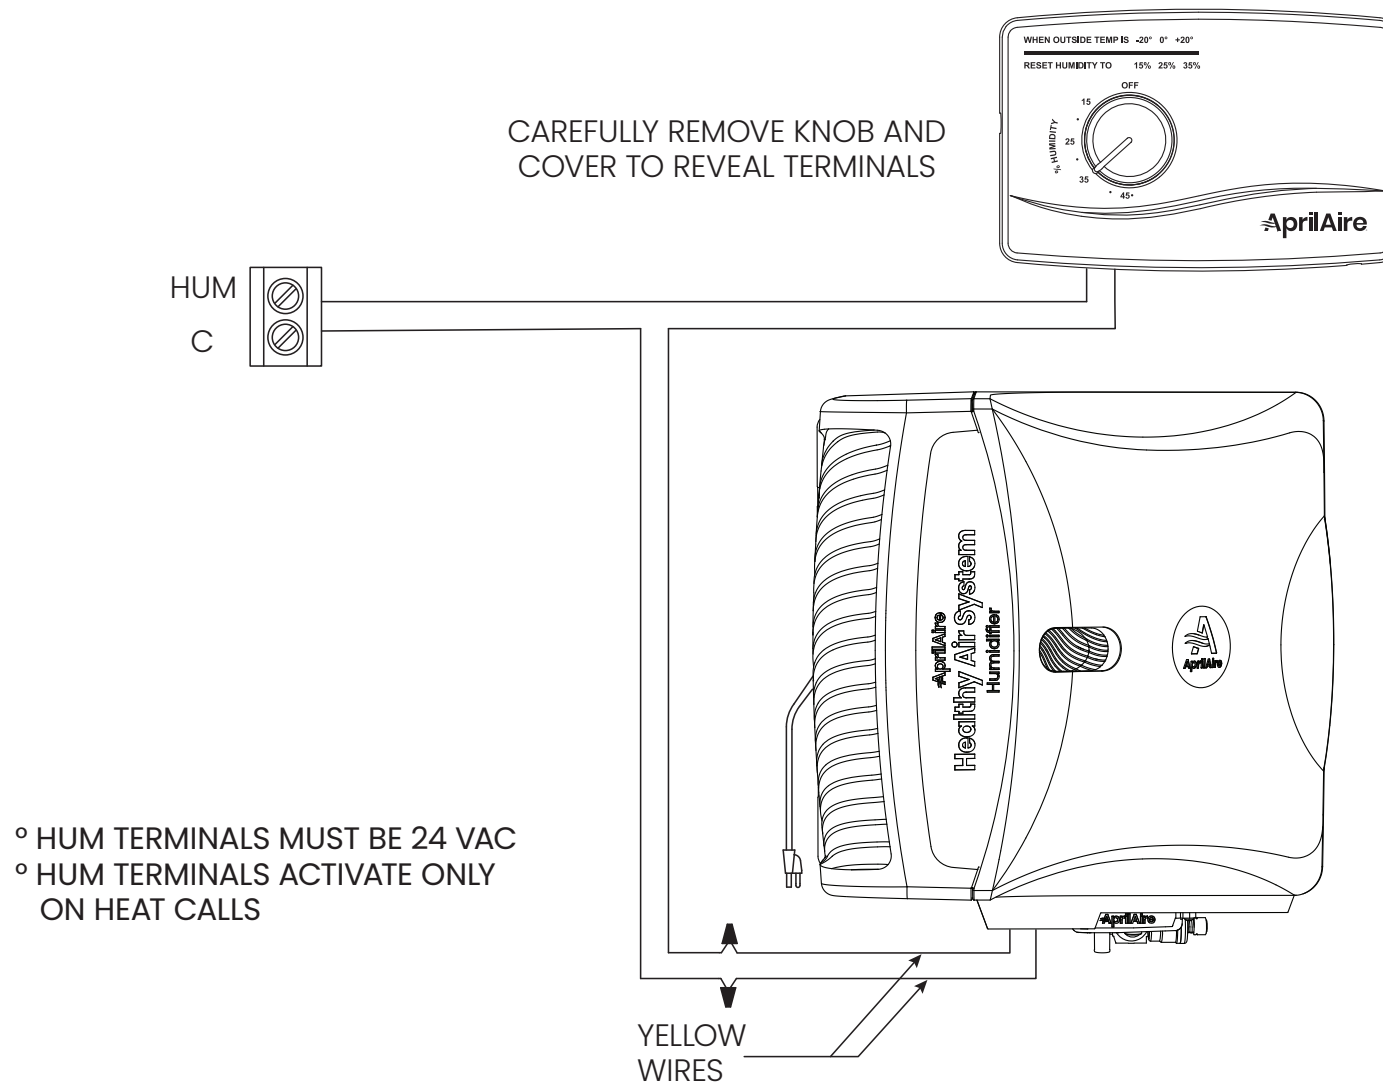


720 Humidifier is shown for reference; wiring is the same for 620 and 720 models.

Model 4655 Wired to EAC Using Included Transformer

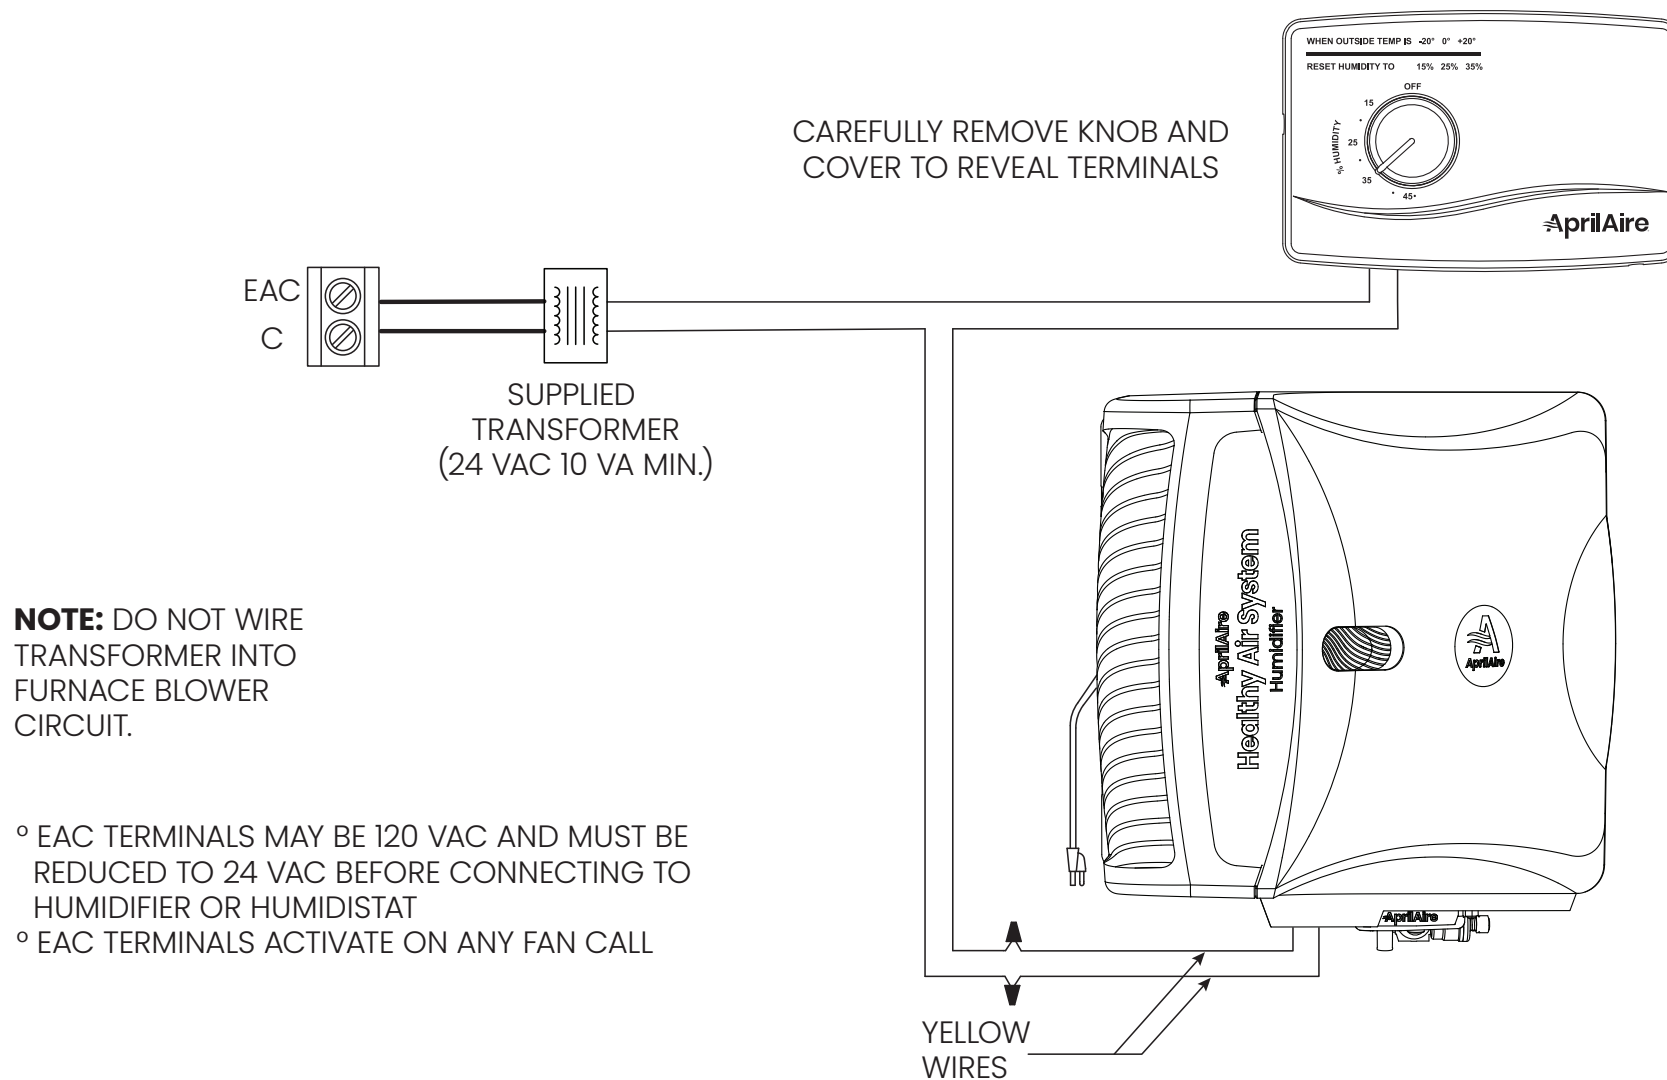


720 Humidifier is shown for reference; wiring is the same for 620 and 720 models.

Model 4655 with Current Sensing Relay

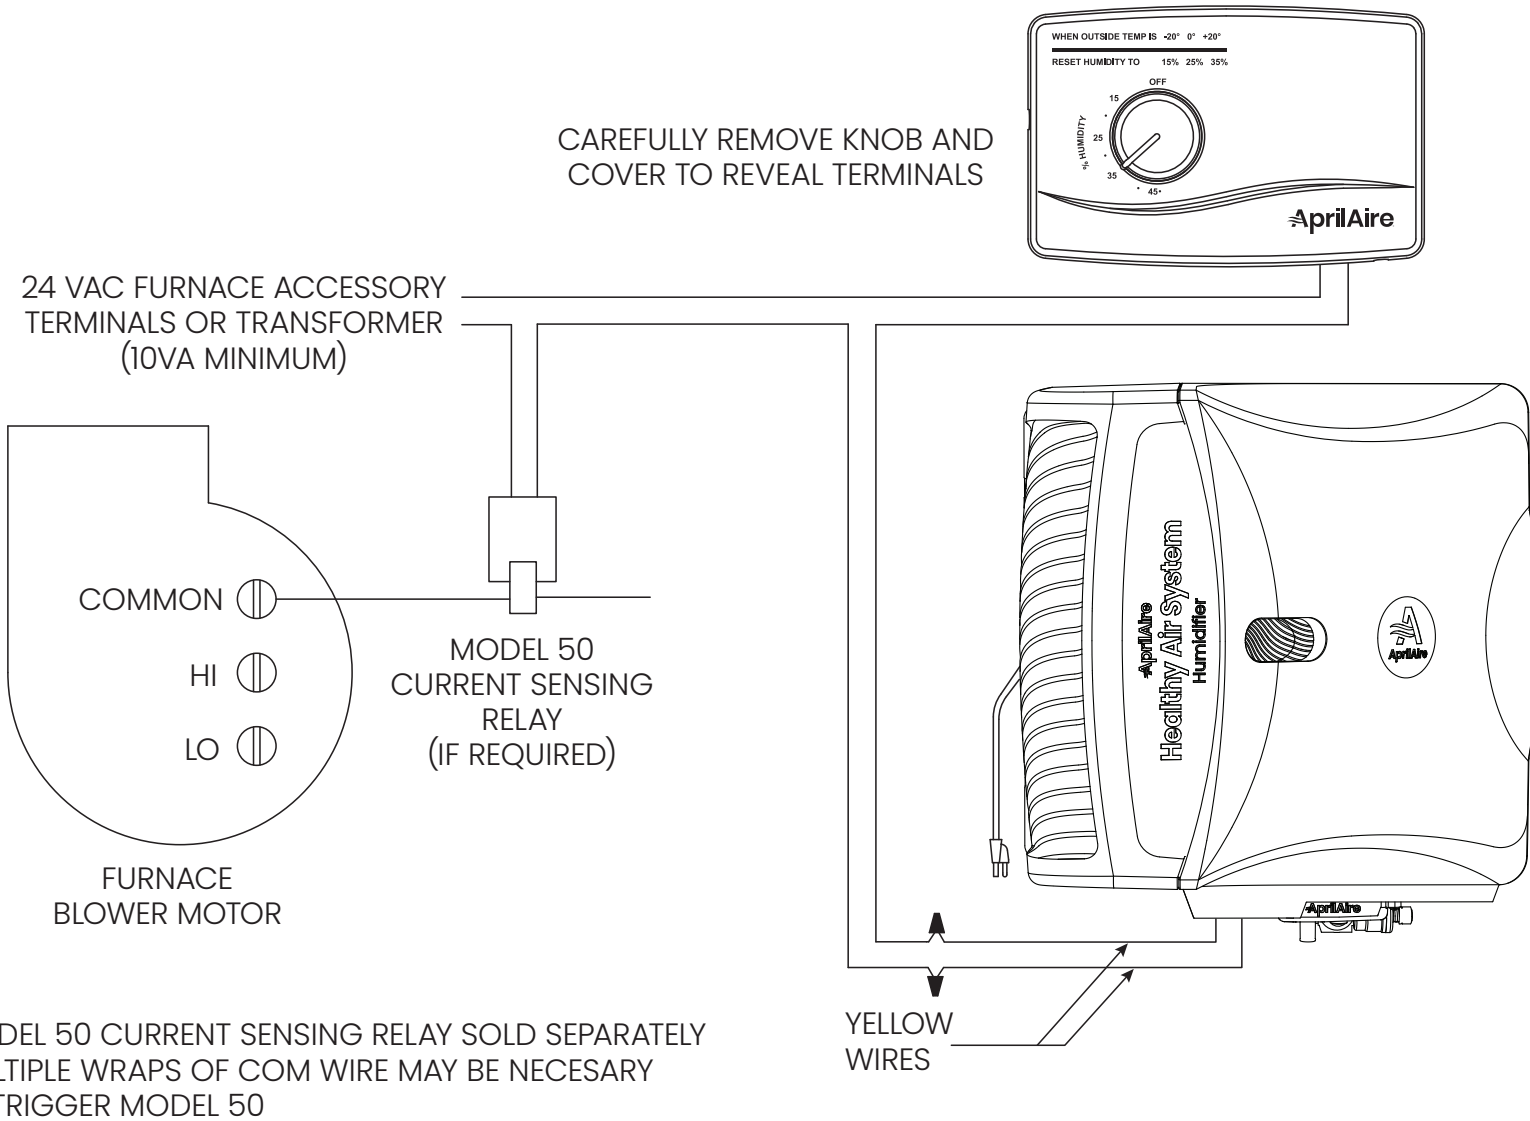

Model 4655 with Blower Activation Relay

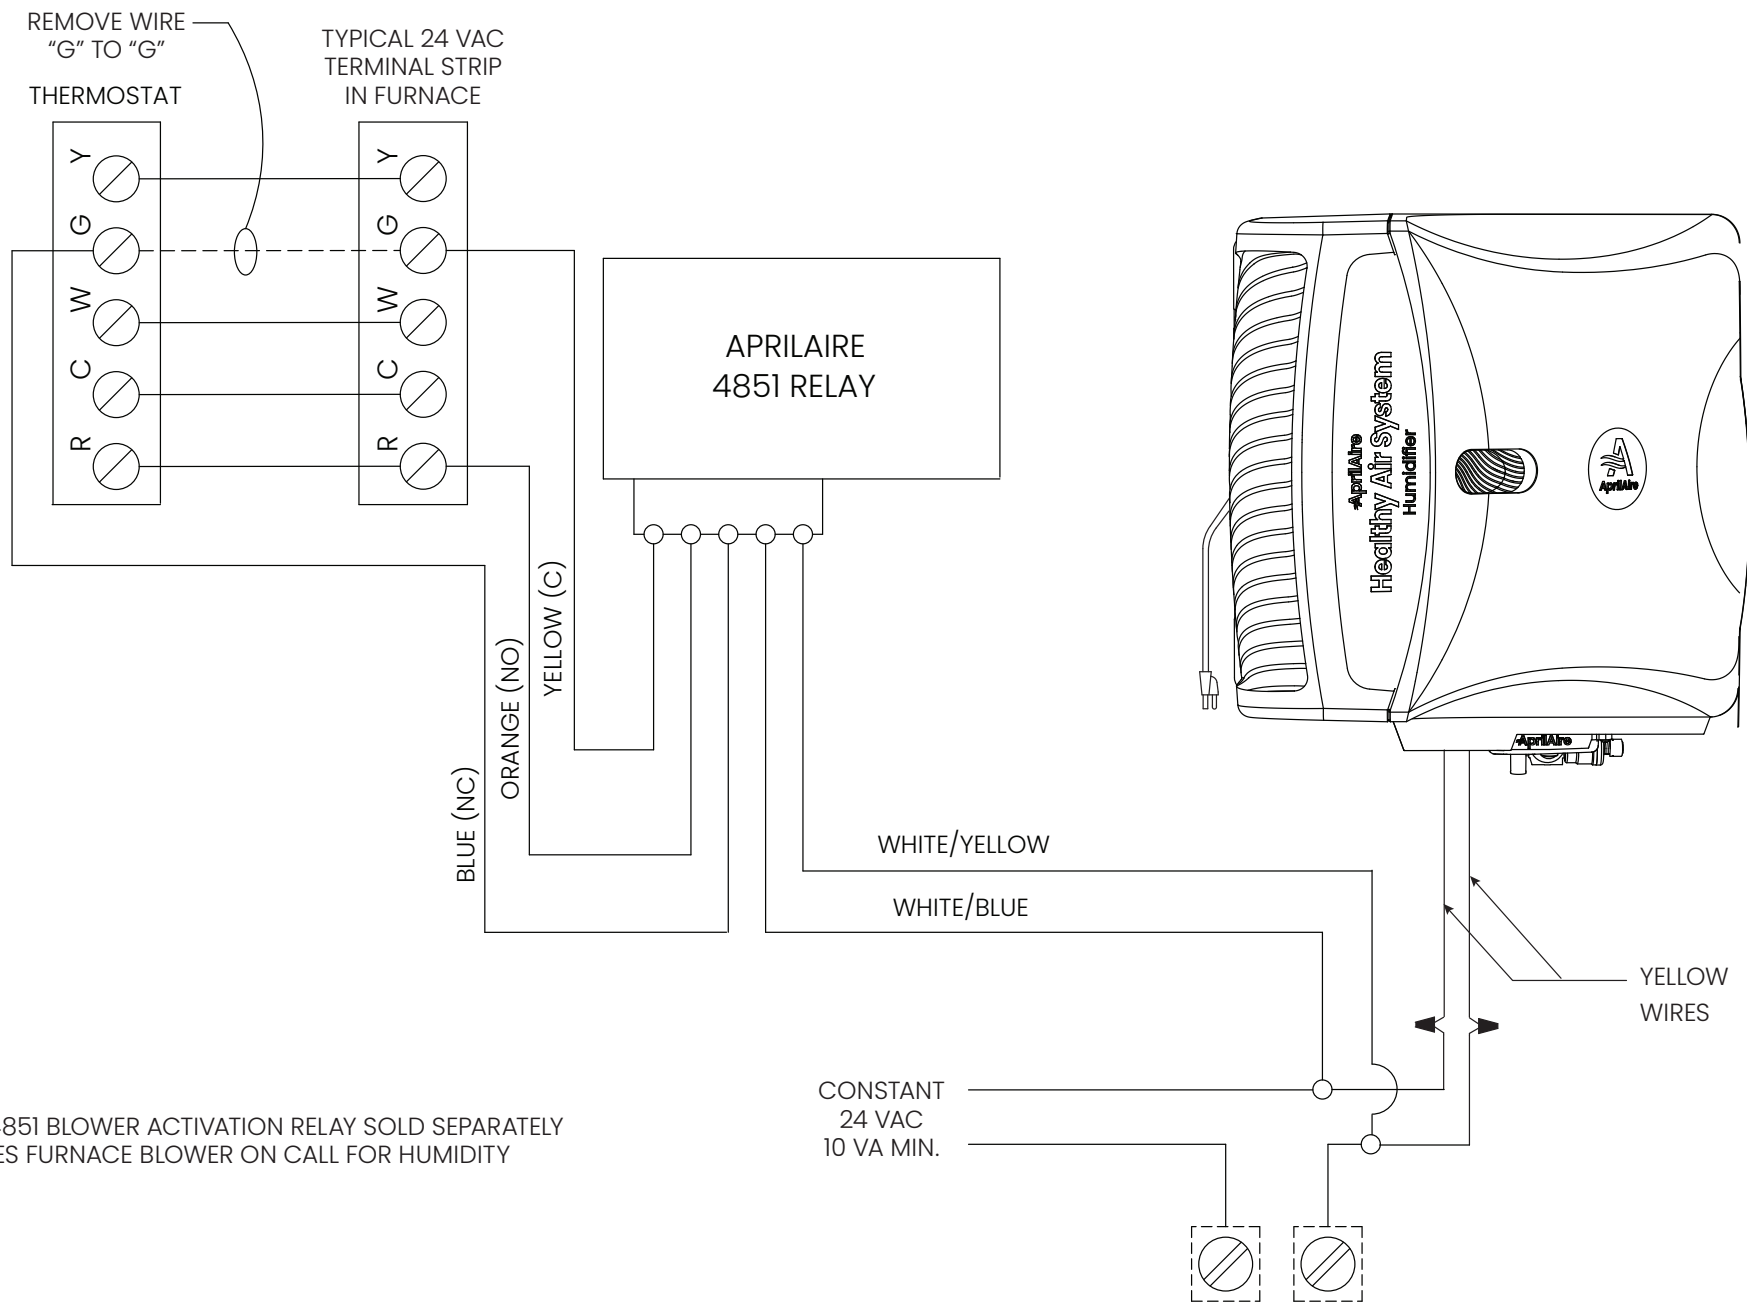

- ° MODEL 4851 BLOWER ACTIVATION RELAY SOLD SEPARATELY
- ° ACTIVATES FURNACE BLOWER ON CALL FOR HUMIDITY

720 Humidifier is shown for reference; wiring is the same for 620 and 720 models.

Model 4655 with Air Flow Proving Switch

