

DLFUA

Owners Manual

Sizes 18K-60K

TABLE OF CONTENTS

| | PAGE |
|-------------------------------------|------|
| A NOTE ABOUT SAFETY | 2 |
| GENERAL | 2 |
| ACCESSORIES | 3 |
| CONTROLS OPTIONS | 4 |
| REMOTE CONTROLLER FUNCTIONS | 4 |
| REMOTE SCREEN INDICATORS | 5 |
| AUTO START | 6 |
| ENERGY SAVING RECOMMENDATIONS | 6 |
| CARE AND MAINTENANCE | 6 |
| TROUBLESHOOTING | 8 |

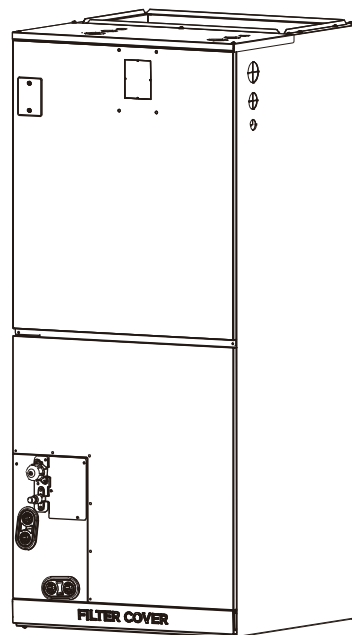


Fig. 1 — Air Handler

A220698

NOTE TO EQUIPMENT OWNER:

Please read this Owner's Information Manual carefully before installing and using this appliance and keep this manual for future reference.

For your convenience, please record the model and serial numbers of your new equipment in the spaces provided. This information, along with the installation data and dealer contact information, will be helpful should your system require maintenance or service.

UNIT INFORMATION

Model # _____

Serial # _____

INSTALLATION INFORMATION

Date Installed _____

DEALERSHIP CONTACT INFORMATION


Company Name: _____

Address: _____

Phone Number: _____

Technician Name: _____

A NOTE ABOUT SAFETY

Any time you see this symbol  in manuals, instructions and on the unit, be aware of the potential for personal injury. There are 3 levels of precaution:

1. **DANGER** identifies the most serious hazards which will result in severe personal injury or death.
2. **WARNING** signifies hazards that could result in personal injury or death.
3. **CAUTION** is used to identify unsafe practices which could result in minor personal injury or product and property damage.

NOTE is used to highlight suggestions which will result in enhanced installation, reliability, or operation.



WARNING

PERSONAL INJURY, DEATH AND / OR PROPERTY DAMAGE HAZARD

Failure to follow this warning could result in personal injury, death or property damage.

Improper installation, adjustment, alteration, service, maintenance, or use can cause explosion, fire, electrical shock, or other conditions which may cause personal injury or property damage. Consult a qualified installer, service agency, or your distributor or branch for information or assistance. The qualified installer or service agency must use factory-authorized kits or accessories when modifying this product.

Read and follow all instructions and warnings, including labels shipped with or attached to the unit before operating your new air conditioner.

GENERAL

The Air Handler fan coil unit provides quiet, maximum comfort. In addition to cooling and/or heating, the Air Handler fan coil unit, matched with an outdoor condensing unit, filters and dehumidifies the air in the room to provide maximum comfort.

IMPORTANT: The Air Handler fan coil unit should be installed by authorized personnel only; using approved tubing and accessories. If technical assistance, service or repair is needed, contact the installer.

The Air Handler fan coil unit can be set up and operated from the remote control or the wired controller (both provided).

Operating Modes:

The Air Handler fan coil unit has four operating modes:

- **FAN ONLY**
- **AUTO**
- **HEATING**
- **COOLING**

FAN ONLY

In the **FAN ONLY** mode, the system filters and circulates the room air without changing the room air temperature.

AUTO

In the **AUTO** mode, the system automatically cools or heats the room according to the user-selected set point.

NOTE: AUTO mode is recommended for use on single zone applications only. Using AUTO changeover on multi-zone applications could set an indoor unit to STANDBY mode, indicated by two dashes (–) on the display, which turns the indoor unit off until all the indoor units are in the same mode; either COOLING or HEATING.

NOTE: HEATING is the system's priority mode. Simultaneous HEATING and COOLING is not allowed.

HEATING

In the **HEATING** mode, the system heats and filters the room air.








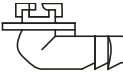

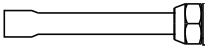

COOLING

In the **COOLING** mode, the system cools, dries and filters the room air.

ACCESSORIES

The system is shipped with the following accessories (see Table 1). Keep the owner's manual in a safe place and do not discard any accessories until the installation has been completed.

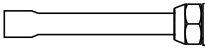Table 1 — Accessories

| Name | Shape | Quantity |
|--|---|----------|
| Owner's and Installation Manual |  | 2 |
| Remote Controller |  | 1 |
| Batteries |  | 2 |
| Suction Line Flare to Weld Adapter 3/4" (18K-48K) 7/8" (60K) |  | 1 |
| Liquid Line Flare to Weld Adapter 3/8" (All Sizes) | | 1 |
| Fasten Belt |  | 2 |
| Sponge |  | 4 |
| Flare Nut (18K-60K) |  | 2 |
| Accessories included with the outdoor unit | | |
| Drain Joint |  | 1 |
| Seal |  | 1 |
| Suction Line Flare to Weld Adapter 3/4" (18K-48K) 7/8" (60K) |  | 1 |
| Liquid Line Flare to Weld Adapter 3/8" (All Sizes) | | 1 |
| Suction Line reducer |  | 1 |

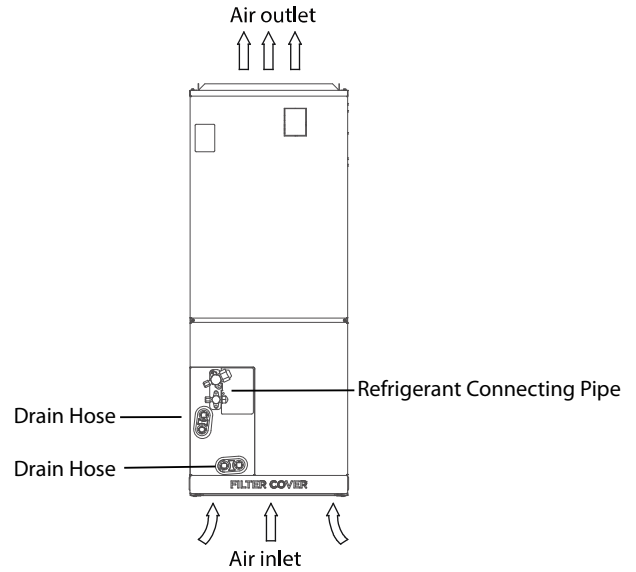


Fig. 2 — Air Handler

A220704

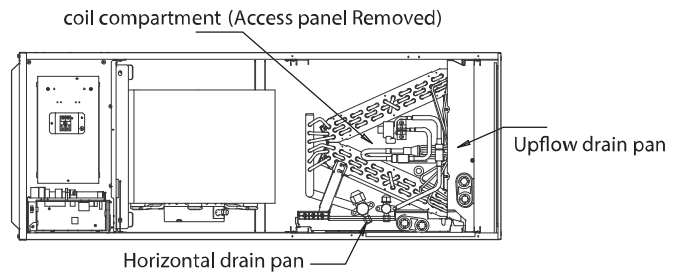


Fig. 3 — Indoor Unit Representation

A220705

CONTROLS OPTIONS

The air handler fan coil unit can be controlled mainly through the following methods.

1. Wired controller (Not Included) - KSACN1001AAA

Non-polarity controller used to operate all functions. The wired controller is equipped with an infrared receiver and can be used in conjunction with the wireless controller.

2. Wireless controller (Included)

Hand-held wireless remote provides the same functionality as the wired controller and can be used independently or in conjunction with the wired controller.

3. Third party heat pump thermostat (Not Included)

Allows the control of the air handler via the built-in 24V interface.

Refer to the installation manual for additional information.

REMOTE CONTROLLER FUNCTIONS

Review Figure 4 for a description of the remote controller functions.

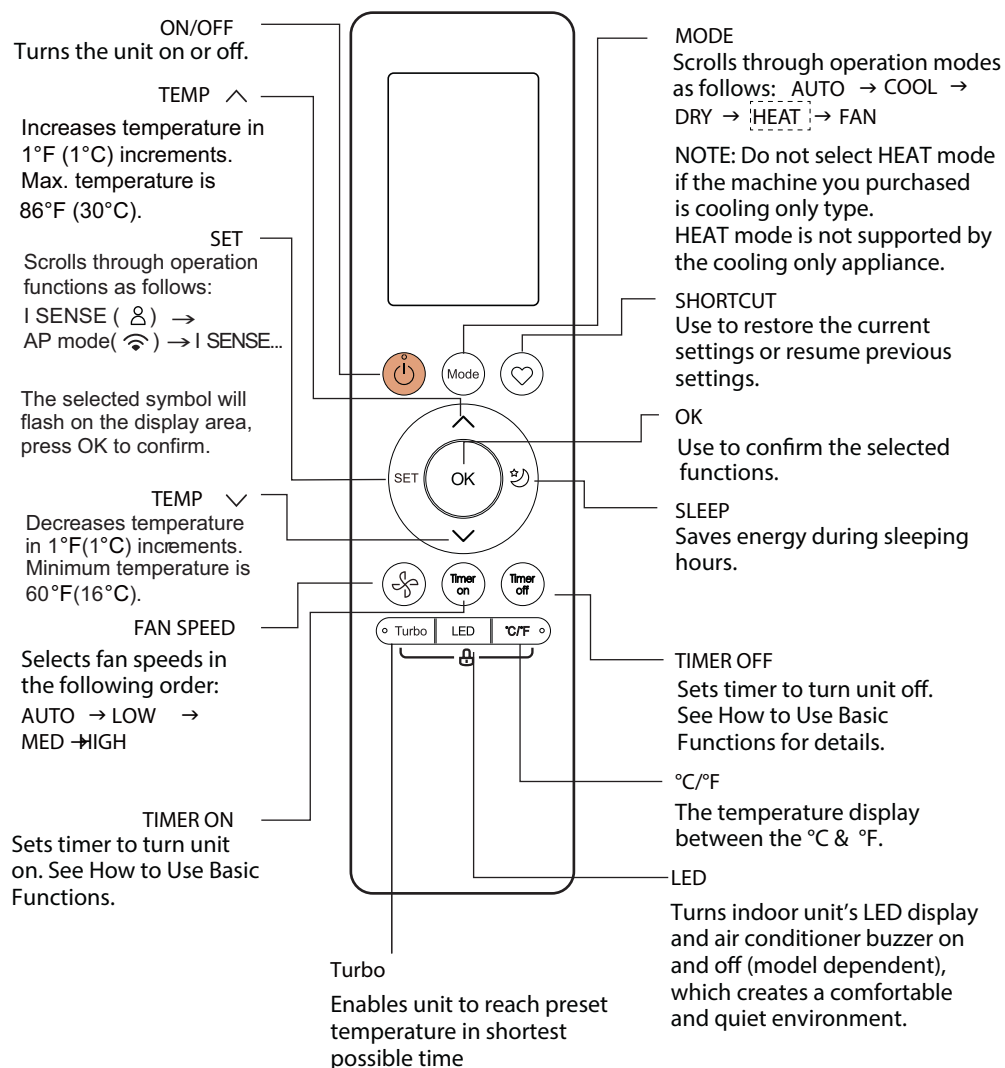


Fig. 4 —Remote Controller Functions

REMOTE SCREEN INDICATORS

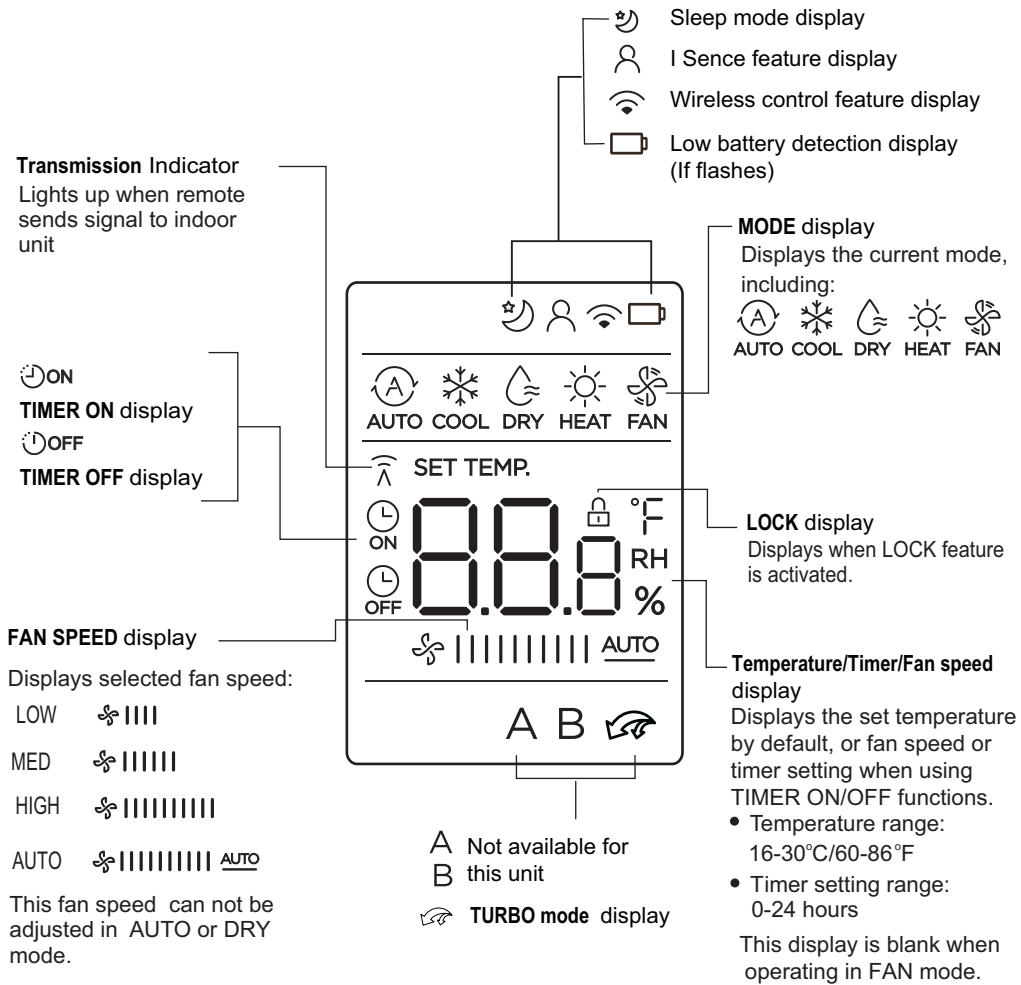


Fig. 5 — Remote Screen Indicators


AUTO START

If the power fails while the unit is operating, the unit stores the operating condition, and the unit automatically starts operating under those conditions once the power is restored.


ENERGY SAVING RECOMMENDATIONS

The following recommendations will add greater efficiency to the ductless system:

- Select a comfortable thermostat setting and leave it at the selected setting. Avoid continually raising and lowering the setting.
- Keep the filter clean. Frequent cleaning may be necessary depending on the indoor air quality.
- Use drapes, curtains or shades to keep direct sunlight from heating the room on very hot days.
- Limit the unit's run time by using the TIMER function.
- Do not obstruct the air intake on the front panel.
- Turn on the air conditioning unit before the indoor air becomes too uncomfortable.
- DO NOT set the unit to excessive temperature levels.
- While cooling, close the curtains to avoid direct sunlight.
- Doors and windows should be kept closed to keep cool or warm air in the room.
- DO NOT place objects near the air inlet and outlet of the unit.
- Clean the air filter every two weeks.
- Adjust the louvers properly and avoid direct airflow.

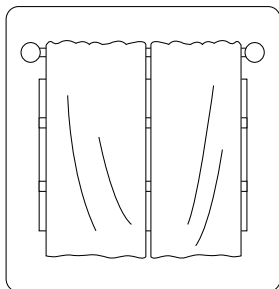

Closing curtains during heating also helps keep the heat in

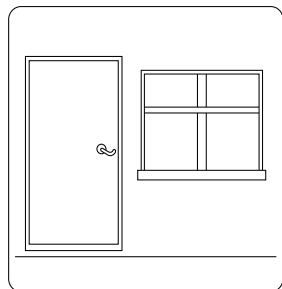

Doors and windows should be kept closed

A220717

Fig. 6 —Close curtains, doors and windows

CARE AND MAINTENANCE

CLEANING YOUR INDOOR UNIT



CAUTION

BEFORE CLEANING OR MAINTAINING THE UNIT

Always turn the unit off and disconnect its power supply before cleaning or maintaining the unit.

When removing filter, do not touch metal parts in the unit. The sharp metal edges can cut.

DO NOT use water to clean the inside of the indoor unit. This can destroy insulation and cause an electrical shock.

DO NOT expose the filter to direct sunlight when drying. This can shrink the filter.



CAUTION

Any maintenance and cleaning of the outdoor unit should be performed by an authorized dealer or a licensed service provider.

Any unit repairs should be performed by an authorized dealer or a licensed service provider.

Contact an authorized service technician for repair or maintenance. Improper repair and maintenance may cause water leakage, electrical shock, or fire and may void your warranty.

DO NOT substitute a blown fuse with a higher or lower amperage rating fuse, as this may cause circuit damage or an electrical fire.

Ensure the drain hose is set up according to the instructions. Failure to do so may cause leakage and result in personal property damage, fire and electric shock.

Ensure all wires are connected properly. Failure to connect wires according to instructions can result in electrical shock or fire.



CAUTION

MAINTAINING THE UNIT

Only use a soft, dry cloth to wipe the unit clean. If the unit is especially dirty, you can use a cloth soaked in warm water to wipe it clean.

DO NOT use chemicals or chemically treated cloths to clean the unit. **DO NOT** use benzene, paint thinner, polishing powder or other solvents to clean the unit. They can cause the plastic surface to crack or deform.

DO NOT use water hotter than 104°F (40°C) to clean the front panel. This can cause the panel to deform or become discolored.

DO NOT wash the unit under running water. Doing so creates an electrical hazard. Clean the unit using a damp, lint-free cloth and neutral detergent. Dry the unit with a dry, lint-free cloth.

CLEANING THE FILTER

The filter prevents dust and other particles from entering the indoor unit. Dust buildup can reduce the efficiency of the air conditioner. For optimum efficiency, clean the air filter every two weeks or more frequently if you reside in a dusty area. Replace the filter with a new one if the filter is heavily clogged and cannot be cleaned.

NOTE: In households with animals, you may have to periodically wipe down the grille to prevent animal hair blocking the unit's airflow.

1. Remove the filter cover.
2. Remove the air filter.
3. Clean the air filter by vacuuming the surface or washing the filter in warm water with mild detergent.


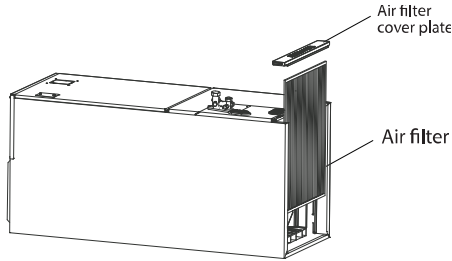


Fig. 7 —Remove the air filter cover

A220718

If using water, the inlet side should face down and away from the water stream.

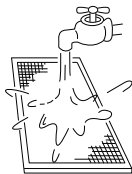

If using a vacuum cleaner, the inlet side should face the vacuum.

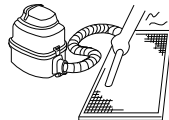


Fig. 8 —Cleaning filter with water or vacuum

A220719

MAINTENANCE – LONG PERIODS OF NON-USE

If you plan not to use the air conditioner for an extended period of time, perform the following steps:

1. Clean all filters.

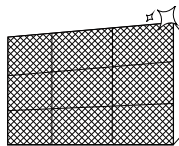


Fig. 9 —Clean all filters

A220720

2. Turn on the FAN function until the unit dries out completely.



Fig. 10 —Turn on the FAN function

A220722

3. Turn off the unit and disconnect the power.



A220723

**Fig. 11 —Turn off the unit and disconnect the power
MAINTENANCE - PRE-SEASON INSPECTION**

After long periods of non-use, or before periods of frequent use, do the following:

1. Check for damaged wires.

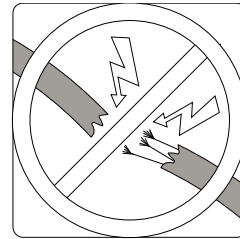


Fig. 12 —Check for damaged wires

A220724

2. Clean all filters

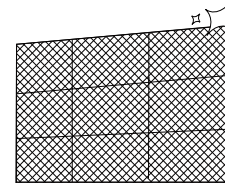


Fig. 13 —Clean all filters

A220720

3. Check for leaks.



Fig. 14 —Check for leaks

A220721

4. Ensure nothing is blocking the air inlets and outlets.

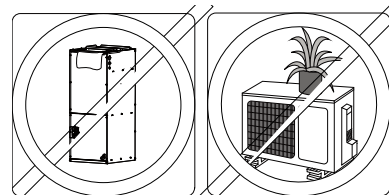


Fig. 15 —Remove obstacles blocking air inlets/outlets

A220725

TROUBLESHOOTING



WARNING

SAFETY PRECAUTIONS

If any of the following conditions occur, turn off the unit immediately:

The power cord is damaged or abnormally warm.

You smell a burning odor.

The unit emits loud or abnormal sounds.

A power fuse blows or the circuit breaker frequently trips.

Water or other objects fall into or out of the unit.

DO NOT attempt to fix these issues yourself. Contact an authorized service provider immediately!

The issues in Table 2 are not malfunctions and in most cases do not require repairs.

Table 2 — Common Issues

| Issue | Possible Causes |
|--|--|
| Unit does not turn on when user presses ON/OFF | The unit has a 3-minute protection feature that prevents the unit from overloading. The unit cannot be restarted within three minutes after being turned off. |
| | COOLING and HEATING models: If the Operation light and PRE-DEF (Pre-heating/ Defrost) indicators are illuminated, the outdoor temperature is too cold and the unit's anti-cold wind is activated to defrost the unit. |
| | In the COOLING -only models: If the " Fan Only " indicator is illuminated, the outdoor temperature is too cold and the unit's anti-freeze protection activates to defrost the unit. |
| The unit changes from COOL/HEAT mode to FAN mode | The unit may change its setting to prevent frost from forming on the unit. Once the temperature increases, the unit starts operating in the previously selected mode again. |
| | The set temperature has been reached, at which point the unit turns off the compressor. The unit continues operating when the temperature fluctuates again. |
| The indoor unit emits white mist | In humid regions, a large temperature difference between the room's air and the conditioned air can cause white mist. |
| Both the indoor and outdoor units emit white mist | When the unit restarts in the HEAT mode (after defrosting), white mist may be emitted due to moisture generated from the defrosting process. |
| The indoor unit makes noises | A squeaking sound is heard when the system is OFF or in the COOL mode. The noise is also heard when the drain pump (optional) is operating. |
| | A squeaking sound may occur after running the unit in the HEAT mode due to expansion and contraction of the unit's plastic parts. |
| Both the indoor unit and outdoor unit make noises | Low hissing sound during operation: This is normal and is caused by refrigerant gas flowing through both the indoor and outdoor units. |
| | Low hissing sound when the system starts, has just stopped running, or is defrosting. This noise is normal and is caused by the refrigerant gas stopping or changing direction. |
| | Squeaking sound: Normal expansion and contraction of plastic and metal parts caused by temperature changes during operation can cause squeaking noises. |
| The outdoor unit makes noises | The unit makes different sounds based on the current operating mode. |
| Dust emits from either the indoor or outdoor unit | The unit may accumulate dust after extended periods of non-use. Dust can emit when the unit is turned on. This can be mitigated by covering the unit during long periods of inactivity. |
| The unit emits a bad odor | The unit may absorb odors from the environment (such as furniture, cooking, cigarettes, etc.) which will emit during operations. |
| | The unit's filters have become moldy and should be cleaned. |
| The outdoor unit fan does not operate | During operation, the fan speed is controlled to optimize product operation. |

NOTE: If an issue persists, contact a local dealer or your nearest customer service center. Provide them with a detailed description of the unit's malfunction as well as the unit's model number.

TROUBLESHOOTING (CONT)

When issues occur, please review the following common issues in Table 3 prior to contacting a service company.

Table 3 — Troubleshooting Tips

| Problem | Possible Causes | Solution |
|--------------------------------------|--|--|
| Poor Cooling Performance | Temperature setting may be higher than the ambient room temperature | Lower the temperature setting |
| | The heat exchanger on the indoor or outdoor unit is dirty | Clean the affected heat exchanger |
| | The air filter is dirty | Remove the filter and clean it according to instructions |
| | The air inlet or outlet of either unit is blocked. | Turn the unit to remove the obstruction and turn it back on |
| | Doors and windows are open | Ensure that all doors and windows are closed while operating the unit |
| | Excessive heat is generated by sunlight | Close windows and curtains during periods of high heat or bright sunshine |
| | There are too many heat sources in the room (people, computers, electronics, etc.) | Reduce the amount of heat sources |
| | Low refrigerant due to leak or long-term use | Check for leaks, re-seal if necessary and top off the refrigerant |
| The unit is not working | Power failure | Wait for the power to be restored |
| | The power is turned off | Turn on the power |
| | The fuse is burned out | Replace the fuse |
| | The unit's 3-minute protection has been activated | Wait three minutes after restarting the unit |
| | Timer is activated | Turn timer off |
| The unit starts and stops frequently | There is too much or too little refrigerant in the system | Check for leaks and recharge the system with refrigerant |
| | Incompressible gas or moisture has entered the system | Evacuate and recharge the system with refrigerant |
| | System circuit is blocked | Determine which circuit is blocked and replace the malfunctioning piece of equipment |
| | The compressor is broken | Replace the compressor |
| | The voltage is too high or too low | Install a manostat to regulate the voltage |
| Poor heating performance | The outdoor temperature is extremely low | Use an auxiliary heating device |
| | Cold air is entering through doors and windows | Ensure that all doors and windows are closed during use |
| | Low refrigerant due to leak or long-term use | Check for leaks, re-seal if necessary and top off refrigerant |

