



# COMPASS FLOOR MOUNT

Residential Condensing Gas Boiler

## INSTALLATION START-UP MAINTENANCE




For models:

NC085 / NC110

NC150 / NC199

NC110C / NC150C / NC199C

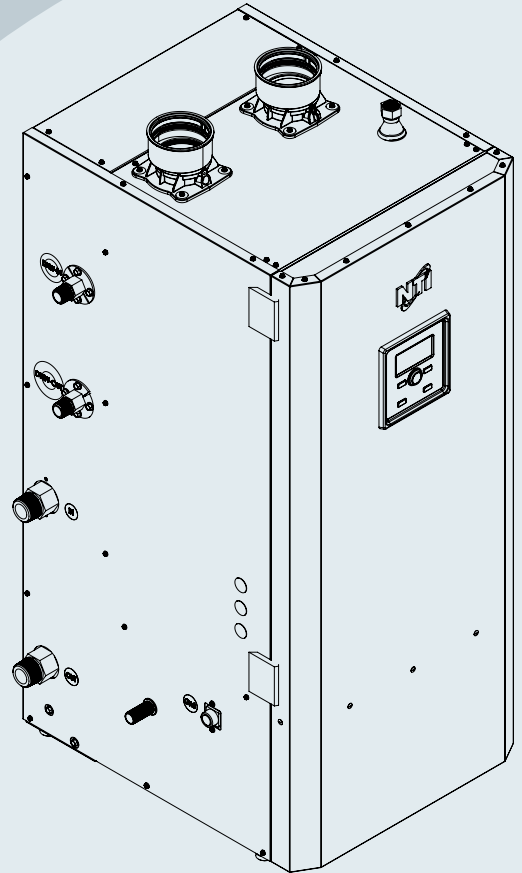

Heat Exchanger Bears the ASME "H" Stamp

### NOTICE

The manufacturer reserves the right to make product changes or updates without notice and will not be held liable for typographical errors in literature.

The surfaces of these products contacted by potable (consumable) water contain less than 0.25% lead by weight as required by the Safe Drinking Water Act, Section 1417.

### DANGER

**THIS MANUAL MUST ONLY BE USED BY A QUALIFIED INSTALLER / SERVICE TECHNICIAN. READ ALL INSTRUCTIONS IN THIS MANUAL BEFORE INSTALLING. PERFORM STEPS IN THE GIVEN ORDER. FAILURE TO DO SO COULD RESULT IN SUBSTANTIAL PROPERTY DAMAGE, SEVERE PERSONAL INJURY, OR DEATH.**

### WARNING

Improper installation, adjustment, alteration, service, or maintenance could void product warranty and cause property damage, severe personal injury, or death.

**California Proposition 65 Warning: This product contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.**

# ! WARNING

**WARNING:** If the information in these instructions is not followed exactly, a fire or explosion may result causing property damage, personal injury or death.

- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

## WHAT TO DO IF YOU SMELL GAS

- Do not try to light any appliance.
  - Do not touch any electrical switch; do not use any phone in your building.
  - Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
  - If you cannot reach your gas supplier, call the fire department.
  - Installation and service must be provided by a qualified installer, service agency or the gas supplier.
- Improper installation, adjustment, alteration, service, or maintenance can cause injury, property damage, or death. Refer to this manual. Installation and service must be performed by a qualified installer, service agency, or gas supplier.

## FOR YOUR SAFETY READ BEFORE OPERATING


**WARNING: If you do not follow these instructions exactly, a fire or explosion may result, causing property damage, personal injury or loss of life.**

- A.** This appliance does not have a pilot. It is equipped with an ignition device which automatically lights the burner. Do not try to light the burner by hand.
- B.** BEFORE OPERATING smell all around the appliance area for gas. Be sure to smell next to the floor because some gas is heavier than air and will settle on the floor.
- WHAT TO DO IF YOU SMELL GAS**
- Do not try to light any appliance
  - Do not touch any electric switch; do not use any phone in your building
  - Immediately call your gas supplier from a neighbor's phone. Follow the gas suppliers' instructions.
  - If you cannot reach your gas supplier, call the fire department.
- C.** Use only your hand to turn the gas control knob. Never use tools. If the handle will not turn by hand, don't try to repair it, call a qualified service technician. Force or attempted repair may result in a fire or explosion.
- D.** Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control which has been under water.


## OPERATING INSTRUCTIONS

1. STOP! Read the safety information above.
2. Set the thermostat to lowest setting.
3. Turn off all electric power to the appliance.
4. This appliance is equipped with an ignition device which automatically lights the burner. Do not try to light the burner by hand.
5. Remove front cover.
6. Turn gas shutoff valve to "off". Handle will be across the piping, do not force.
7. Wait five (5) minutes to clear out any gas. If you then smell gas, STOP! Follow "B" in the safety information above on this label. If you don't smell gas, go to next step.
8. Turn gas shutoff valve to "on". Handle will be in line with piping.
9. Install Front Cover.
10. Turn on all electric power to appliance.
11. Set thermostat to desired setting.
12. If the appliance will not operate, follow the instructions "To Turn Off Gas To Appliance" and call your service technician or gas supplier.

GAS VALVE  
ON

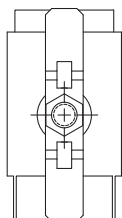

GAS VALVE  
OFF

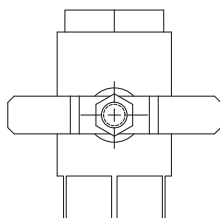

## TO TURN OFF GAS TO APPLIANCE

1. Set the thermostat to lowest setting.
2. Turn off all electric power to the appliance if service is to be performed.
3. Remove Front Cover.
4. Turn gas shutoff valve to "off". Handle will be across the piping. Do not force.
5. Install Front Cover.

LP-175 Rev 4 3-11-08

## SPECIAL ATTENTION BOXES

The following defined terms are used throughout this manual to bring attention to the presence of hazards of various risk levels or to important product information.

### ! DANGER

**DANGER** indicates an imminently hazardous situation which, if not avoided, will result in serious personal injury or death.

### ! WARNING

**WARNING** indicates a potentially hazardous situation which, if not avoided, could result in personal injury or death.

### ! CAUTION

**CAUTION** indicates a potentially hazardous situation which, if not avoided, may result in moderate or minor personal injury.


### CAUTION

**CAUTION** used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in property damage.

### NOTICE


**NOTICE** is used to address practices not related to personal injury.

**! DANGER**

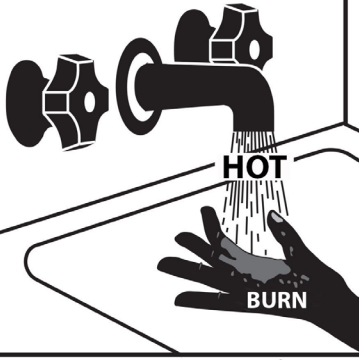

Water temperature over 125°F can cause severe burns instantly or death from scalds. Children, disabled and elderly are at highest risk of being scalded. See instruction manual before setting temperature at water heater. Feel water before bathing or showering. Temperature limiting valves are available, see manual.

**! DANGER**

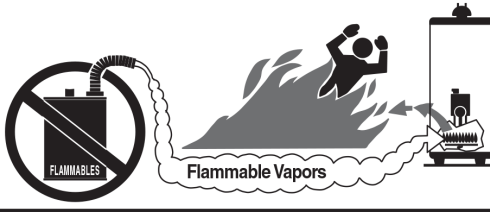

**! Vapors from flammable liquids will explode and catch fire causing death or severe burns.**  
Do not use or store flammable products such as gasoline, solvents or adhesives in the same room or area near the water heater.  
**Keep flammable products:**

1. far away from heater,
2. in approved containers,
3. tightly closed and
4. out of children's reach.

**Installation:**  
Do not install water heater where flammable products will be stored or used unless the main burner and pilot flames

Water heater has a main burner and pilot flame.  
**The pilot flame:**

1. which can come on at any time and
2. will ignite flammable vapors.

**Vapors:**

1. cannot be seen,
2. are heavier than air,
3. go a long way on the floor and
4. can be carried from other rooms to the pilot flame by air currents.

are at least 18" above the floor. This will reduce, but not eliminate, the risk of vapors being ignited by the main burner or pilot flame.

**Read and follow water heater warnings and instructions. If owners manual is missing, contact the retailer or manufacturer.**

## Foreword

This manual is intended to be used in conjunction with other literature provided with the boiler. This includes all related control information. It is important that this manual, all other documents included in this system, and additional publications including the *National Fuel Gas Code - ANSI Z223.1* in the United States and the *Natural Gas and Propane Installation Code - B149.1* in Canada (latest versions), be reviewed in their entirety before beginning any work.

Installation should be made in accordance with the regulations of the Authority Having Jurisdiction, local code authorities, and utility companies which pertain to this type of water heating equipment.

Authority Having Jurisdiction (AHJ) – The AHJ may be a federal, state, provincial, local government, or individual such as a fire chief, fire marshal, chief of a fire prevention bureau, labor department or health department, building official or electrical inspector, or others having statutory authority. In some circumstances, the property owner or his/her agent assumes the role, and at government installations, the commanding officer or departmental official may be the AHJ.

**NOTE:** The manufacturer reserves the right to modify product technical specifications and components without prior notice.

## For the Installer

This boiler must be installed by qualified and licensed personnel. The installer should be guided by the instructions furnished with the boiler, and by local codes and utility company requirements. In the absence of local codes, preference should be given to the *National Fuel Gas Code - ANSI Z223.1* in the United States and the *Natural Gas and Propane Installation Code - B149.1* in Canada (latest versions).

### Installations Must Comply With:

Local, state, provincial, and national codes, laws, regulations, and ordinances.

In the United States - The latest version of the *National Fuel Gas Code, ANSI Z223.1*, from American Gas Association Laboratories, 8501 East Pleasant Valley Road, Cleveland, OH 44131.

The latest version of the *National Electrical Code, NFPA No. 70*.

In Canada - The latest versions of the *Natural Gas and Propane Installation Code, CSA B149.1*, and the *Canadian Electrical Code, C22.1*, from CSA Group, 178 Rexdale Blvd, Toronto, Ontario, Canada M9W 1R3.

**NOTE:** The gas manifold and controls met safe lighting and other performance criteria when undergoing tests specified in *ANSI Z21.13* - latest edition.

### ! WARNING

#### CARBON MONOXIDE DETECTORS

The installer must verify that at least one carbon monoxide alarm has been installed within a residential living space or home following the alarm manufacturer's instructions and applicable local codes before putting the appliance into operation.

For each floor containing bedroom(s), a carbon monoxide detector and alarm shall be placed in the living area outside the bedrooms, as well as in the room that houses the heater. Detectors and alarms shall comply with NFPA 720 (latest edition). Failure to comply with these requirements could result in product damage, severe personal injury, or death.

## **WARNING**

**The hydronic supply and return connections of these products are for installation in closed loop systems ONLY!**

Use of this product in any manner other than described in this manual may result in premature product failure, substantial property damage, severe personal injury, or death. Damage or failure of this product (or the system in which it is installed) due to unauthorized use **IS NOT COVERED BY WARRANTY.**

## **NOTICE**

### **IMPORTANT**

In accordance with Section 325 (f) (3) of the Energy Policy and Conservation Act, NTI has provided this boiler with multiple features designed to save energy by reducing the boiler water temperature as heating load decreases.

These features include:

- A modulating combustion system that adjusts firing rate based on heat demand.
- Adjustment of boiler set point based on inferred heat load as determined by an outdoor sensor. The outdoor sensor is supplied with this boiler.
- This boiler does not include a standing pilot.
- This boiler is designed and shipped to assure the highest efficiency operation possible. Such high efficiency is achieved by limiting heating circuit water temperature to 140°F when there is no anticipated heat load, based upon the outdoor sensor and the Outdoor Reset Curve (sensor response curve) in the boiler software.
- This feature may be over-ridden as described below in specific installations:
- The boiler control is equipped with an outdoor sensor override for use with building management systems or in cascaded systems (for systems with total input of 300,000 BTU/hr or greater).

See statement below for an important notice on the use of the override.

### **IMPORTANT**

In accordance with Section 325 (f) (3) of the Energy Policy and Conservation Act, this boiler is equipped with a feature that saves energy by reducing the boiler water temperature as the heating load decreases. This feature is equipped with an override which is provided primarily to permit the use of an external energy management system that serves the same function. **THIS OVERRIDE MUST NOT BE USED UNLESS AT LEAST ONE OF THE FOLLOWING CONDITIONS IS TRUE:**

- An external energy management system is installed that reduces the boiler water temperature as the heating load decreases.
- This boiler is not used for space heating.
- This boiler is part of a modular or multiple boiler system having a total input of 300,000 BTU/hr or greater.

## **NOTICE**

ASME CSD-1, Section CW-400 requires the temperature controls of hot water heating boilers to

- a) be accepted by a nationally recognized testing agency to conform to UL 353,
- b) shutoff the fuel supply when the system water reaches a preset operating temperature,
- c) have a high temperature limit control that prevents the water temperature from exceeding the maximum allowable temperature by causing safety shutdown and lockout.

The temperature controls of this boiler have been accepted by a nationally recognized testing agency to conform to UL 353; they work to shutoff the fuel supply when the system water temperature reaches the preset operating temperature; and they cause a safety shutdown and lockout, requiring a manual reset to start, when the water temperature reaches 212°F.

## **DANGER**

An ASSE 1017 or ASSE 1070 temperature limiting or mixing valve is required in all combi boiler installations. Failure to install a temperature limiting or mixing valve will result in property damage, severe personal injury, or death due to scalds.

## Table of Contents

|   |            |  |  |
|---|------------|--|--|
| <b>Part 1 - General Safety Information</b>                              | <b>6</b>   |  |  |
| A. Operation and Installation Warnings                                  | 6          |  |  |
| B. Improper Combustion  | 7          |  |  |
| C. Gas  | 7          |  |  |
| D. When Servicing the Boiler  | 7          |  |  |
| E. Boiler System  | 7          |  |  |
| F. CH and DHW Loop Water Chemistry Requirements                         | 8          |  |  |
| G. Freeze Protection  | 8          |  |  |
| H. Water Temperature Adjustment and Scalding                            | 9          |  |  |
| I. High Elevation Installations   | 9          |  |  |
| <b>Part 2 - Before You Start</b>  | <b>10</b>  |  |  |
| A. What's in the Box  | 10         |  |  |
| B. Optional Equipment   | 11         |  |  |
| <b>Part 3 - Prepare the Boiler for Installation</b>                     | <b>12</b>  |  |  |
| A. Locating the Boiler  | 12         |  |  |
| B. Leveling   | 13         |  |  |
| C. Clearances for Service Access  | 13         |  |  |
| D. Installation Considerations  | 14         |  |  |
| E. Installation Safety Considerations                                   | 14         |  |  |
| F. Residential Garage and Closet Installations                          | 14         |  |  |
| G. Exhaust Vent and Intake Pipe   | 15         |  |  |
| 1. Direct Vent of Exhaust and Intake                                    | 15         |  |  |
| 2. Power Venting, Indoor Combustion Air in Confined or Unconfined Space | 15         |  |  |
| H. Carbon Monoxide Detectors  | 15         |  |  |
| I. Prevent Combustion Air Contamination                                 | 16         |  |  |
| J. Removing a Boiler from a Common Vent System                          | 16         |  |  |
| K. Technical Specifications   | 17         |  |  |
| <b>Part 4 - Water Piping</b>  | <b>20</b>  |  |  |
| A. General Plumbing Information   | 20         |  |  |
| B. Backflow Preventer   | 20         |  |  |
| C. Expansion Tank   | 20         |  |  |
| D. Piping the Boiler  | 21         |  |  |
| E. Internal Circulation Pump  | 24         |  |  |
| F. CH and DHW Pressure Relief Valves                                    | 24         |  |  |
| G. Air Elimination Device   | 25         |  |  |
| H. Low Water Cut-Off (Field Supplied)                                   | 25         |  |  |
| I. Applications*  | 25         |  |  |
| <b>Part 5 - Venting</b>   | <b>33</b>  |  |  |
| A. General  | 33         |  |  |
| B. Approved Materials for Exhaust Vent and Intake Pipe                  | 34         |  |  |
| C. Additional Requirements for Installation in Canada                   | 34         |  |  |
| D. Exhaust Vent and Intake Pipe Location                                | 35         |  |  |
| E. Exhaust Vent and Intake Pipe Sizing                                  | 36         |  |  |
| F. Tightening Boiler Collar to Exhaust Vent and Intake Pipe             | 36         |  |  |
| G. Exhaust Vent and Intake Pipe Installation                            | 37         |  |  |
| H. Applications   | 38         |  |  |
| 1. Direct Vent Installation of Exhaust and Intake                       | 38         |  |  |
| 2. Venting Through an Existing System                                   | 44         |  |  |
| 3. Power Venting, Indoor Combustion Air in Confined or Unconfined Space | 45         |  |  |
| <b>Part 6 - Installing the Condensate Drain</b>                         | <b>46</b>  |  |  |
| <b>Part 7 - Connecting Electrical Service</b>                           | <b>47</b>  |  |  |
| A. Wiring   | 47         |  |  |
| 1. Connecting Power for DHW & CH Pumps and Zone Outputs                 | 47         |  |  |
| 2. Low Voltage Wiring Connections                                       | 48         |  |  |
| 3. Room Thermostat Wiring Connections                                   | 49         |  |  |
| 4. Outdoor Sensor Connections   | 49         |  |  |
| 5. Aquastat (Default) and Tank Sensor (Optional) Connections            | 49         |  |  |
| B. Internal Wiring Details  | 50         |  |  |
| <b>Part 8 - Gas Connections</b>   | <b>54</b>  |  |  |
| A. Gas Pipe Sizing Tables   | 54         |  |  |
| 1. Gas Pipe Sizing  | 54         |  |  |
| 2. Natural Gas Pipe Sizing  | 54         |  |  |
| 3. LP (Liquid Propane) Gas Pipe Sizing                                  | 54         |  |  |
| B. Gas Connection Requirements  | 54         |  |  |
| C. Additional Precaution for Excess Flow Valve (EFV)                    | 55         |  |  |
| D. Checking Gas Pressure at the Boiler for Proper Operation             | 55         |  |  |
| <b>Part 9 - Controls</b>  | <b>57</b>  |  |  |
| A. Control Overview   | 57         |  |  |
| B. Display Overview   | 57         |  |  |
| C. Display Home Page  | 58         |  |  |
| D. Main Menu  | 59         |  |  |
| E. Setup Wizard   | 60         |  |  |
| F. Boiler Details   | 61         |  |  |
| G. User Menu  | 62         |  |  |
| H. Tech Menu  | 70         |  |  |
| I. Test Mode  | 85         |  |  |
| J.. Connectivity  | 86         |  |  |
| K. Diagnostics  | 87         |  |  |
| <b>Part 10 - Start-Up Preparation</b>                                   | <b>88</b>  |  |  |
| A. Check / Control Water Chemistry                                      | 88         |  |  |
| B. Check for Gas Leaks  | 88         |  |  |
| C. Freeze Protection (When Used)  | 88         |  |  |
| D. System Water Fill, Purge, and Test                                   | 89         |  |  |
| E. Purge Air from DHW System  | 89         |  |  |
| F. Check Thermostat Circuit(s)  | 89         |  |  |
| G. Condensate Removal   | 89         |  |  |
| <b>Part 11 - Start-Up</b>   | <b>90</b>  |  |  |
| A. First Ignition   | 91         |  |  |
| B. Combustion Checking Procedure  | 92         |  |  |
| C. Converting the Appliance from Natural Gas to Propane Operation       | 95         |  |  |
| <b>Part 12 - Installation Checklist</b>                                 | <b>96</b>  |  |  |
| <b>Part 13 - Troubleshooting</b>  | <b>98</b>  |  |  |
| A. Boiler Protection Devices  | 98         |  |  |
| 1. Blocking Error   | 98         |  |  |
| 2. Lockout Error  | 98         |  |  |
| 3. Malfunction Warning  | 98         |  |  |
| B. Boiler Error Codes   | 99         |  |  |
| <b>Part 14 - Maintenance</b>  | <b>112</b> |  |  |
| A. Procedures   | 112        |  |  |
| B. Maintenance That May be Performed by the User                        | 112        |  |  |
| C. Maintenance Only to be Performed by a Qualified Service Technician   | 113        |  |  |
| D. Replacing Components   | 116        |  |  |
| E. After Maintenance is Complete  | 119        |  |  |
| <b>Part 15 - Maintenance Report</b>                                     | <b>120</b> |  |  |
| <b>Part 16 - Shutdown</b>   | <b>121</b> |  |  |
| A. Shutdown Procedure   | 121        |  |  |
| B. Failure to Operate   | 121        |  |  |
| C. Important  | 121        |  |  |
| <b>Maintenance Notes</b>  | <b>122</b> |  |  |
| <b>Customer Installation Record Form</b>                                | <b>123</b> |  |  |

## Part 1 - General Safety Information

This boiler is approved for indoor installations only and is not intended for use as a pool heater. Clearance to combustible materials: 0" top, bottom, sides, and back. Boiler must have room for service: 18" front, 14" top, 12" bottom, 2" left and right sides and 0" back are minimum recommended service clearances. (A combustible door or removable panel is acceptable front clearance. A 3" minimum clearance must be provided from the boiler front cover to the removable panel or combustible door.) This boiler has been approved for closet installation and installation on combustible flooring. Do not install directly on carpeting. Install the boiler in a location where relief valve discharge or a leak will not result in damage to the surrounding area. If such a location is not available install an auxiliary catch pan. This appliance is rated Category IV (pressurized vent, likely to form condensate in the vent) and requires a special vent system designed for pressurized venting. **Use only Category IV vent systems.**

### WARNING

**Installer** - Read all instructions in this manual before installing. Perform steps in the given order.

**User** - This manual is for use only by a qualified service technician. Have this boiler serviced / inspected annually by a qualified service technician.

**FAILURE TO ADHERE TO THE GUIDELINES ON THIS PAGE CAN RESULT IN SUBSTANTIAL PROPERTY DAMAGE, SEVERE PERSONAL INJURY, OR DEATH.**

**NOTE:** Obey all local codes. Obtain all applicable permits before installing the boiler.

**NOTE:** Install all system components and piping in such a manner that does not reduce the performance of any fire rated assembly.

## A. Operation and Installation Warnings

To avoid serious injury or death, read, understand, and follow all of the precautions listed here.

### DANGER

Vapors from flammable liquids will explode and cause a fire, resulting in personal injury or death. The boiler has a burner that can come on at any time and ignite vapors. **DO NOT** use or store flammable liquids around the boiler.

Improper venting can cause a build-up of carbon monoxide. Breathing carbon monoxide can result in brain damage or death. **DO NOT** operate the boiler unless it is properly vented to the outside and has an adequate fresh air supply for safe operation. Inspect the exterior exhaust gas outlet port and fresh air inlet port on a regular basis to ensure they are functioning properly.

A concentration of carbon monoxide as small as .04% (400 parts per million) in the air can be fatal. When making high fire or low fire adjustments, CO levels must be monitored using a calibrated combustion analyzer such that a CO level of no more than 150 ppm is exceeded at any time during operation.

Adjusting the "low fire offset" or the "main flow restrictor" in small increments can result in a significant increase in CO concentration. To avoid serious injury or death, **DO NOT** make any adjustments to the gas valve without monitoring the exhaust gases with a fully functional and calibrated combustion analyzer.

**Failure to follow these instructions will result in property damage, severe personal injury, or death.**

### WARNING

This boiler must be installed by a qualified service technician. Improper installation and/or operation can cause a potentially hazardous situation, which if not avoided will void the warranty and could result in serious injury or death.

The manufacturer cannot anticipate every circumstance that might involve a potential hazard. Each installation has its own specialized characteristics, requirements, and possible hazards. Therefore, all possible incidents are not included in these warnings. Proper and safe installation, operation, and service are the responsibility of the qualified service technician.

Proper care of the boiler is the user's responsibility. Ensure the user carefully reads and understands the User's Information Manual before operating the boiler.

Make sure the user knows the location of the gas shut-off valve and how to operate it. Immediately close the gas shut-off valve if the appliance is subjected to fire, overheating, flood, physical damage, or any other damaging condition that might affect the operation of the unit. Have the appliance checked by a qualified service technician before resuming operation.

Do not power up the unit unless the gas and water supply valves are fully opened. Make sure the fresh air intake port and exhaust gas port are open and functional.

No one but a qualified service technician should attempt to install, service, or repair this boiler. There are no serviceable parts which can be changed by the user / owner.

**User / Owner:** Contact the original qualified service technician if the boiler needs repair / maintenance. If the original technician is unavailable, ask your gas supplier for a list of qualified service providers.

**DO NOT** store or place newspapers, laundry, or other combustible items near the appliance or the exterior exhaust gas outlet and/or fresh air inlet port.

The owner should inspect the system monthly for damage, water stains, signs of rust, corrosion, and exhaust vent and air intake blockage. If inspection of the unit shows signs of damage, the boiler should be shut off until the problem is repaired by a qualified technician.

After installation, all appliance safety devices should be tested.

The boiler is certified for indoor installations only. The boiler consists of gas ignition system components which must be protected from water (dripping, spraying, etc.) during operation and service. Carefully consider installation location and the placement of critical components (circulators, condensate neutralizers, etc.) before installing the boiler.

**DO NOT** allow children to operate this boiler. **DO NOT** use this boiler if it does not appear to be operating correctly. A qualified service technician should service and inspect the boiler annually.

**NOTE:** If the boiler is exposed to fire or water (or is any way damaged), do not operate. Immediately call a qualified service technician. Failure to follow this information could result in property damage, severe personal injury, or death.

**! WARNING**

**DO NOT USE THIS BOILER IF ANY PART HAS BEEN SUBMERGED IN WATER.** Immediately call a qualified service technician. The boiler **MUST BE** replaced if it has been submerged. Attempting to operate a boiler that has been submerged could create numerous harmful conditions, such as a potential gas leakage causing a fire and/or explosion, or the release of mold, bacteria, or other harmful particulates into the air. Operating a previously submerged boiler could result in property damage, severe personal injury, or death.  
**NOTE:** Boiler damage due to flood or submersion is considered an Act of God, and IS NOT covered under product warranty.

**DO NOT** alter or modify the appliance or appliance controls. Altering any NTI boiler with parts not manufactured by **NTI WILL INSTANTLY VOID** the boiler warranty and could result in property damage, personal injury, or death.

**CAUTION**

Due to the low water content of the boiler, improper sizing of the boiler with regard to heating system load will result in excessive cycling and accelerated component failure. **DO NOT** under or oversize the boiler to the system. Modular boiler installations greatly reduce the likelihood of boiler oversizing. **NTI DOES NOT warrant failures caused by improperly sized boiler applications.**

High heat sources (sources generating heat 100°F / 37°C or greater, such as stove pipes, space heaters, etc.) may damage plastic components of the boiler as well as plastic vent pipe materials. Such damages ARE NOT covered by warranty. It is recommended to keep a minimum clearance of 8" from high heat sources. Observe heat source manufacturer instructions, as well as local, state, provincial, and national codes, laws, regulations and ordinances when installing this boiler and related components near high heat sources.

Do not use this boiler for anything other than its intended purpose (as described in this manual). Doing so could result in property damage and WILL VOID product warranty.

**NOTICE**

This appliance is equipped with a three prong plug. It should only be plugged directly into a properly grounded three prong receptacle. **DO NOT** remove the ground plug from the plug.

This appliance provides an overheat shutdown limit. In the event the appliance water temperature exceeds the setpoint of the control limit, the cutoff will trip and the appliance will shut down. Certain local codes require additional temperature limits. In addition, certain types of systems may operate at temperatures below the minimum setpoint of the limit provided with the appliance. Contact the manufacturer for additional overheat controls.

**B. Improper Combustion**

**! WARNING**

Do not obstruct the flow of combustion and ventilating air. Adequate air is necessary for safe operation. Failure to keep the exhaust vent and combustion air intake clear of ice, snow, or other debris could result in property damage, serious personal injury, or death.

**C. Gas**

Should overheating occur or gas supply fail to shut off, turn off the manual gas control valve to the boiler.

**D. When Servicing the Boiler**

**! WARNING**

Be sure to disconnect electrical power before opening boiler cabinet or performing service. Label all wires while performing service to ensure proper re-wiring of the appliance. Wiring errors can cause improper or dangerous operation. Failure to do so could result in electrical shock, improper boiler or system operation, property damage, serious personal injury, or death.

- To avoid electric shock, disconnect electrical supply before performing maintenance.
- To avoid severe burns, allow boiler and associated equipment to cool before servicing.
- Do not use petroleum-based cleaning or sealing compounds in boiler system. Gaskets and seals in the system may be damaged, possibly resulting in substantial property damage.
- Do not use "homemade cures" or "boiler patent medicines". Substantial property damage, damage to boiler, and/or serious personal injury may result.
- Always verify proper operation after servicing the boiler.

**NOTE:** When inquiring about service or troubleshooting, reference the model and serial numbers from the boiler rating label.

**E. Boiler System**

- Thoroughly flush the system (without the boiler connected) to remove sediment. The high-efficiency heat exchanger can be damaged by build-up or corrosion due to sediment. The manufacturer recommends a suction strainer in this type of system.
- Do not use petroleum-based cleaning or sealing compounds in boiler system. Gaskets and seals in the system may be damaged, possibly resulting in substantial property damage.
- Do not use "homemade cures" or "boiler patent medicines". Substantial property damage, damage to the boiler, and/or serious personal injury may result.
- Continual fresh make-up water will reduce boiler life. Mineral buildup in the heat exchanger reduces heat transfer, overheats the stainless steel heat exchanger, and causes failure. Addition of oxygen from make-up water can cause internal corrosion in system components. Leaks in the boiler or piping must be repaired at once.

**NOTE:** DO NOT add cold make up water to the system when the boiler is hot. Thermal shock can potentially cause cracks in the heat exchanger. Such damage IS NOT covered by warranty.

## Part 1 - General Safety Information

### F. CH and DHW Loop Water Chemistry Requirements

#### CAUTION

Chemical imbalance of the water supply may affect efficiency and cause severe damage to the boiler and associated equipment. Water quality must be professionally analyzed to determine whether it is necessary to treat the water. Various solutions are available to adjust water quality. Adverse water quality will affect the reliability of the system. In addition, operating temperatures above 135°F will accelerate the build-up of lime scale and possibly shorten boiler service life. Failure of a boiler due to lime scale build-up, low pH, or other chemical imbalance IS NOT covered by the warranty.

The water must be potable, free of corrosive chemicals, sand, dirt, and other contaminants. It is up to the installer to ensure the water does not contain corrosive chemicals or elements that can damage the heat exchanger. Potable water is defined as drinkable water supplied from utility or well water in compliance with EPA secondary maximum contaminant levels (40 CFR Part 143.3). If the water contains contaminants higher than outlined by the EPA, water treatment is recommended and additional, more frequent maintenance may be required. See Table 1.

If you suspect that your water is contaminated in any way, discontinue use of the appliance and contact an authorized technician or licensed professional.

#### CH Loop Total Water Hardness Specifications

| Contaminant    | Maximum Allowable Level       |
|----------------|-------------------------------|
| Total Hardness | 120 mg/l<br>(7 grains/gallon) |

#### DHW Loop Total Water Hardness Specifications

| Contaminant                                       | Maximum Allowable Level        |
|---|--------------------------------|
| Total Hardness<br>(Below 140°F water temperature) | 200 mg/l<br>(12 grains/gallon) |
| Total Hardness<br>(Above 140°F water temperature) | 120 mg/l<br>(7 grains/gallon)  |

#### CH and DHW Loop Water Quality Specifications

| Contaminant                                 | Maximum Allowable Level |
|---|-------------------------|
| Aluminum                                    | 0.05 to 0.2 mg/l or PPM |
| Chloride                                    | 100 mg/l or PPM         |
| Copper                                      | 1 mg/l or PPM           |
| Iron  | 0.3 mg/l or PPM         |
| Manganese                                   | 0.05 mg/l or PPM        |
| pH  | 6.5 - 8.5               |
| Sulfate                                     | 205 mg/l or PPM         |
| Total Dissolved Solids (TDS)                | 500 mg/l or PPM         |
| Zinc  | 5 mg/l or PPM           |
| Dissolved Carbon Dioxide (CO <sub>2</sub> ) | 15 mg/l or PPM          |

Table 1 - Water Quality Specifications

### G. Freeze Protection

#### CAUTION

Consider piping and installation when determining boiler location. Damages resulting from incorrect installation or from use of products not approved by the manufacturer ARE NOT covered by warranty. Failure of the boiler due to freeze related damage IS NOT covered by product warranty.

#### ! WARNING

NEVER use any toxic chemical, including automotive, standard glycol antifreeze, or ethylene glycol made for hydronic (non-potable) systems. These chemicals can attack gaskets and seals in water systems, are poisonous if consumed, and can cause personal injury or death.

#### NOTE: Loops Serving Indirect Water Heaters (IWHs)

Glycol used in IWH loops should be food grade propylene glycol, FDA rated as "generally recognized as safe" (GRAS). If using a glycol / potable water mix, the water chemistry must meet the requirements in this manual. The glycol content of the liquid must not exceed 50%, unless the manufacturer specifies a different ratio. Glycol should be checked periodically to prevent it from becoming acidic. Please refer to guidelines provided by the glycol manufacturer regarding glycol maintenance.

**NOTE:** Glycol not recognized as GRAS may only be used in closed loop CH applications.


**NOTE:** NTI DOES NOT WARRANT THE BOILER AGAINST FREEZE-RELATED DAMAGE.

The boiler control is equipped with freeze protection that activates based on internal water temperature. See the following table for details on freeze protection operation.

**NOTE:** Freeze protection will not be active if the boiler loses power.

#### FREEZE PROTECTION OPERATION

##### STAGE 1

|                  |   |
|------------------|---|
| <b>Condition</b> | The water temperature detected by probes NTC1 or NTC2 ranges between 39°F (4°C) and 46°F (8°C).   |
| <b>Events</b>    | <ul style="list-style-type: none"> <li>The internal pump operates at high speed.</li> <li>The 3-Way Valve alternately switches positions - 1 minute on heating mode to 1 minute on DHW mode</li> <li>The display shows the  icon.</li> </ul> |
| <b>Time</b>      | Until the NTC1 and NTC2 temperature is greater than or equal to 46°F (8°C)  |
|                  | If after 20 minutes the conditions described in Stage 1 are still present, the boiler proceeds to Stage 2.  |

##### STAGE 2


|                  |  |
|------------------|--|
| <b>Condition</b> | The water temperature detected by probes NTC1 or NTC2 is less than 39°F (4°C).   |
| <b>Events</b>    | <ul style="list-style-type: none"> <li>The burner turns on at minimum power.</li> <li>The 3-Way Valve is positioned on DHW and switches every 30 seconds between CH and DHW.</li> <li>When the temperature is greater than or equal to 104°F (40°C) the burner will turn off. The boiler will maintain the temperature between 95°F (35°C) and 104°F (40°C) for 45 minutes.</li> <li>After 45 minutes there will be 2 minutes of post heating circulation.</li> <li>If the temperature falls below 46°F (8°C) within 150 minutes the burner will immediately power on again.</li> <li>The display shows the  icon.</li> </ul> |
| <b>Time</b>      | Until the NTC1 temperature is greater than or equal to 104°F (40°C)  |

Table 2 - Freeze Protection Detail



**CAUTION**

On **NC085 / NC110 / NC150 / NC199 Models ONLY**  
 If the boiler is to be used only in Heating Mode (not connected to an indirect water heater), the electrical connection of the 3-way valve motor **MUST BE DISCONNECTED** while the boiler is operating in central heating mode. This will lock the valve motor in central heating mode and ensure freeze protection operates properly. Failure to disconnect the valve may disable boiler freeze protection and result in property damage.

**NOTICE**

The use of glycol may reduce the usable BTU output of the boiler, requiring the unit to be "down-fired" by limiting the maximum operating capacity and/or water temperature. For applications requiring glycol concentrations greater than 30%, such as snow melt systems, it is recommended to use a brazed plate heat exchanger to separate the glycol mixture from the boiler water. See below.

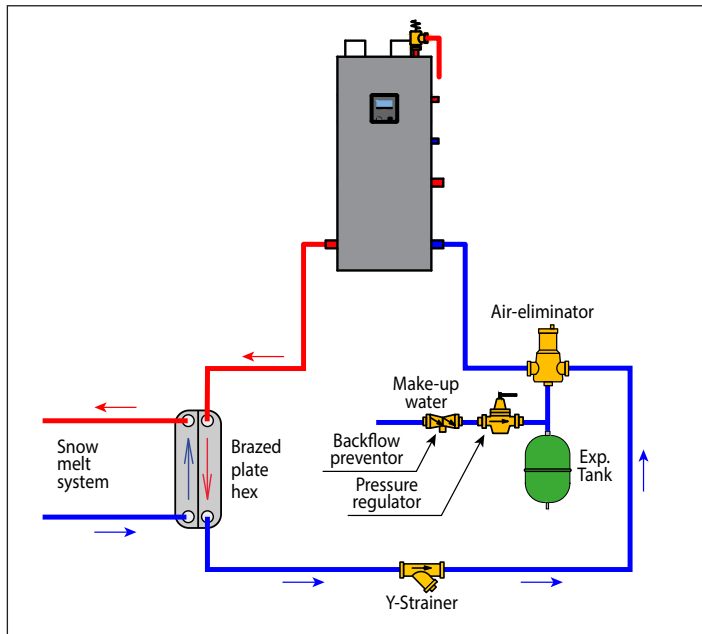


Figure 1 - Snow Melt Application

**H. Water Temperature Adjustment and Scalding**

This boiler can deliver scalding water. Be careful whenever using hot water to avoid scalding injury. Certain appliances such as dishwashers and automatic clothes washers may require increased water temperatures. By setting the thermostat on this boiler to obtain the increased water temperature required by these appliances you may create the potential for scald injury. To protect against injury, install a mixing valve in the water system. This valve will reduce point of use discharge temperatures by mixing cold and hot water in branch supply lines. Such valves are available from your local plumbing supplier.

**! DANGER**

An ASSE 1017 or ASSE 1070 temperature limiting or mixing valve is required in all combi boiler installations. Failure to install a temperature limiting or mixing valve will result in property damage, severe personal injury, or death due to scalds.

Table 3 details the relationship of water temperature and time with regard to scald injury and may be used as a guide in determining the safest water temperature for your applications.

**! DANGER**

Water temperature over 125°F can cause severe burns instantly or death from scalds. Children, disabled and elderly are at highest risk of being scalded. See instruction manual before setting temperature at water heater. Feel water before bathing or showering. Temperature limiting valves are available, see manual.

**Approximate Time / Temperature Relationships in Scalds**

|       |                     |
|-------|---------------------|
| 120°F | More than 5 minutes |
| 125°F | 1 1/2 to 2 minutes  |
| 130°F | About 30 seconds    |
| 135°F | About 10 seconds    |
| 140°F | Less than 5 seconds |
| 145°F | Less than 3 seconds |
| 150°F | About 1 1/2 seconds |
| 155°F | About 1 second      |

**Table 3 - Time and Temperature Relationship in Scalds**

**I. High Elevation Installations**

This boiler is designed to operate at its maximum listed capacity in installations located at 0 - 2000 ft above Sea Level. Since the density of air decreases as elevation increases, maximum specified capacity should be de-rated for elevations above 2000 ft (610 m) in accordance with the table below.

| Elevations                                | 2001 ft (610 m) | 3000 ft (914 m) | 4000 ft (1219 m) | 4500 ft (1372 m) | 5000 ft (1524 m) |
|---|-----------------|-----------------|------------------|------------------|------------------|
| <b>In Canada<sup>1</sup>, de-rate by:</b> | 10%             | 10%             | 10%              | 10%              | may vary         |
| <b>In USA<sup>2</sup>, de-rate by:</b>    | -               | 12%             | 16%              | 18%              | 20%              |

**NOTES:**

<sup>1</sup>Canada: Elevations between 2000 - 4500 ft (610 - 1372 m), de-rate by 10%. Consult local authorities for de-rating for elevations above 4500 ft (1372 m).  
<sup>2</sup>USA: If elevation is above 2000 ft (610 m), de-rate capacity by 4% for every 1000 ft (305 m).

**Table 4 - De-Rate % for High Elevations**

**! WARNING**

Combustion - At elevations above 2000 ft, the combustion of the boiler must be checked with a calibrated combustion analyzer to ensure safe and reliable operation. **It is the Installer's responsibility to check and adjust the combustion in accordance with this manual.** Failure to follow these instructions may result in property damage, serious personal injury, or death.

### NOTICE

**UNCRATING THE BOILER** - Any claims for damage or shortage in shipment must be filed immediately against the transportation company by the consignee.

Remove the boiler from the packaging. Remove the accessory box from the boiler. Take care to place the boiler in a safe location prior to installation to prevent damage to the mechanical connections.

### A. What's in the Box

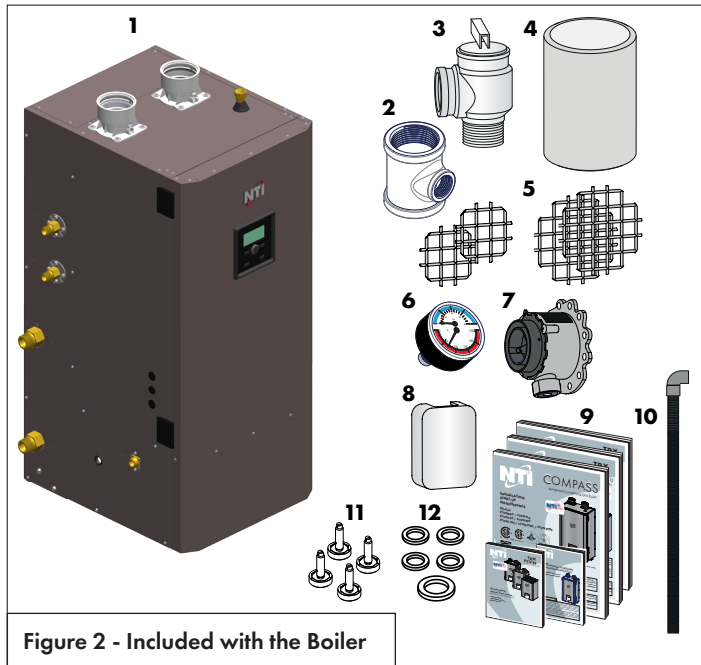


Figure 2 - Included with the Boiler

Included components:

| Nr. | Quantity | Description                         |
|-----|----------|-------------------------------------|
| 1   | 1        | Condensing Gas Boiler               |
| 2   | 1        | Tee, 1 1/4" x 1/2" (for Tridicator) |
| 3   | 1        | CH Pressure Relief Valve            |
| 4   | 1        | 3" CPVC Pipe, 5" Long               |
| 5   | 2 + 2    | 2" Vent Screen + 3" Vent Screen     |
| 6   | 1        | Tridicator                          |
| 7   | 1        | LP Gas Conversion Kit               |
| 8   | 1        | Outdoor Sensor Kit                  |
| 9   | 1        | Installation Manual (this document) |
|     | 1        | Cascade Installation Manual         |
|     | 1        | Installation Quick Start Guide      |
|     | 1        | User's Information Manual           |
|     | 1        | LP Conversion Instructions          |
|     | 1        | Warranty                            |
|     | 1        | Connectivity Quick Start Guide      |
| 10  | 1        | Condensate Drain Hose               |
| 11  | 4        | Leveling Legs                       |
| 12  | 2        | Gasket, GAS (3/4", yellow)          |
|     | 2        | Gasket, DHW (3/4")                  |
|     | 1        | Gasket, CH (1 1/4")                 |

### How the Boiler Operates

**COMPASS** condensing technology intelligently delivers hydronic heating while maximizing efficiency. Outlined below are system features and operation:

#### Stainless Steel Heat Exchanger

The highly efficient stainless steel heat exchanger is designed to extract all available heat from the supply line before it is exhausted.

#### Modulating Combustion System

The combustion system modulates the output of the burner during operation to match system demand and achieve the control set point while in operation. The set point can change by internal or external signals to enhance the overall performance of the system.

#### Control

The integrated control system monitors the system and regulates fan speed to control boiler output. This allows the boiler to deliver only the amount of heat energy required and nothing more.

The control can be set to monitor outdoor temperature through an outdoor sensor to regulate boiler set point. The system can be further enhanced by installing an indirect water heater to provide domestic hot water.

The control can regulate the output of multiple boilers through its cascade system function. The cascade system is capable of connecting up to eight boilers together in such a way that they function as one boiler system. This allows for greater turn down ratios and provides systematic control of the multiple boilers in an installation to minimize downtime and maximize efficiency.

The cascade system works by establishing one boiler as the master and the other connected boilers as followers. The master boiler requires a sensor to provide feedback on set point temperature in order to adjust heating input from the connected boilers. Each cascaded boiler will have its own pump to provide maximum flow and control heat exchanger flow rate.

#### Text Display and Operational Display Icons

The display allows the user to change system parameters and monitor system outputs.

#### Gas Valve

Senses suction from the blower, allowing gas to flow only if powered and combustion air is flowing.

#### Integrated Venturi

Controls air and gas flow into the burner.

#### Burner

The high grade stainless steel burner uses premixed air and gas to provide a wide range of firing rates.

#### Spark Ignition

The burner is ignited by applying high voltage through the system spark electrode. The spark from the electrode ignites mixed gas off of the burner.

#### Supply Water Temperature Sensor

This sensor monitors the boiler outlet water temperature (System Supply). The control adjusts boiler firing rate so the supply temperature will match the boiler set point.

#### Return Water Temperature Sensor

This sensor monitors boiler return water temperature (System Return).

#### Flue Sensor

Monitors flue temperature and adjusts firing rate.

#### Temperature and Pressure Gauge

Allows the user to monitor system temperature and pressure.

#### Electrical field connections with terminal strips

The electrical cover allows easy access to the clearly marked line voltage and low voltage terminal strips to facilitate wiring the boiler.

**Condensate Collection System**

This boiler is a high efficiency appliance and will produce condensate. The condensate collection system has a float switch which monitors condensate level and prevents condensate from backing up into the combustion system. Inside the collection system is a built in trap which seals the combustion system from the connected drain. This condensate should be neutralized to avoid damage to the drainage system or piping.

**Outdoor Sensor**

Monitors outdoor temperature and adjusts unit set point to provide greater efficiency.

**0-10 Volt Input / 4-20 mA Input (with Optional Analog Clip-In Board, part # 3319457)**

Allows the installer to connect a BMS (Building Management System) to control the boiler.

**Condensate Trap**

The condensate trap prevents condensate and heat exchanger exhaust from backing up into the boiler.

**Pump Service Mode**

Allows manual operation of pumps to commission system and check pump operation.

**Internal By-Pass Valve**

Protects the boiler from damage in low flow conditions.

**Internal ECM Pump**

The internal ECM Pump uses less electricity than standard pumps, providing high performance operation.

**DHW Temperature Sensor**

Monitors DHW outlet temperature. The control adjusts boiler firing rate to match the DHW supply temperature to the set point.

**DHW Flow Meter**

Monitors DHW flow rate.


**B. Optional Equipment**

Optional equipment available from NTI (and Part #):

- System Sensor(\*) (6000084010)  
 (\*) One system sensor is required when cascading multiple boilers; it is not compatible with a single boiler.
- 3" PVC Concentric Vent Kit (6000084634)
- 3" PVC Low Profile Vent Kit (6000084357)
- 2" PVC Low Profile Vent Kit (6000085062)
- Tank Sensor (6000084632)
- NTI Room Sensor (3319455)
- Building Management Clip-in, for 0-10V/4-20mA external control (3319457)
- N-Link 3-Zone Control (3260184)

## Part 3 - Prepare the Boiler for Installation

### CAUTION

**COLD WEATHER HANDLING** - If the boiler has been stored in a very cold location (BELOW 0°F) before installation, handle with care until the components come to room temperature. Failure to do so could result in damage to the boiler.

Carefully consider installation when determining boiler location. Please read the entire manual before attempting installation. Failure to properly take factors such as boiler venting, piping, condensate removal, and wiring into account before installation could result in wasted time, money, and possible property damage and personal injury.

### A. Locating the Boiler

### ! WARNING

**This boiler is certified for indoor use only. DO NOT INSTALL OUTDOORS. Outdoor installations ARE NOT covered by warranty.** Failure to install the boiler indoors could result in property damage, severe personal injury, or death.

Incorrect ambient conditions can lead to damage to the heating system and put safe operation at risk. Ensure that the installation location adheres to the information included in this manual. Failure to do so could result in property damage, serious personal injury, or death. Failure of boiler or components due to incorrect operating conditions IS NOT covered by product warranty.

This boiler must be installed upright in the vertical position as described in this manual. DO NOT attempt to install this boiler in any other orientation. Doing so will result in improper boiler operation and property damage, and could result in serious personal injury or death.

#### 1. Installation Area (Mechanical Room) Operating Conditions

- Ensure ambient temperatures are higher than 32°F / 0°C and lower than 104°F / 40°C
- Prevent the air from becoming contaminated by the products, places, and conditions listed in this manual
- Avoid continuously high levels of humidity
- Never close existing ventilation openings
- Ensure a minimum 1" clearance around hot water and exhaust vent pipes
- **NOTE:** To prevent condensing in the fan, it is recommended to avoid prolonged exposure to temperatures below 45°F

### ! WARNING

This boiler has a condensate disposal system that may freeze if exposed to sustained temperatures below 32°F. Precautions should be taken to protect the condensate trap and drain lines from sustained freezing conditions.

Circulators suitable for DHW applications must be used.

Failure to take precautions could result in property damage, severe personal injury, or death.

### CAUTION

The service life of the boiler's exposed metallic surfaces, such as the casing, as well as internal surfaces, such as the heat exchanger, are directly influenced by proximity to damp and salty marine environments. In such areas higher concentration levels of chlorides from sea spray coupled with relative humidity can lead to degradation of boiler components. In these environments, boilers must not be installed using direct vent systems which draw outdoor air for combustion. Such boilers must be installed using room air for combustion. Indoor air will have a much lower relative humidity, and hence potential corrosion will be minimized.

Failure of the boiler or components due to incorrect operating conditions IS NOT covered by product warranty.

#### 2. Check for nearby connections to:

- System water piping
- Venting connections
- Gas supply piping
- Electrical power
- Condensate drain

#### 3. Check area around boiler. Remove any combustible materials, gasoline, and other flammable liquids.

### ! WARNING

Failure to keep the boiler area clear and free of combustible materials, liquids, and vapors can result in substantial property damage, severe personal injury, or death.

#### 4. Gas control system components must be protected from dripping water during operation and service.

- #### 5. If the boiler is to replace an existing boiler, check for and correct any existing system problems, such as:
- System leaks
  - Location that could cause the system and boiler to freeze and leak
  - Incorrectly sized expansion tank

### CAUTION

Always take future maintenance into consideration when locating the boiler. If the boiler is located in an installation location with limited clearances, it may be necessary to remove the boiler from the space to perform maintenance. Failure to consider maintenance when determining installation location could result in property damage.

#### 6. Clean and flush system when reinstalling a boiler.

### ! WARNING

Do not introduce toxic chemicals, such as antifreeze or appliance treatments, into any piping meant for potable water purposes.

Do not connect DHW connections to any heating systems or components that have been previously used for nonpotable applications.

Ensure that all piping and components connected to the appliance are suitable for potable water applications.

Failure to follow these instructions could result in serious personal injury or death.



**NOTE:** When installing in a zero clearance location, it may not be possible to read or view some product labeling. It is recommended to make note of the boiler model and serial number.

**NOTE:** A combustible door or removable panel is acceptable front clearance.

**B. Leveling**

**CAUTION**

The boiler must be installed level for the condensate to properly flow out of the collection system. Failure to do so will result in improper appliance operation.

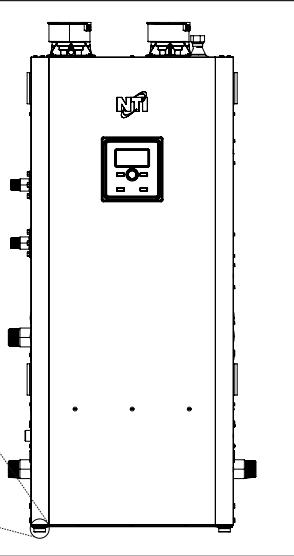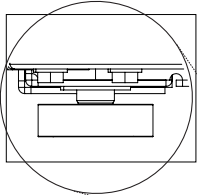


**Figure 3 - Proper leveling**

- This appliance must be installed indoors, in a dry location free of dust and debris, on stable flooring.
- To account for sloped concrete floors or other surface imperfections, four (4) threaded leveling feet are provided in the Installation Kit Box, to be installed into a threaded insert at each corner of the appliance.
  - » Using a block of scrap wood to prevent accidental personal injury, gently tilt the appliance just enough to thread two (2) of the leveling feet.
  - » Remove the block and repeat on the opposite side.
  - » Once all four (4) feet are installed, use a bubble level (or other guide) to determine when the boiler is level, and adjust the feet as necessary.
- This may require two or more attempts, depending on flooring conditions.

**C. Clearances for Service Access**

**NOTE:** If you do not provide the minimum clearances shown in Figure 4 and Table 5 it might not be possible to service the boiler without removing it from the space.

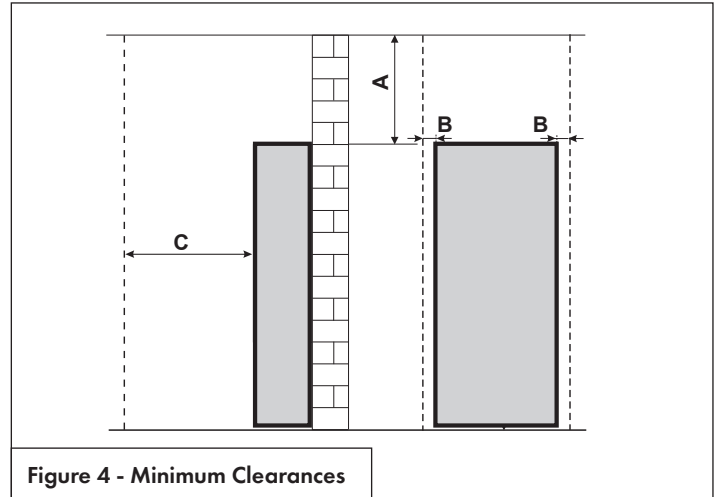

**Figure 4 - Minimum Clearances**

| Dimension            | Description                 | Clearance    |
|----------------------|-----------------------------|--------------|
| <b>A</b>             | Top                         | 24" (610 mm) |
| <b>B</b>             | Side(s) with Connections    | 24" (610 mm) |
|                      | Side(s) without Connections | 6" (152 mm)  |
| <b>C</b>             | Front                       | 18" (457 mm) |
| <b>Not Displayed</b> | Back                        | 0" (0 mm)    |

**Table 5 - Minimum Installation and Service Clearances**

**NOTE:** For closet installations, a combustible door or removable panel is acceptable front clearance. A 3" minimum clearance must be provided from the appliance front cover to the removable panel or combustible door.

**Minimum Clearances from Combustible Materials**

- Hot water pipes - at least 1" from combustible materials
- Exhaust vent pipe - at least 1" from combustible materials

**CAUTION**

All boilers eventually leak. Locate the boiler where any leakage from the relief valve, related piping, tank, or connections will not result in damage to surrounding areas or lower floors of the building. Any boiler should be installed in such a manner that if it should leak the resulting flow of water will not cause damage to the area in which it is installed. If the boiler is installed in a location where a leak could cause damage, it is required to provide containment measures. Such measures include but are not limited to: a properly sized drain pan installed beneath the boiler and piped to an open drain line, or installing the boiler on a concrete floor pitched to a free flowing drain. Failure to provide containment measures is the sole responsibility of the owner and/or installer. Leakage damages ARE NOT covered by warranty.

In addition, water leak detection devices and automatic water shutoff valves are readily available at plumbing supply houses.

**IT IS HIGHLY RECOMMENDED BY THE MANUFACTURER TO INSTALL WATER LEAK DETECTION DEVICES AND AUTOMATIC SHUTOFF VALVES IN ANY BOILER INSTALLATION WHERE A LEAKAGE OF WATER COULD RESULT IN PROPERTY DAMAGES.**

## Part 3 - Prepare the Boiler for Installation

### Boiler Area Ventilation Air Openings - Closet Installations

If the boiler is installed in a closet or alcove the boiler area/room must be ventilated.

**EXCEPTION:** If the boiler area/room has a volume of 150 ft<sup>3</sup> or greater, ventilation of the boiler area/room is not required.

Each ventilation air opening must meet the minimum requirements of 1 in<sup>2</sup> per 1000 BTU/hr., but not less than 100 in<sup>2</sup>. The lower ventilation opening must be located within 6 in. of the floor, while the upper opening must be located 6 in. from the top of the space.

### **! WARNING**

If the boiler area has a volume less than 150 ft<sup>3</sup>, it is considered a Closet or Alcove. In the US/Canada, PVC vent pipe and fittings SHALL NOT BE USED within the closet or alcove. Only approved CPVC, Polypropylene, or Stainless Steel vent pipe and fittings may be used. See Table 11 for a list of approved materials. Under all circumstances proper ventilation must be provided.

The space must be provided with correctly sized combustion/ventilation air openings for all other appliances located in the space with the boiler. For power venting installations using room air for combustion, refer to the boiler venting section, this manual, for descriptions of confined and unconfined spaces. Do not install the boiler in an attic. The boiler cover must be securely fastened to prevent the boiler from drawing air from the boiler room. This is particularly important if the boiler is in a room with other appliances. Failure to comply with the above warnings could result in substantial property damage, severe personal injury, or death.

### Alcove Installations

Alcove installations have the same minimum dimensions as closet installations, except the installation must be completely open to the room at a distance no greater than 18 in. (457 mm) from the front of the boiler and the room must be at least three (3) times the size of the alcove. Provided these conditions are met, the boiler requires no extra ventilation air openings to the space. If these conditions are not met, follow the requirements for Closet Installations.

### **D. Installation Considerations**

If flooding is possible, elevate the boiler to prevent floodwater from reaching the boiler.

Ensure the boiler is installed in a location that minimizes the risk of water damage due to leaking valves, pumps, unions, etc.

### **! WARNING**

Ensure that the structure of the installation location is sufficient to support the full installed weight of the boiler, including water content of the heat exchanger and related piping and components. If the mounting location cannot support a minimum of 150 lbs. (68 kg), it is recommended to locate the boiler in a mounting location that can support the minimum weight. Failure to ensure the structure of the installation location is structurally sound before installation of the boiler and properly mount the boiler can result in structural failure, substantial property damage, severe personal injury, or death.

### **! WARNING**

The manufacturer cannot anticipate all installation conditions. These instructions and included parts may not apply to wall-mounting the appliance at your installation location. The appliance must be properly and securely mounted by a qualified installer according to installation conditions, the technical specifications of the appliance, and to meet AHJ / building code requirements. All applicable permits must be obtained before installing the appliance. Failure to follow these instructions could result in property damage, severe personal injury, or death. Any damages resulting from improper installation are not covered by product warranty.

### **CAUTION**

If the boiler is not installed upright, vertically plumb, and level, improper and unsatisfactory operation may occur, causing excessive condensation build-up, nuisance fault codes, and unnecessary maintenance.

### **E. Installation Safety Considerations**

### **! WARNING**

This boiler is too heavy for one person to lift. It is highly recommended to install the boiler with two people. Use caution as to not drop the boiler, which could damage the boiler and cause property damage and/or severe personal injury. Verify that the boiler is properly and securely mounted before leaving unsupervised. Failure to comply with the above and properly mount the boiler could result in substantial property damage, severe personal injury, or death.

### **F. Residential Garage and Closet Installations**

### **CAUTION**

Check with your local Authority Having Jurisdiction for requirements when installing boiler in a garage or closet. Please read the entire manual before attempting installation. Failure to properly take factors such as boiler venting, piping, condensate removal, and wiring into account before installation could result in wasted time, money, and possible property damage and personal injury.

#### Precautions

If the boiler is located in a residential garage, per ANSI Z223.1:

- Mount the bottom of the boiler a minimum of 18" above the floor of the garage to ensure the burner and ignition devices are well off the floor.
- Locate or protect the boiler so it cannot be damaged by a moving vehicle.

### **! WARNING**

The space must be provided with correctly sized combustion/ventilation air openings for all other appliances located in the space with the boiler. For power venting installations using room air for combustion, refer to the boiler venting section, this manual, for descriptions of confined and unconfined spaces. Do not install the boiler in an attic. Failure to comply with these warnings could result in substantial property damage, severe personal injury, or death.

**G. Exhaust Vent and Intake Pipe**

The boiler is rated ANSI Z21.13 Category IV (pressurized vent, likely to form condensate in the vent) and requires a special vent system designed for pressurized venting.

**NOTE: The venting options described here (and further detailed in the Venting section, this manual) are the lone venting options approved for this boiler. Failure to vent the boiler in accordance with the provided venting instructions will void the warranty.**

**! DANGER**

Failure to vent the boiler properly will result in serious personal injury or death.

**! WARNING**

Do not attempt to vent this boiler by any means other than those described in this manual. Doing so will void the warranty and may result in severe personal injury or death.

Vents must be properly supported. Boiler exhaust and intake connections are not designed to carry heavy weight. Vent support brackets must be within 1' of the boiler and the balance at 4' intervals. Boiler must be readily accessible for visual inspection for first 3' from the boiler. Failure to properly support vents could result in property damage, severe personal injury, or death.

The exhaust discharged by this boiler may be very hot. Avoid touching or other direct contact with the exhaust gases of the vent termination assembly. Doing so could result in severe personal injury or death.

**1. Direct Vent of Exhaust and Intake**

If installing a direct vent option, combustion air must be drawn from the outdoors directly into the boiler intake and exhaust must terminate outdoors. There are three basic direct vent options detailed in this manual:

1. Side Wall Venting,
2. Roof Venting.
3. Unbalanced Venting.

Be sure to locate the boiler such that the exhaust vent and intake piping can be routed through the building and properly terminated. Different vent terminals can be used to simplify and eliminate multiple penetrations in the building structure (see Optional Equipment in Venting Section). The exhaust vent and intake piping lengths, routing, and termination methods must all comply with the methods and limits given in the Venting Section, this manual. When installing a combustion air intake from outdoors, care must be taken to utilize uncontaminated combustion air. **To prevent combustion air contamination, see Table 6.**

**2. Power Venting, Indoor Combustion Air in Confined or Unconfined Space**

This boiler requires fresh, uncontaminated air for safe operation and must be installed in a mechanical room where there is adequate combustion and ventilating air. **NOTE: To prevent combustion air contamination, see Table 6.**

Combustion air from the indoor space can be used if the space has adequate area or when air is provided through a duct or louver to supply sufficient combustion air based on the boiler input. Never obstruct the supply of combustion air to the boiler. If the boiler is installed in areas where indoor air is contaminated (see Table 6) it is imperative that the boiler be installed as direct vent so that all combustion air is taken directly from the outdoors into the boiler intake connection.

**Unconfined space** is space with volume greater than 50 cubic feet per 1,000 BTU/hr (4.8 cubic meters per kW) of the total input rating of all fuel-burning appliances installed in that space. Rooms connected directly to this space through openings not furnished with doors are considered part of the space. See Venting Section for details.

**Confined space** is space with volume less than 50 cubic feet per 1,000 BTU/hr (4.8 cubic meters per kW) of the total input rating of all fuel-burning appliances installed in that space. Rooms connected directly to this space through openings not furnished with doors are considered part of the space.

When drawing combustion air from inside a conventionally constructed building to a confined space, such space should be provided with two permanent openings: one located 6" (15 cm) below the space ceiling, the other 6" (15cm) above the space floor. Each opening should have a free area of one square inch per 1,000 BTU/hr (22cm<sup>2</sup>/kW) of the total input of all appliances in the space, but not less than 100 square inches (645cm<sup>2</sup>). If the confined space is within a building of tight construction, air for combustion must be obtained from the outdoors as outlined in the Venting section of this manual.

**CAUTION**

When drawing combustion air from the outside into the mechanical room, care must be taken to provide adequate freeze protection.

**! WARNING**

Failure to provide an adequate supply of fresh combustion air can cause poisonous flue gases to enter the living space, resulting in severe personal injury or death. To prevent combustion air contamination, see Table 6.

**H. Carbon Monoxide Detectors**

The installer must verify that at least one carbon monoxide detector has been installed within a residential living space or home following the alarm manufacturer's instructions and applicable local codes before putting the appliance into operation.

**In the Commonwealth of Massachusetts and as Required by State and Local Codes:**

Installation of Carbon Monoxide Detectors: At the time of installation or replacement of the vented gas fueled appliance, the installing plumber or gas fitter shall observe that a hard wired carbon monoxide detector with an alarm and battery back-up is installed on the floor level where the gas appliance is installed, unless the appliance is located in a detached, uninhabitable structure separate from the dwelling, building, or structure used in whole or in part for residential purposes.

In addition, the installing plumber or gas fitter shall observe that a hard wired carbon monoxide detector with an alarm and battery back-up is installed on each additional level of the dwelling, building, or structure served by the vented gas appliance. It shall be the responsibility of the property owner to secure the service of qualified licensed professionals for the installation of hard wired carbon monoxide detectors.

- a. In the event that the vented gas fueled appliance is installed in a crawl space or attic, the hard wired carbon monoxide detector with alarm and battery back-up shall be installed on the next adjacent floor level.
- b. In the event that these requirements cannot be met at the time of completion of installation, the owner shall have a period of thirty (30) days to comply with the above requirements; provided, however, that during said thirty (30) day period, a battery operated carbon monoxide detector with an alarm shall be installed.

## Part 3 - Prepare the Boiler for Installation

### ! WARNING

Do not attempt to vent this appliance by any means other than those described in this manual. Doing so will void the warranty and may result in severe personal injury or death.

Approved Carbon Monoxide Detectors: Each carbon monoxide detector as required in accordance with the above provisions shall comply with NFPA 70 and be ANSI/UL 2034 listed and IAS certified.

### I. Prevent Combustion Air Contamination

Install intake air piping for the boiler as described in the Venting Section, this manual. Do not terminate exhaust in locations that can allow contamination of intake air.

### ! WARNING

Ensure that the intake air will not contain any of the contaminants in Table 6. Contaminated air will damage the boiler, resulting in possible substantial property damage, severe personal injury, or death. For example, do not pipe intake air near a swimming pool or laundry facilities. These areas always contain contaminants.

| Products to Avoid   | Areas Likely to Have Contaminants               |
|---|---|
| Spray cans containing fluorocarbons                               | Dry cleaning / laundry areas and establishments |
| Permanent wave solutions  | Swimming pools                                  |
| Chlorinated waxes / cleaners                                      | Metal fabrication plants                        |
| Chlorine-based swimming pool chemicals                            | Beauty shops                                    |
| Calcium chloride used for thawing                                 | Refrigeration repair shops                      |
| Sodium chloride used for water softening                          | Photo processing plants                         |
| Refrigerant leaks   | Auto body shops                                 |
| Paint or varnish removers   | Plastic manufacturing plants                    |
| Hydrochloric or Muriatic acid                                     | Furniture refinishing areas and establishments  |
| Cements and glues   | New building construction                       |
| Antistatic fabric softeners used in clothes dryers                | Remodeling areas                                |
| Chlorine-type bleaches, laundry detergents, and cleaning solvents | Garages and workshops                           |
| Adhesives used to fasten building products                        |   |

Table 6 - Products and Areas Likely to Have Contaminants

**NOTE: DAMAGE TO THE BOILER CAUSED BY EXPOSURE TO CORROSIVE VAPORS IS NOT COVERED BY WARRANTY.**  
(Refer to the limited warranty for complete terms and conditions.)

## J. Removing a Boiler from a Common Vent System

### ! DANGER

Do not install the boiler into a common vent with any other appliance. This will cause flue gas spillage or appliance malfunction, resulting in possible substantial property damage, severe personal injury, or death.

### ! WARNING


Failure to follow all instructions can result in flue gas spillage and carbon monoxide emissions, causing severe personal injury or death.

When removing an existing boiler, follow the steps below.

1. Seal any unused openings in the common venting system.
2. Visually inspect the venting system for proper size and horizontal pitch to determine if there is blockage, leakage, corrosion, or other deficiencies that could cause an unsafe condition.
3. If practical, close all building doors, windows, and doors between the space in which the boiler remains connected to the common venting system and other spaces in the building. Turn on clothes dryers and any appliances not connected to the common venting system. Turn on any exhaust fans, such as range hoods and bathroom exhausts, at maximum speed. Do not operate a summer exhaust fan. Close all fireplace dampers.
4. Place in operation the appliance being inspected. Follow the lighting instructions. Adjust the thermostat so the appliance will operate continuously.
5. Test for spillage at the draft hood relief opening after 5 minutes of main burner operation. Use the flame of a match or candle or smoke from a cigarette.
6. After it has been determined that each appliance remaining connected to the common venting system properly vents when tested as outlined, return doors, windows, exhaust fans, fireplace dampers, and any other gas burning appliances to their previous condition of use.
7. Any improper operation of the common venting system should be corrected to conform to the National Fuel Gas Code, ANSI Z223.1. When resizing any portion of the common venting system, the system should approach the minimum size as determined using the appropriate tables in Appendix G of ANSI Z223.1.

**! WARNING**

**Breathing Hazard - Carbon Monoxide Gas**



- Do not operate heater if flood damaged.
- Install vent system in accordance with local codes and manufacturers installation instructions.
- Do not obstruct heater air intake or exhaust. Support all vent piping per manufacturers installation instructions.
- Do not place chemical vapor emitting products near unit.
- According to NFPA 720, carbon monoxide detectors should be installed outside each sleeping area.
- Never operate the heater unless it is vented to the outdoors.
- Analyze the entire vent system to make sure that condensate will not become trapped in a section of vent pipe and therefore reduce the open cross sectional area of the vent.

**Breathing carbon monoxide can cause brain damage or death.**  
**Always read and understand instruction manual.**

Figure 5 - CO Warning Label



**K. Technical Specifications**

| Model  |                       | NC085  | NC110            | NC150            | NC199            | NC110C           | NC150C           | NC199C           |
|--|-----------------------|--|------------------|------------------|------------------|------------------|------------------|------------------|
| Type   |                       | System   | System           | System           | System           | Combi            | Combi            | Combi            |
| Installation                                       |                       | Indoor, Floor Mounted, Fully Condensing  |                  |                  |                  |                  |                  |                  |
| Minimum / Maximum Input (Btu/Hr) <sup>1</sup>      |                       | 8,500 / 85,000   | 11,000 / 110,000 | 15,000 / 150,000 | 19,900 / 199,000 | 11,000 / 110,000 | 15,000 / 150,000 | 19,900 / 199,000 |
| DOE AFUE <sup>2</sup> (%)                          |                       | 96   | 95               | 95               | 95               | 95               | 95               | 95               |
| Heating Capacity <sup>1,2</sup> (MBH)              |                       | 79   | 101              | 138              | 184              | 101              | 138              | 184              |
| Net AHRI Rating, Water (MBH) <sup>2</sup>          |                       | 69   | 88               | 120              | 160              | 88               | 120              | 160              |
| Hot Water Capacity                                 | 35°F Rise             | N/A  | N/A              | N/A              | N/A              | 5.8              | 7.9              | 10.5             |
|  | 45°F Rise             |  |                  |                  |                  | 4.5              | 6.1              | 8.2              |
|  | 77°F Rise             |  |                  |                  |                  | 2.6              | 3.6              | 4.8              |
| Flue System  |                       | Category IV, Sealed Combustion Direct Vent, Power Vent   |                  |                  |                  |                  |                  |                  |
| Minimum - Maximum Exhaust Vent Run <sup>3</sup>    |                       | 2" (6 - 100 feet)   3" (6 - 150 feet)  |                  |                  |                  |                  |                  |                  |
| Minimum - Maximum Intake Air Pipe Run <sup>3</sup> |                       | 2" (0 - 100 feet)   3" (0 - 150 feet)  |                  |                  |                  |                  |                  |                  |
| Approved Exhaust Vent Materials <sup>3</sup>       |                       | PVC, CPVC, PP, Stainless Steel   |                  |                  |                  |                  |                  |                  |
| Shipping Weight (lbs)                              |                       | 110  | 110              | 120              | 131              | 110              | 121              | 132              |
| Gas Supply Pressure                                | NG                    | 3.5" to 10.5" WC   |                  |                  |                  |                  |                  |                  |
|  | LP                    | 8" to 13" WC   |                  |                  |                  |                  |                  |                  |
| Power Supply                                       |                       | 120V, 60 Hz, less than 12A   |                  |                  |                  |                  |                  |                  |
| General Operating Conditions                       |                       | Ambient Temperature Range: 33 – 104°F (0.6 – 40°C)<br>Product Approvals and Requirements: ANSI Z21.13 / CSA 4.9  |                  |                  |                  |                  |                  |                  |
| Ignition System                                    |                       | Direct Electronic Spark Ignition / Flame Rectification   |                  |                  |                  |                  |                  |                  |
| Burner System                                      |                       | Premixed Fuel Modulation / Stainless Steel Burner  |                  |                  |                  |                  |                  |                  |
| Gas Valve System                                   |                       | Air Ratio Valve  |                  |                  |                  |                  |                  |                  |
| Dimensions (in Inches)                             | W                     | 19.75  |                  |                  |                  |                  |                  |                  |
|  | H                     | 38.25  |                  |                  |                  |                  |                  |                  |
|  | D                     | 17   | 18.5             | 17               | 18.5             | 17               | 18.5             | 18.5             |
| Approx. Full Boiler Weight (lbs)                   |                       | 107  | 107              | 122              | 139.5            | 107              | 128.5            | 140.5            |
| Boiler Water Content (Gallons)                     |                       | 1.4  | 1.4              | 2.0              | 2.8              | 1.5              | 2.1              | 2.8              |
| Boiler Setpoint Temperature Range                  |                       | 68 – 179°F   |                  |                  |                  |                  |                  |                  |
| DHW Indirect Setpoint Temperature Range            |                       | 104 – 149°F  |                  |                  |                  |                  |                  |                  |
| DHW Setpoint Range (Combi Models)                  |                       | 97 – 149°F   |                  |                  |                  |                  |                  |                  |
| Water Pressure (PSI)                               | Heat Exchanger MAWP   | 50   |                  |                  |                  |                  |                  |                  |
|  | Pressure Relief Valve | 30   |                  |                  |                  |                  |                  |                  |
|  | DHW Max Pressure      | N/A  | N/A              | N/A              | N/A              | 150              | 150              | 150              |
| Control Panel / Main Controller                    |                       | AristonThermo LCD Display / AristonThermo GALEVO2 Control  |                  |                  |                  |                  |                  |                  |
| Connection Sizes                                   | CH Supply / Return    | 1 1/4" Male NPT  |                  |                  |                  |                  |                  |                  |
|  | DHW Inlet / Outlet    | 3/4" Male NPT  |                  |                  |                  |                  |                  |                  |
|  | Gas Inlet             | 3/4" Male NPT  |                  |                  |                  |                  |                  |                  |
| Materials  | Cabinet               | Painted Steel  |                  |                  |                  |                  |                  |                  |
|  | Heat Exchanger        | SA-240-543932 Stainless Steel Water Tube   |                  |                  |                  |                  |                  |                  |
| Safety Devices                                     |                       | Flame Rectifier Probe, Temperature Limit Control (190°F), Water Pressure Switch (Min. 8 PSI), Freeze Protection, Blocked Condensate Pressure Switch, Condensate Trap, Flue Temperature High Limit Sensor (210°F), Blocked Vent Pressure Switch |                  |                  |                  |                  |                  |                  |

**Table 7 - Technical Specifications**

**NOTES:**


<sup>1</sup> Listed Input and Output Ratings are at minimum vent lengths at an altitude of 0 - 2000 ft. Numbers will be lower with longer venting and/or altitudes greater than 2000 ft.

<sup>2</sup> Ratings based on standard test procedures prescribed by the US Department of Energy.

<sup>3</sup> The COMPASS requires a special venting system. Use only the vent materials and methods detailed in these installation instructions.

## Part 3 - Prepare the Boiler for Installation

### Components

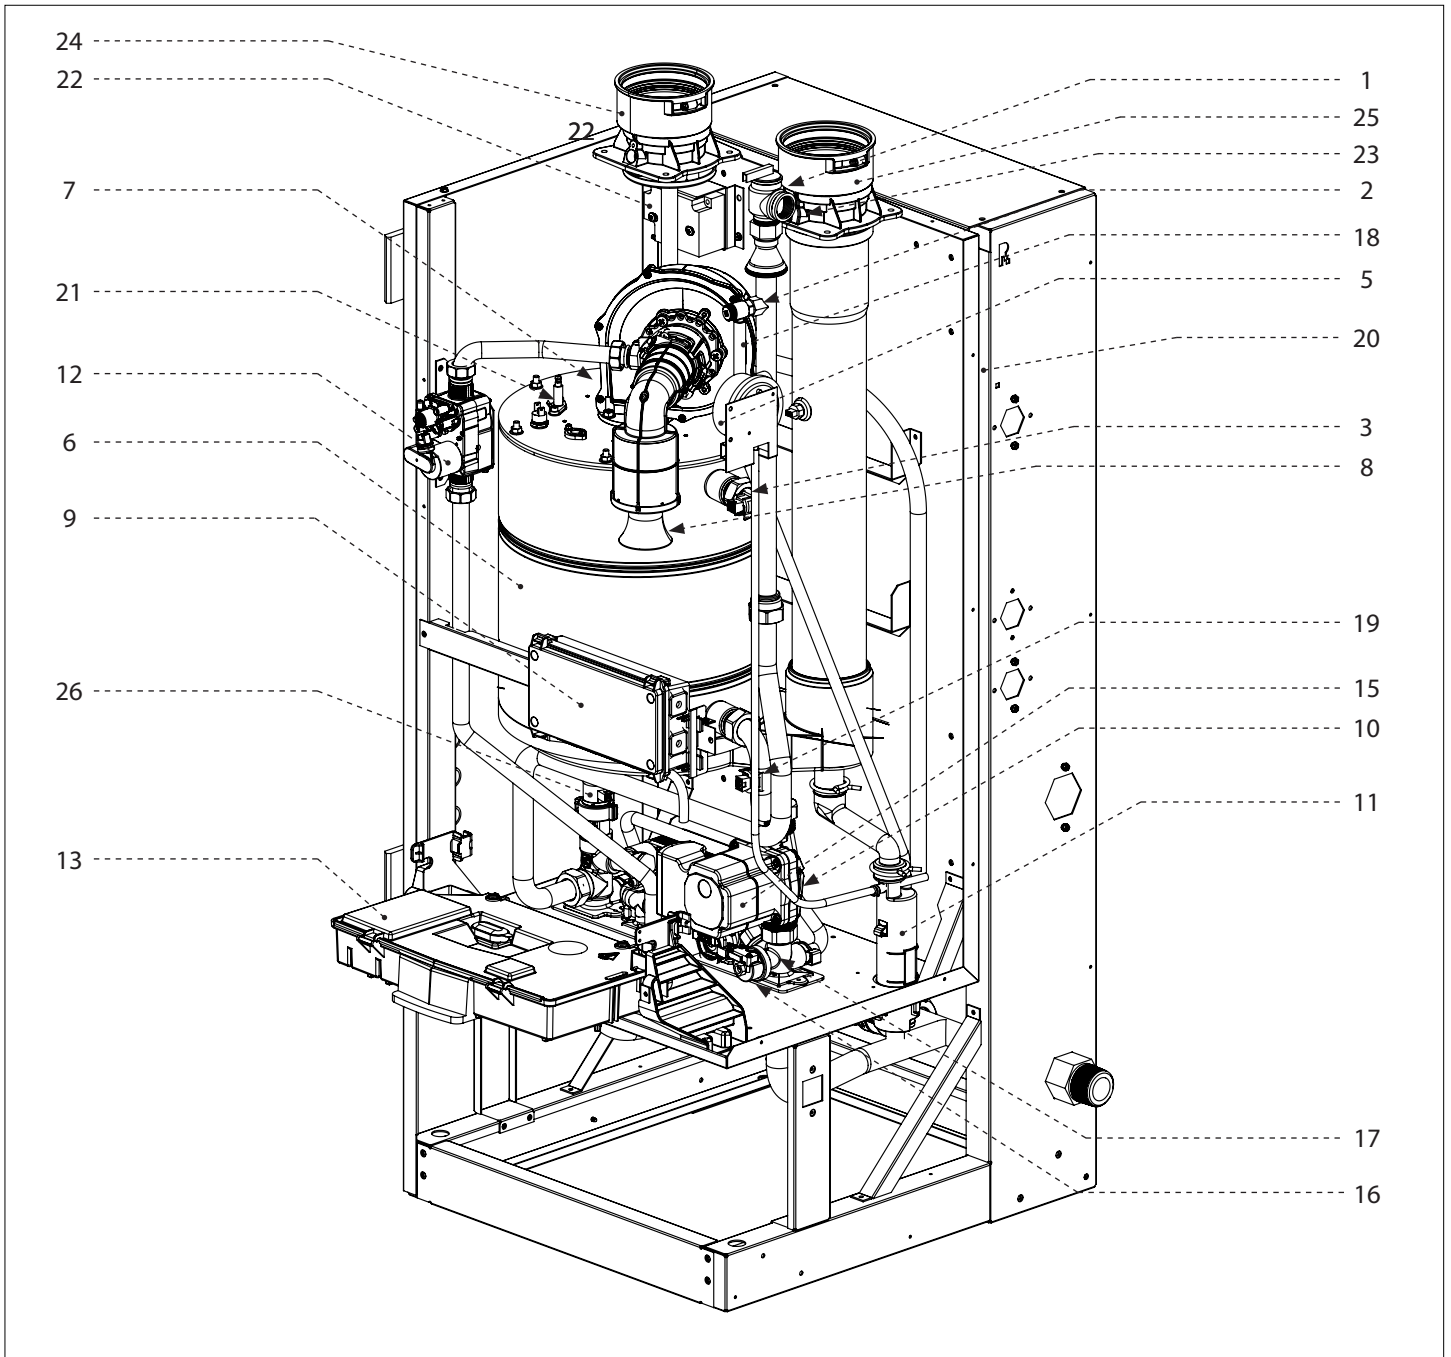

- |     |  |     |                                     |
|-----|--|-----|-------------------------------------|
| 1.  | Pressure relief valve                  | 15. | Circulation Pump                    |
| 2.  | Air purge valve                        | 16. | DHW Flow Sensor (Combi Models Only) |
| 3.  | Boiler outlet temperature sensor       | 17. | Water pressure switch               |
| 4.  | Air pressure switch                    | 18. | Modulating Fan                      |
| 5.  | Flue gas temperature sensor            | 19. | Boiler inlet temperature sensor     |
| 6.  | Main heat exchanger                    | 20. | Frame                               |
| 7.  | Flame detection electrode              | 21. | Ignition electrode                  |
| 8.  | Silencer                               | 22. | Spark generator                     |
| 9.  | Junction box                           | 23. | Combustion Analysis Test Point      |
| 10. | DHW Heat Exchanger (Combi Models Only) | 24. | Air intake connection               |
| 11. | Condensate trap                        | 25. | Exhaust vent connection             |
| 12. | Gas valve                              | 26. | Diverter valve                      |
| 13. | Control panel                          |     |                                     |

Figure 6 - Component Locations and Descriptions

Dimensions

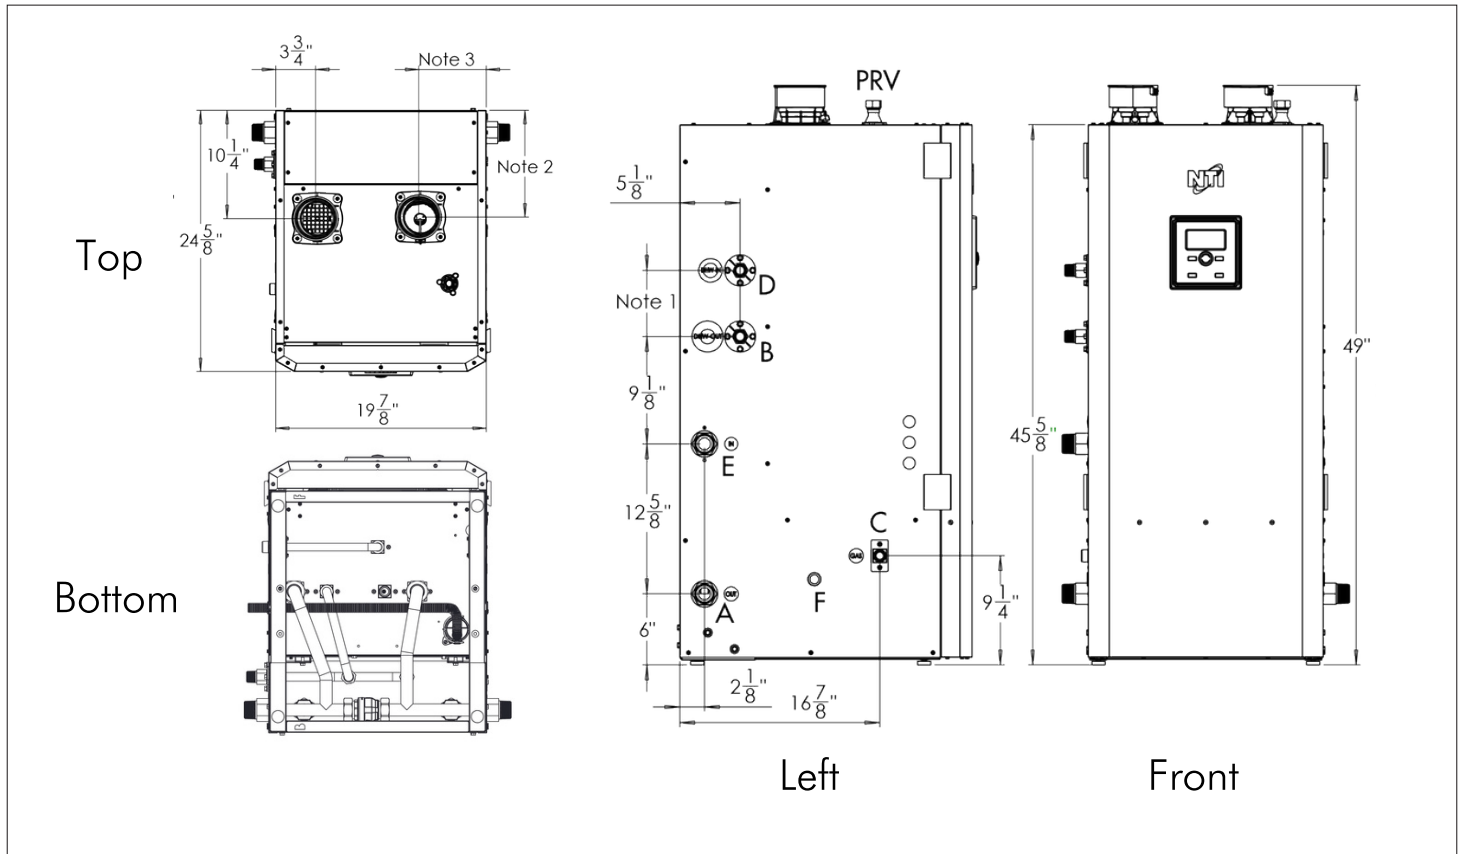


Figure 7 - Boiler Dimensions (shown in Factory Default: Left-hand Piping Configuration) - NOTE: All dimensions are approximate

|                                     |  |
|-------------------------------------|--|
| <b>A</b>                            | Central Heating Supply                     |
| <b>B</b>                            | Supply to Indirect Water Heater; *DHW Out  |
| <b>C</b>                            | Gas Inlet                                  |
| <b>D</b>                            | Return from Indirect Water Heater; *DHW In |
| <b>E</b>                            | Central Heating Return                     |
| <b>F</b>                            | Condensate Drain                           |
| <b>PRV</b>                          | Pressure Relief Valve                      |
| NOTE 1                              | Combi: 8 3/4"   System: 55/8"              |
| NOTE 2                              | NC085-110: 11"   NC150-199: 10 1/4"        |
| NOTE 3                              | NC085-110: 6"   NC150-199: 63/8"           |
| <b>Table 8 - Boiler Connections</b> |  |

\*for Combi versions

**! WARNING**

Failure to follow the instructions in this section WILL VOID the warranty and may result in property damage, severe personal injury, or death.

The National Standard Plumbing Code, the National Plumbing Code of Canada, and the Uniform Plumbing Code limit heat transfer fluid pressure to less than the minimum working pressure of the potable water system up to 30 PSI maximum. In addition, the heat transfer fluid must be water or another non-toxic fluid having a toxicity of Class 1, as listed in Clinical Toxicology of Commercial Products, 5th Edition. Failure to follow this warning could result in property damage, severe personal injury, or death.

**CAUTION**

Do not apply a torch within 12" of the boiler. If sweat connections are used, sweat tubing to the adapter before fitting adapter to the water connections on the boiler. Damages due to improper installation practices ARE NOT covered by warranty.

Galvanized steel fittings must not be used in any system loop with this space heating or combi boiler. Dielectric unions must not be used on the DHW loop of a combi boiler. Doing so WILL VOID the warranty. Use only copper, brass, stainless steel, or black iron (CH loop ONLY) fittings.

Plumbing of this product should only be done by a qualified, licensed plumber in accordance with all local plumbing codes. The boiler may be connected to an indirect water heater to supply domestic hot water. NTI offers indirect water heaters in a wide range of gallon sizes in stainless steel construction.

**A. General Plumbing Information**

**CAUTION**

The building piping system must meet or exceed the piping requirements in this manual.

Use two wrenches when tightening water piping at boiler. Use one wrench to prevent the boiler return or supply line from turning. Failure to prevent piping connections from turning could cause damage to boiler components.

The boiler control module uses temperature sensors to provide both high limit protection and modulating temperature control. The control module may also provide low water protection by sensing the water level in the heat exchanger. Some codes/jurisdictions may require additional external controls.

The water connections must be installed in accordance with all local and national plumbing codes, or any applicable standard with prevails.

- Pipe material must be suitable to meet local codes and industry standards.
- The pipe must be cleaned and without blemish before any connections are made.
- The size of the DHW pipes should be 3/4" diameter, and the CH pipes should be 1-1/4" diameter.
- Isolation (shut-off valves) should be used on both the CH and DHW loops to ease future servicing.
- All piping should be insulated.

- If the Combi Boiler is installed with a backflow preventer in the DHW cold water supply line, means shall be provided to control thermal expansion. Contact the water supplier or a local plumbing inspector on how to control this situation.

It is recommended to install a sweat shut-off valve and a union in the return and supply piping to ease future servicing. If there is a backflow preventer or any type of a no return valve in the system, install an additional tee here suitable for an expansion tank.

**NOTE:** The addition of a high temperature limiting device is important if the boiler is to be connected to a domestic hot water system.

**B. Backflow Preventer**

Use a backflow preventer specifically designed for hydronic boiler installations. This valve should be installed on the cold water fill supply line per local codes.

**C. Expansion Tank**

**Expansion Tank and Make-Up Water**

1. Ensure that the expansion tank is designed and sized to correctly handle boiler and system water volume and temperature.

**! WARNING**

Expansion tanks must be sized according to total system volume. This includes all length of pipe, all fixtures, boilers, etc. Failure to properly size for system expansion could result in wasted time, money, possible property damage, serious personal injury, or death.

**CAUTION**

Undersized expansion tanks cause system water to be lost from the relief valve, causing make-up water to be added. Eventual boiler failure can result due to excessive make-up water addition. SUCH FAILURE IS NOT COVERED BY WARRANTY.

DO NOT install automatic air vents on closed type expansion tank systems. Air must remain in the system and return to the tank to provide an air cushion. An automatic air vent would cause air to leave the system, resulting in improper operation of the expansion tank.

| Model       | Heat Exchanger Volume (Gallons) |
|-------------|---------------------------------|
| NC085, 110  | 1.4                             |
| NC110C      | 1.5                             |
| NC150       | 2.0                             |
| NC150C      | 2.1                             |
| NC199, 199C | 2.8                             |

**Table 9 - Heat Exchanger Water Volume  
(To Aid in Expansion Tank Sizing)**

2. The expansion tank must be located as shown in Applications, this manual, or following recognized design methods. See expansion tank manufacturer's instructions for details.
3. Connect the expansion tank to the air separator only if the air separator is on the suction side of the circulator. Always install the system fill connection at the same point as the expansion tank connection to the system.
4. Most chilled water systems are piped using a closed type expansion tank.

**DIAPHRAGM (OR BLADDER) EXPANSION TANK**

Always install an automatic air vent on top of the air separator to remove residual air from the system.

### D. Piping the Boiler

**NOTE:** Observe the minimum 1" clearance around all uninsulated hot water pipes when openings around pipes are not protected by non-combustible materials.

### CAUTION

Non-Combi Models should not be operated as a direct potable hot water heater. Only Combi Models should be used to directly heat hot water.

Use at least the MINIMUM pipe size for all appliance loop piping. This is to avoid the possibility of inadequate flow through the appliance. Using less than the required minimum pipe size and piping could result in system problems, property damage, and premature appliance failure. Such problems ARE NOT covered by product warranty.



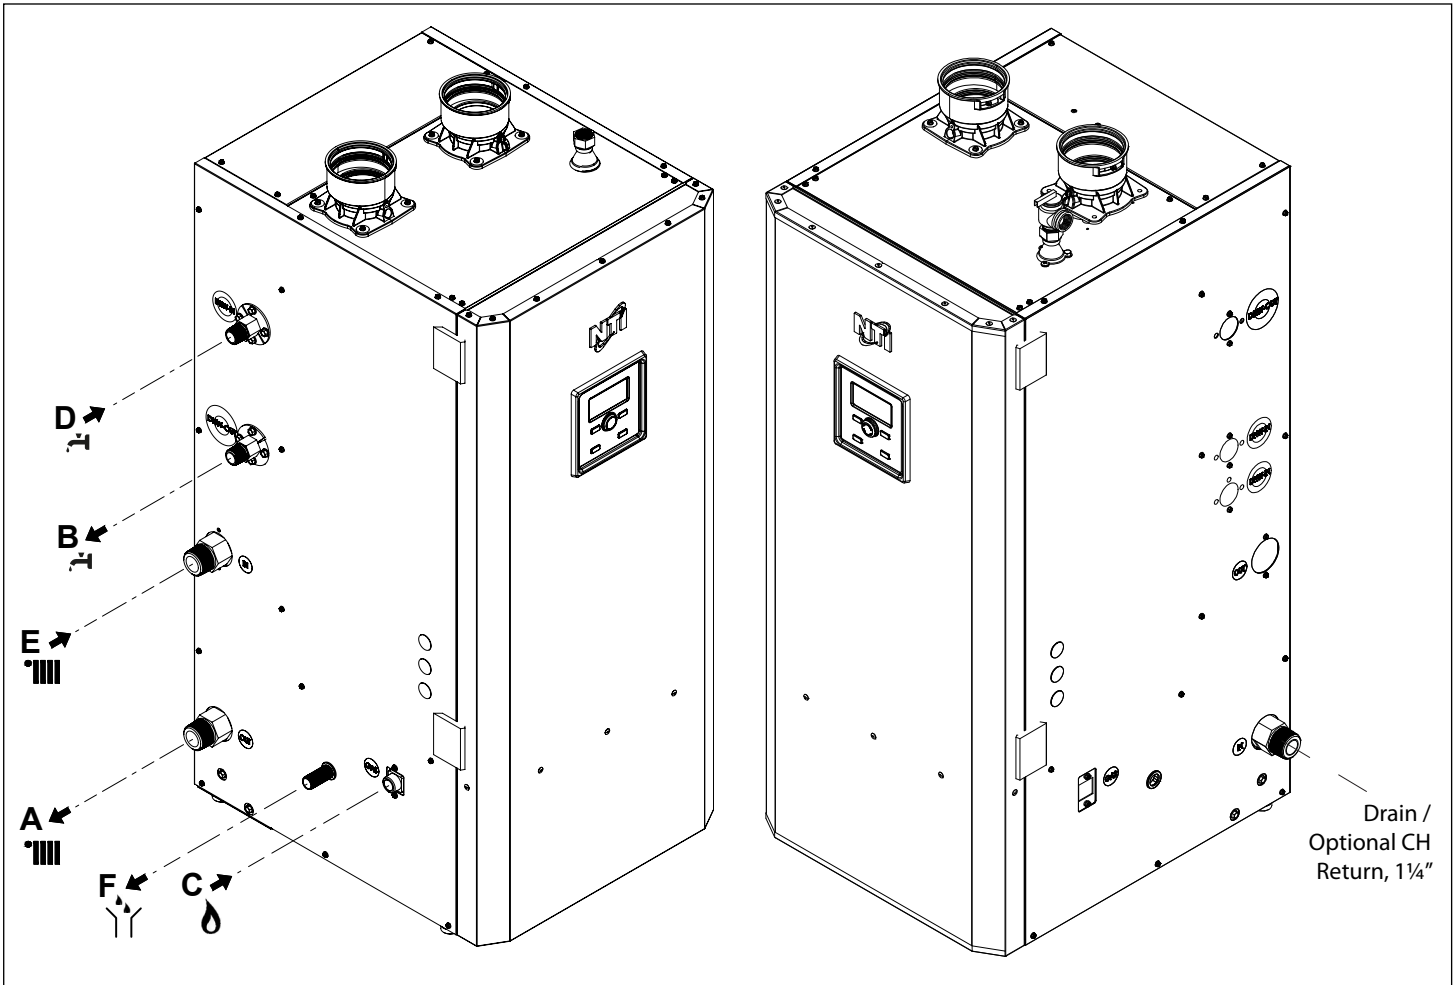




Figure 8 - Water / Gas Connections

|   | Size       | System Models  | Combi Models |
|---|------------|--|--------------|
| A | 1 1/4" NPT | Central Heating Supply                                   |              |
| B | 3/4" NPT   | Supply to Indirect Water Heater<br>(cap if not in use)   | DHW Outlet   |
| C | 3/4" NPT   | Gas Inlet  |              |
| D | 3/4" NPT   | Return from Indirect Water Heater<br>(cap if not in use) | DHW Inlet    |
| E | 1 1/4" NPT | Central Heating Return                                   |              |
| F | N/A        | Condensate Drain   |              |

Table 10 - Water / Gas Connections

Swapping Gas/Water Connections left/right

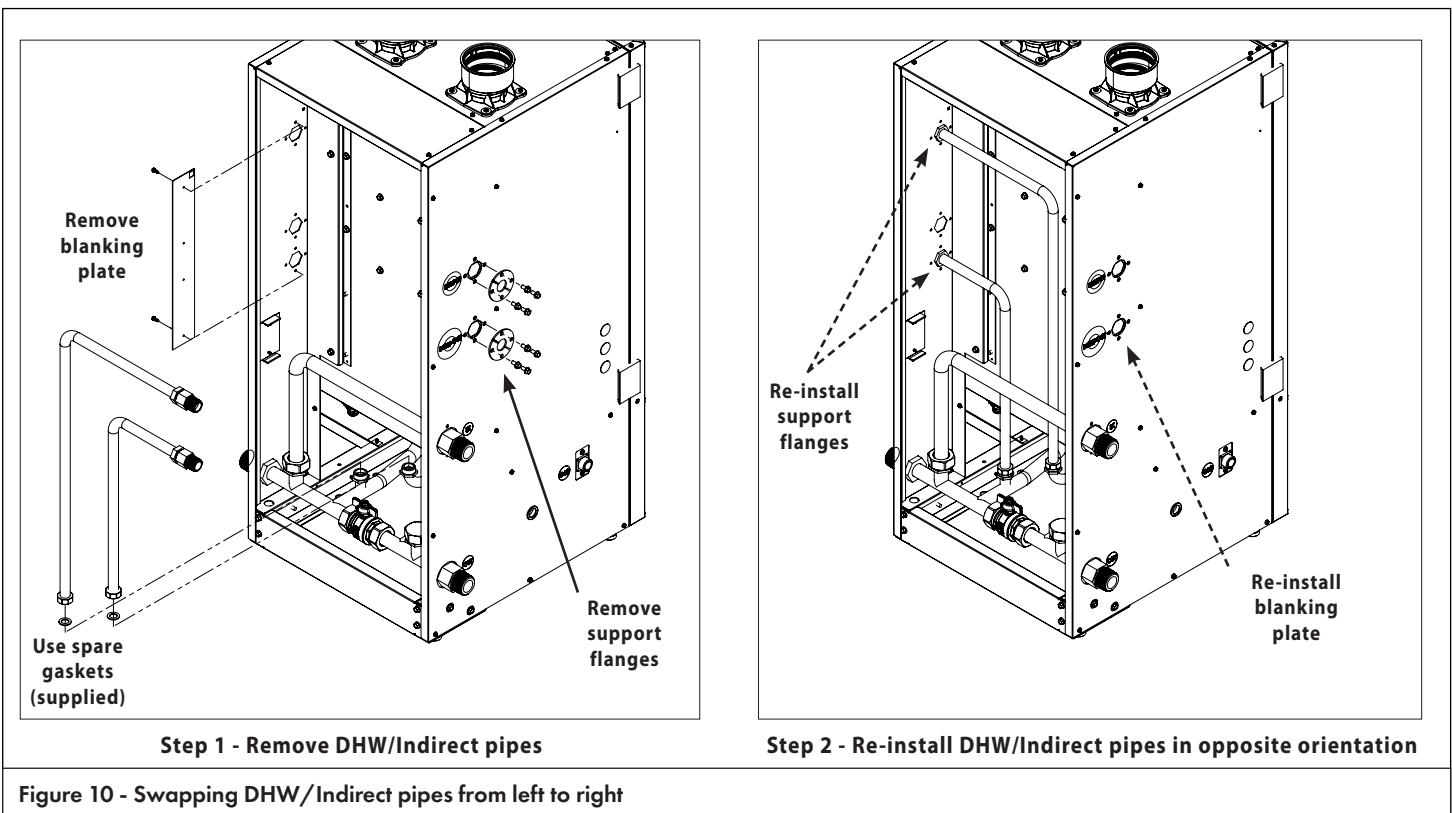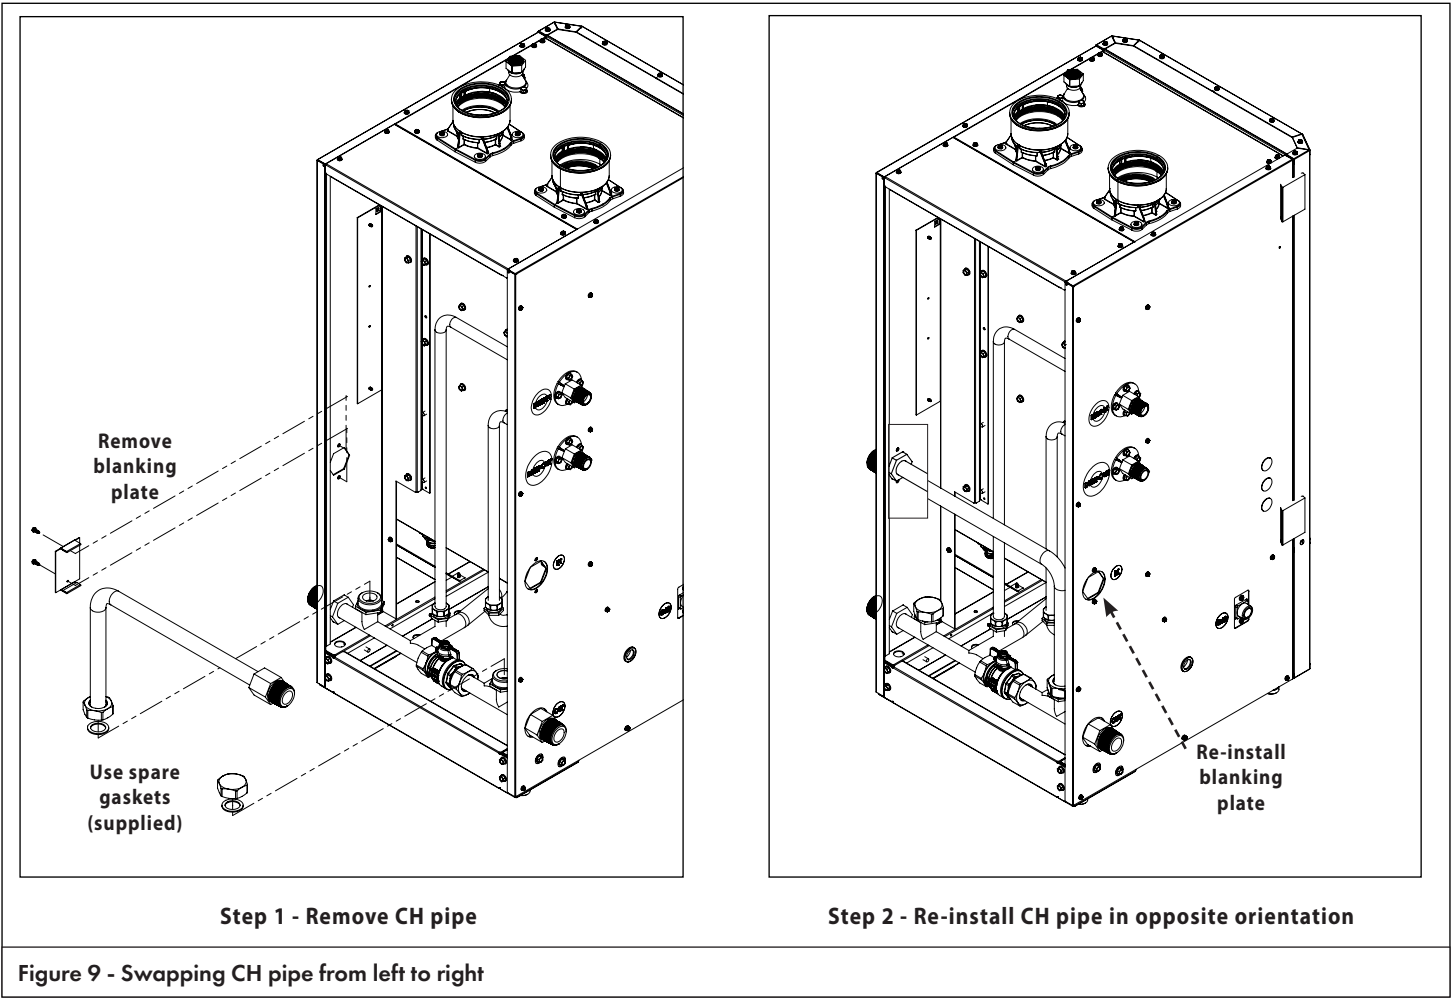

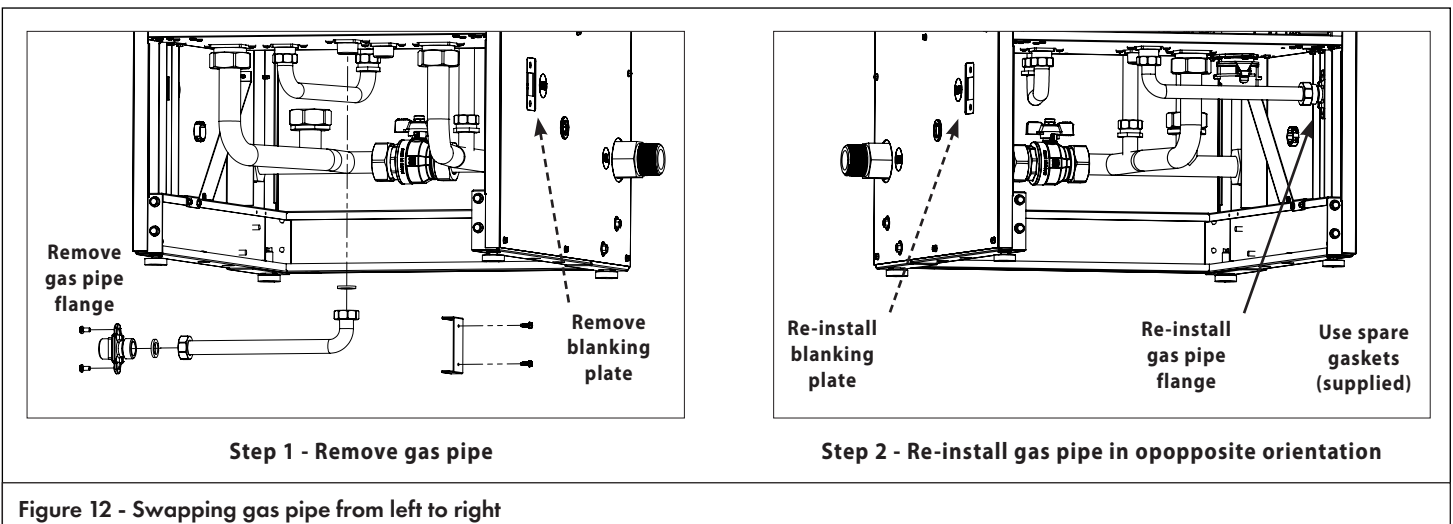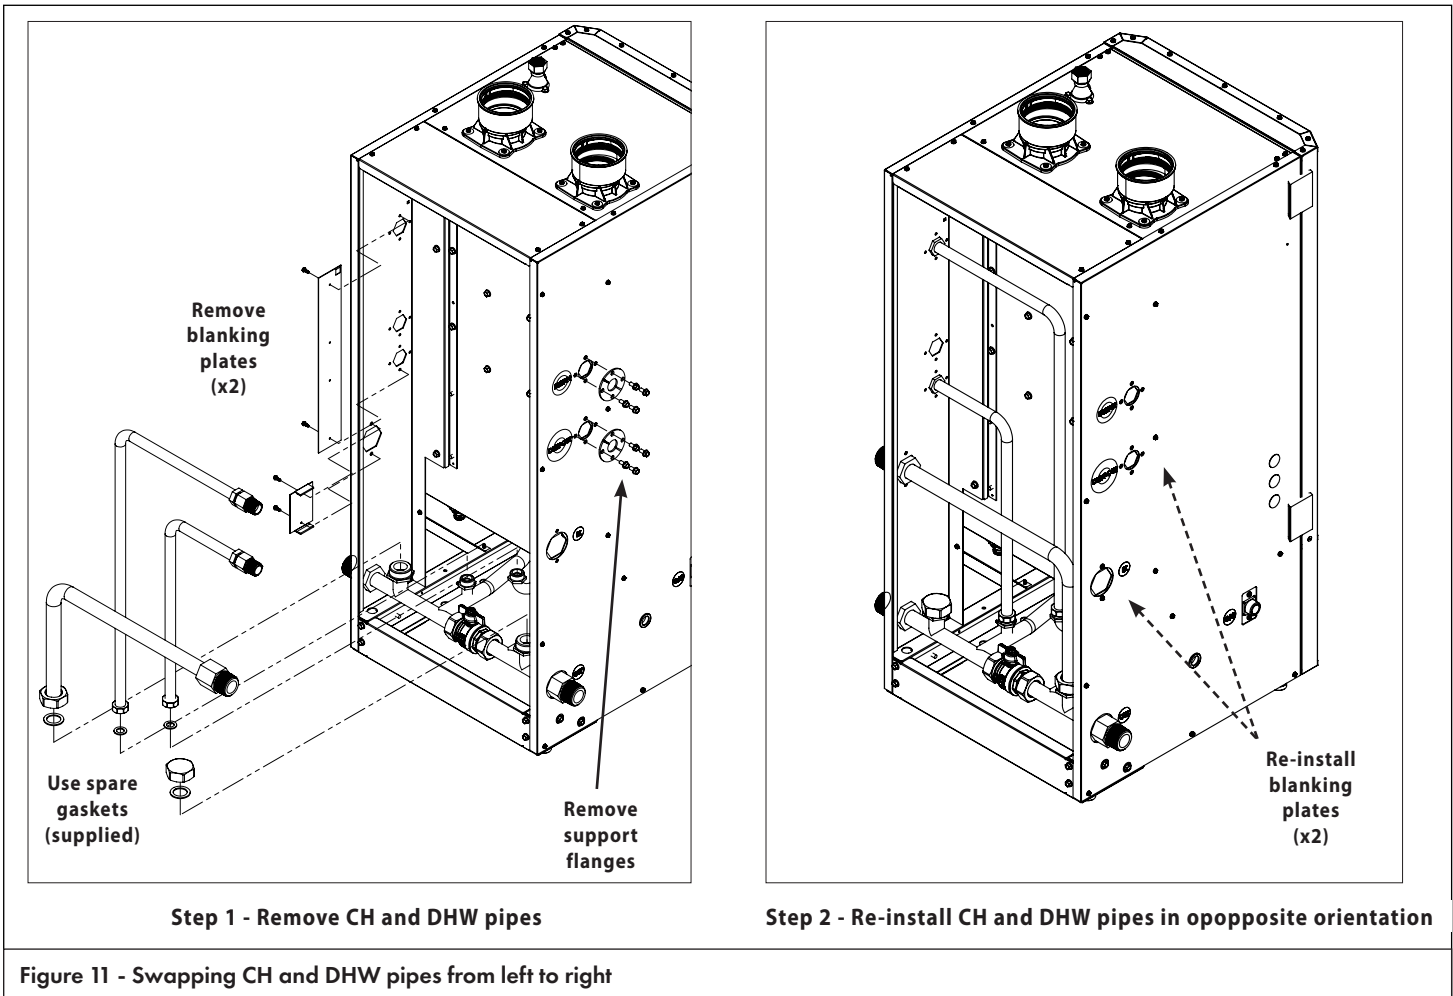

**! WARNING**

Check for leaks after re-tightening gas pipe connections. Failure to perform a leak check could result in possible substantial property damage, severe personal injury, or death.

## Part 4 - Water Piping

### E. Internal Circulation Pump

To calculate the size of the heating installation refer to the graph below.

#### Graph Representing the Available Circulation Pump Head

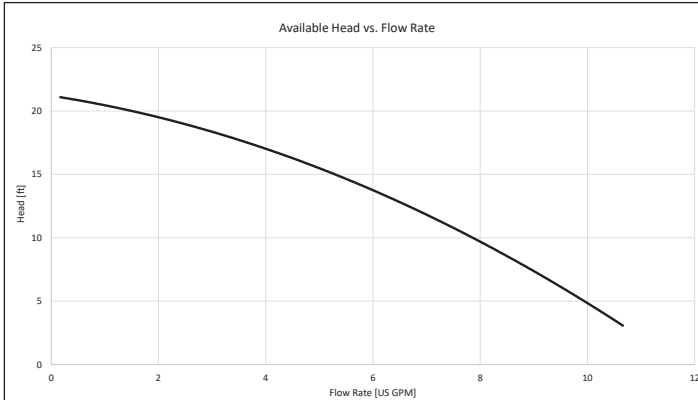


Table 11 - Internal Circulation Head Curve

### F. CH and DHW Pressure Relief Valves

This boiler has a high-temperature shut-off switch built in as a standard safety feature. Therefore, a “pressure only” relief valve is required. **DO NOT operate this appliance before the supplied pressure relief valve is installed with sufficient relieving capacity in accordance with the ASME rating plate on the appliance.**

#### ! WARNING

The pressure relief valve provided with the boiler must be installed as detailed in Figure 13. No other valves should be placed between the pressure relief valve and the appliance. Failure to comply with these guidelines can result in substantial property damage, personal injury, or death.

#### CH Loop

This boiler is provided with a CH pressure relief valve that complies with the ANSI/ASME Boiler and Pressure Vessel Code, Section IV (Heating Boilers). The included 30 psi CH Pressure Relief Valve must be installed at the top of the boiler, using the included pipe adapter and grommet, as illustrated below.

DO NOT install a relief valve with a pressure rating in excess of 50 psi - the maximum allowable operating pressure of the boiler. The relief valve capacity must exceed the BTU/H input capacity of the boiler. Install the factory provided relief valve in the fitting on top of the boiler.

#### CAUTION

Use two wrenches when installing the relief valve. Use one wrench to prevent the fitting from turning. Failure to prevent the fitting from turning could cause damage to boiler components.

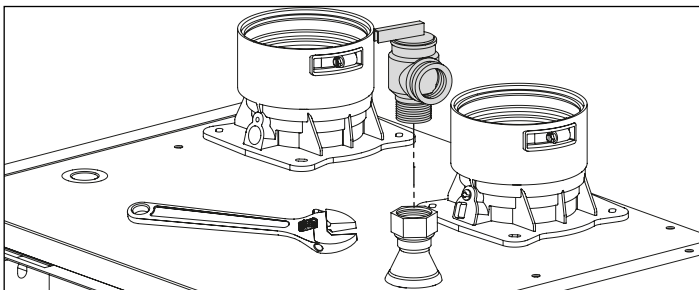


Figure 13 - Connect CH Pressure Relief Valve

#### DHW Loop (Combi Models)

The DHW piping must be provided with a DHW pressure relief valve that complies with local codes, but not less than valves certified as meeting the requirements of Relief Valves for Hot Water Supply Systems, ANSI Z21.22 / CSA4.4 by a nationally recognized lab that maintains periodic inspection of production listed equipment. A DHW pressure relief valve is not included with the boiler, and is to be field supplied and installed in the DHW piping. **DO NOT** install a DHW relief valve with a pressure rating greater than 150 psi - the maximum allowable operating pressure of the boiler’s DHW circuit. After installing the relief valves and filling and pressurizing the system, test the operation of the valves by lifting the levers. Make sure the valves discharge freely. If a valve fails to operate correctly, replace it with a new relief valve. The relief valve capacity must exceed the BTU/H input capacity of the boiler.

#### ! WARNING

To avoid water damage or scalding due to relief valve operation: Discharge line must be connected to relief valve outlet and run to a safe place of disposal. Terminate the discharge line in a manner that will prevent possibility of severe burns or property damage should the relief valve discharge.

Discharge line must be as short as possible and the same size as the valve discharge connection throughout its entire length.

Discharge line must pitch downward from the valve and terminate at least 6" above the floor drain, making discharge clearly visible.

The discharge line shall terminate plain, not threaded, with a material serviceable for temperatures of 375 °F or greater.

Do not pipe discharge to any location where freezing could occur.

No valve may be installed between the relief valve and boiler or in the discharge line. Do not plug or place any obstruction in the discharge line.

Test the operation of the relief valve after filling and pressurizing the system by lifting the lever. Make sure the valve discharges freely. If the valve fails to operate correctly, immediately replace with a new properly rated relief valve.

Test relief valve at least once annually to ensure the waterway is clear. If valve does not operate, turn the boiler “off” and call a plumber immediately.

Take care whenever operating relief valve to avoid scalding injury or property damage.

**FAILURE TO COMPLY WITH THE ABOVE GUIDELINES COULD RESULT IN FAILURE OF RELIEF VALVE OPERATION, RESULTING IN POSSIBILITY OF SUBSTANTIAL PROPERTY DAMAGE, SEVERE PERSONAL INJURY, OR DEATH.**

Do not thread a cap or plug into the relief valve or relief valve line under any circumstances! Explosion and property damage, serious injury, or death may result.

**RE-INSPECTION OF RELIEF VALVES:** Relief valves should be inspected **AT LEAST ONCE EVERY THREE YEARS**, and replaced if necessary, by a licensed plumbing contractor or qualified service technician to ensure that the product has not been affected by corrosive water conditions and to ensure that the valve and discharge line have not been altered or tampered with illegally. Certain naturally occurring conditions may corrode the valve and its components over time, rendering the valve inoperative. Such conditions can only be detected if the valve and its components are physically removed and inspected. Do not attempt to conduct an inspection on your own. Contact your plumbing contractor for a re-inspection to assure continued safety.



I. Applications

**CAUTION**

In mixed temperature applications, mixing valves are required for the protection of low temperature loops.

The Compass includes an internal primary loop with closely spaced tees, therefore there is no need to construct a primary loop external to the boiler.

The CH and DHW piping connections can be individually reversed (see Figures 9-11), to offer flexibility for the installation. The layouts presented in this section (see Figures 16-21) illustrate some examples of this flexibility.









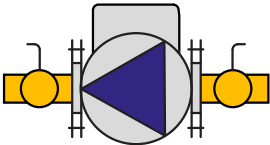
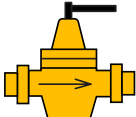






| Legend   |                         |   |                                       |
|--|-------------------------|---|---------------------------------------|
| Symbol   | Description             | Symbol  | Description                           |
|     | Central air separator   |    | Check valve                           |
|     | Temp/press gauge        |    | Pressure and temperature relief valve |
|    | Expansion tank          |   | Zone valve                            |
|   | Backflow preventor      |  | Auto air vent                         |
|  |                         | Circulator w/ isolation flanges   |                                       |
|   | Pressure reducing valve |  | Strainer                              |
|   | Flow-check valve        |  | Ball valve                            |
|   | Circuit setter          |  | Drain valve                           |
|   | Mixing valve            |   |                                       |

Figure 15 - Piping Symbol Legend

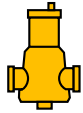**! WARNING**

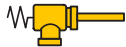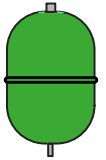FAILURE TO RE-INSPECT THE RELIEF VALVE AS DIRECTED COULD RESULT IN UNSAFE TEMPERATURE AND/OR PRESSURE BUILD-UP WHICH CAN RESULT IN PROPERTY DAMAGE, SERIOUS PERSONAL INJURY, OR DEATH.

**G. Air Elimination Device**

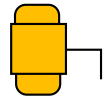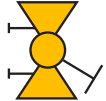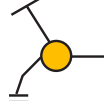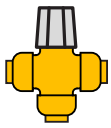A micro bubble air elimination device must be installed in every boiler installation. Automatic air vents alone are not an acceptable substitute for a micro bubble air elimination device. Here are a few examples of acceptable devices.

- Spirovent
- TACO 4900 Series
- Caleffi Discal

**H. Low Water Cut-Off (Field Supplied)**

This boiler is provided with a factory installed Water Pressure Sensor. In the event water pressure drops below 7 PSI, the control will go to a blocking error "FILL - 108", inhibiting burner operation.

However, a low water cut-off may be required by local codes. This is to be remote-mounted and field supplied. See Figure 14 for basic Low Water Cut-Off installation instructions. Do not install an isolation valve between boiler and low water cut-off.

When wiring the low water cut-off follow the installation instructions provided by the low water cut-off manufacturer.

**NOTE:** During a low water condition, the field supplied low water cut-off normally open contacts must break the main power supply to the boiler. Failure to follow this instruction will defeat the purpose of a low water cut-off and will result in damage to the boiler. Such damages are not covered by boiler warranty.

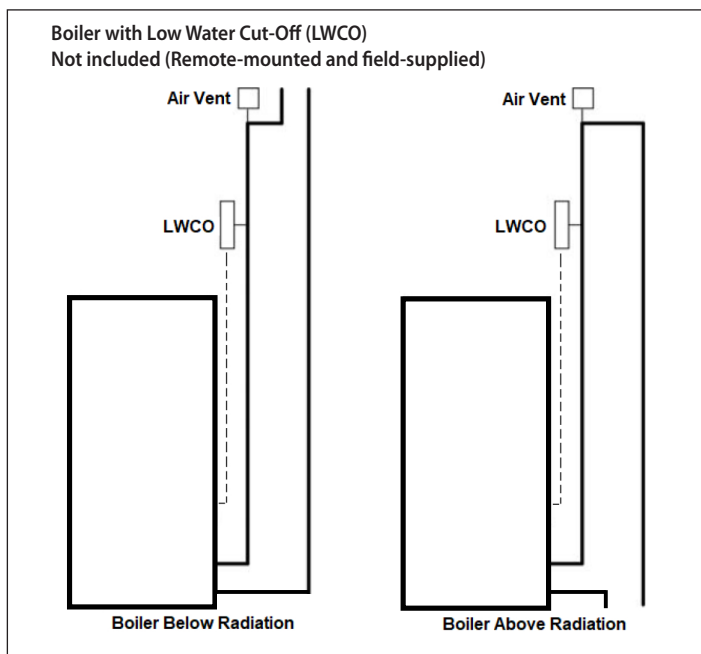


Figure 14 - Low Water Cut-Off Basic Installation

## Part 4 - Water Piping

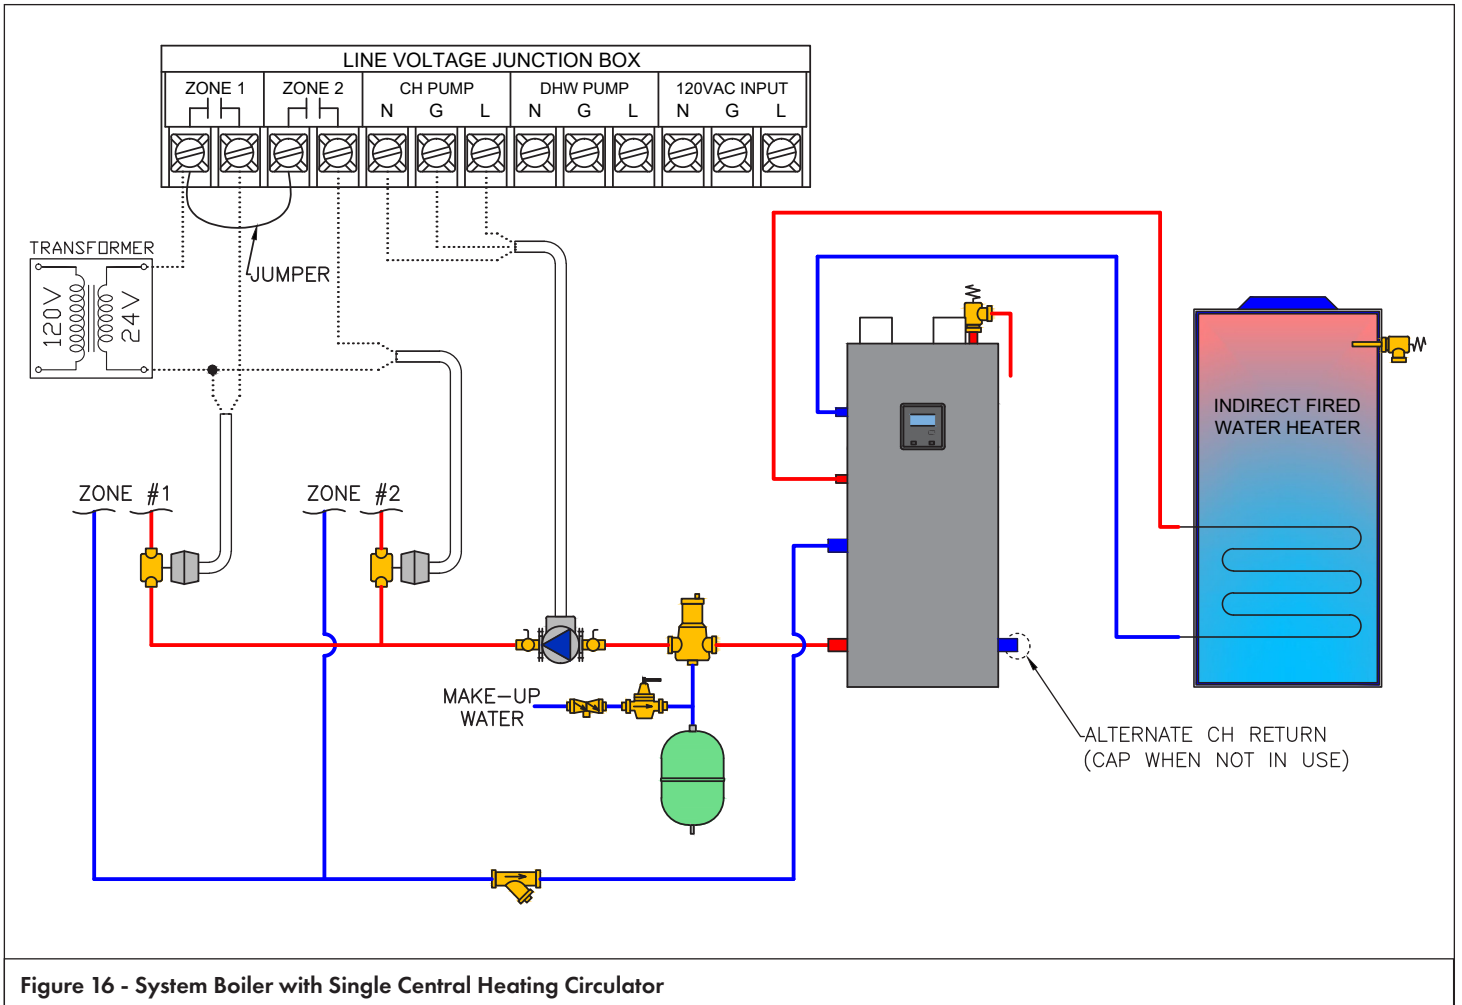


Figure 16 - System Boiler with Single Central Heating Circulator

**NOTE:** In piping applications utilizing a single zone, it is recommended that the installer use flow / check valves with weighted seats at or near the appliance to prevent gravity circulation.

### NOTICE

Figure 16 illustrates the boiler in the factory configuration (i.e. with the CH and DHW connections on the left side.) See Figures 16-21 for illustrations of other configuration options.

### ! WARNING

The piping will not support the weight of the circulators. Refer to the circulator manufacturer's instructions to properly support the circulator. Failure to comply with these instructions could result in property damage, severe personal injury, or death.

### CAUTION

On NC085 / NC110 / NC150 / NC199 Models Only.  
If the boiler's DHW connections are not used, cap them and set **CH forced diverter position** = ON (2.10.8 = 1) to lock the 3-way valve in the central heating position. Access the **CH forced diverter position** setting from the Tech Menu - DHW Menu - Advanced Menu. Failure to lock the valve in the central heating position may prevent the boiler from delivering heat, which could result in property damage.

### NOTES:

1. This drawing is meant to show system piping concept only. Installer is responsible for all equipment and detailing required by local codes.
2. The boiler includes a built-in primary loop with an isolation valve located between the closely spaced tees. Maintain the isolation valve in the closed position at all times, except for purging and flushing.
3. The minimum pipe size should be:
  - 3/4" diameter for DHW piping
  - 1" diameter for CH piping
4. Circulators are shown with isolation flanges. The alternative is standard flanges with full port ball valves. Purge valves can be used with circulator flanges as an alternative.
5. Install a minimum of 12 diameters of straight pipe upstream of all circulators.
6. IWH Applications - a mixing valve is recommended if the DHW temperature is set above 119°F.

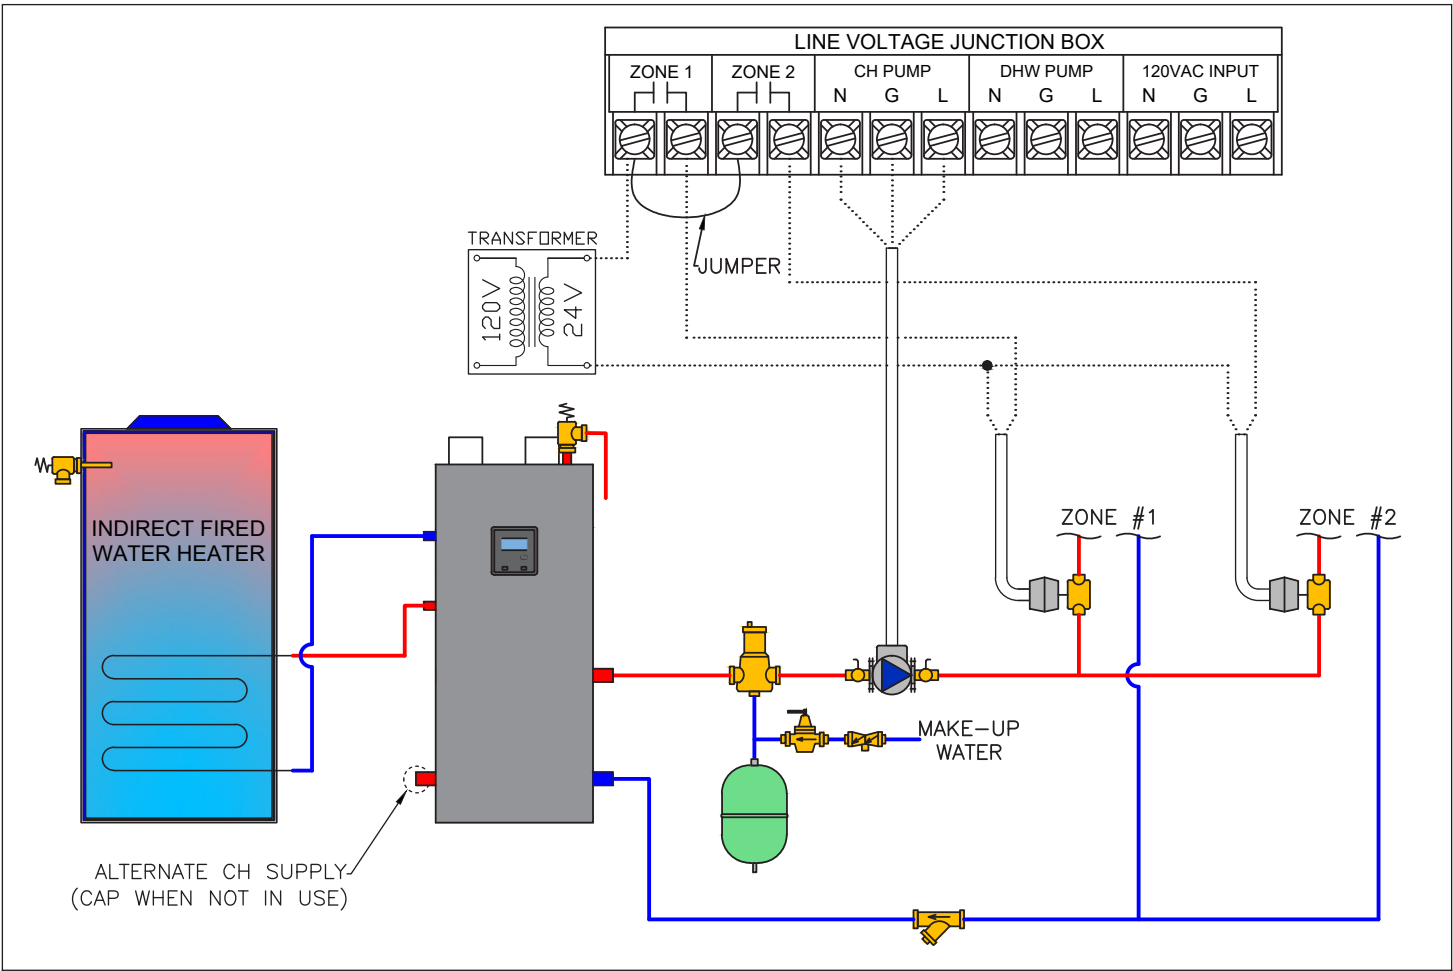


Figure 17 - System Boiler with Single Central Heating Circulator (CH piped to right side)

**NOTE:** In piping applications utilizing a single zone, it is recommended that the installer use flow / check valves with weighted seats at or near the appliance to prevent gravity circulation.

### NOTICE

Figure 17 illustrates the boiler re-configured with the CH pipe moved to the right side of the boiler as instructed in Figure 9. See Figures 16-21 for illustrations of other configuration options.

### ! WARNING

The piping will not support the weight of the circulators. Refer to the circulator manufacturer's instructions to properly support the circulator. Failure to comply with these instructions could result in property damage, severe personal injury, or death.

### CAUTION

On NC085 / NC110 / NC150 / NC199 Models Only.  
 If the boiler's DHW connections are not used, cap them and set **CH forced diverter position** = ON (2.10.8 = 1) to lock the 3-way valve in the central heating position. Access the **CH forced diverter position** setting from the Tech Menu - DHW Menu - Advanced Menu. Failure to lock the valve in the central heating position may prevent the boiler from delivering heat, which could result in property damage.

### NOTES:

1. This drawing is meant to show system piping concept only. Installer is responsible for all equipment and detailing required by local codes.
2. The boiler includes a built-in primary loop with an isolation valve located between the closely spaced tees. Maintain the isolation valve in the closed position at all times, except for purging and flushing.
3. The minimum pipe size should be:
  - 3/4" diameter for DHW piping
  - 1" diameter for CH piping
4. Circulators are shown with isolation flanges. The alternative is standard flanges with full port ball valves. Purge valves can be used with circulator flanges as an alternative.
5. Install a minimum of 12 diameters of straight pipe upstream of all circulators.
6. IWH Applications - a mixing valve is recommended if the DHW temperature is set above 119°F.

## Part 4 - Water Piping

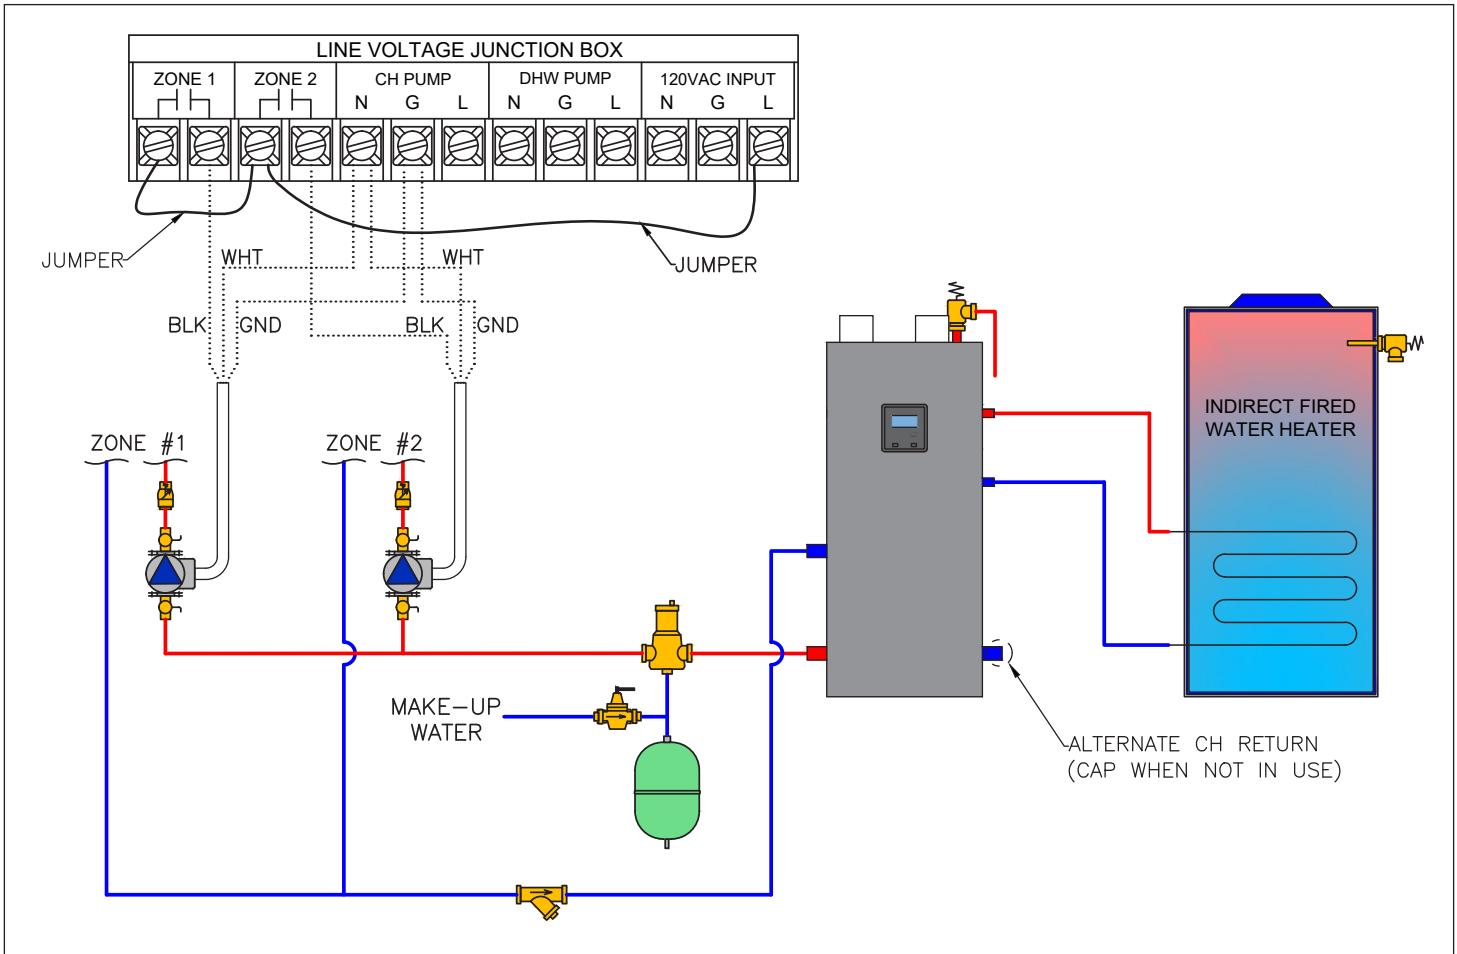


Figure 18 - System Boiler with Multiple Central Heating Circulators (DHW Piped to Right Side)

**NOTE:** In piping applications utilizing a single zone, it is recommended that the installer use flow / check valves with weighted seats at or near the appliance to prevent gravity circulation.

### NOTICE

Figure 18 illustrates the boiler re-configured with the DHW pipes moved to the right side of the boiler, as instructed in Figure 10. See Figures 16-21 for illustrations of other configuration options.

### ! WARNING

The piping will not support the weight of the circulators. Refer to the circulator manufacturer's instructions to properly support the circulator. Failure to comply with these instructions could result in property damage, severe personal injury, or death.

### CAUTION

On NC085 / NC110 / NC150 / NC199 Models Only.  
If the boiler's DHW connections are not used, cap them and set **CH forced diverter position** = ON (2.10.8 = 1) to lock the 3-way valve in the central heating position. Access the **CH forced diverter position** setting from the Tech Menu - DHW Menu - Advanced Menu. Failure to lock the valve in the central heating position may prevent the boiler from delivering heat, which could result in property damage.

### NOTES:

1. This drawing is meant to show system piping concept only. Installer is responsible for all equipment and detailing required by local codes.
2. The boiler includes a built-in primary loop with an isolation valve located between the closely spaced tees. Maintain the isolation valve in the closed position at all times, except for purging and flushing.
3. The minimum pipe size should be:
  - ¾" diameter for DHW piping
  - 1" diameter for CH piping
4. Circulators are shown with isolation flanges. The alternative is standard flanges with full port ball valves. Purge valves can be used with circulator flanges as an alternative.
5. Install a minimum of 12 diameters of straight pipe upstream of all circulators.
6. IWH Applications - a mixing valve is recommended if the DHW temperature is set above 119°F.

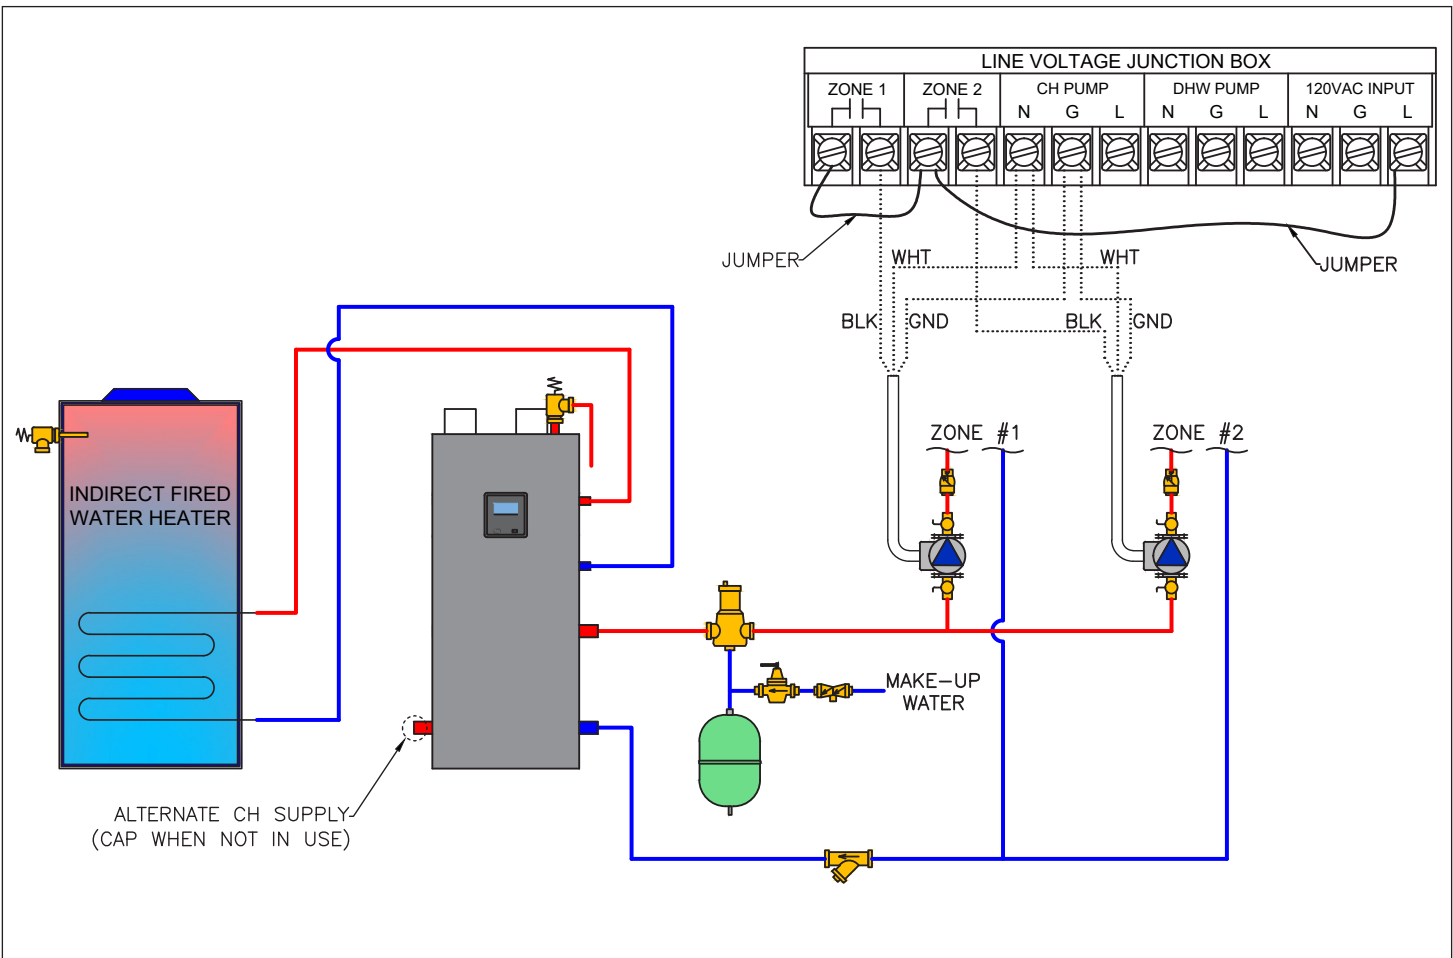


Figure 19 - System Boiler with Multiple Central Heating Circulators (CH & DHW Piped to Right Side)

**NOTE:** In piping applications utilizing a single zone, it is recommended that the installer use flow / check valves with weighted seats at or near the appliance to prevent gravity circulation.

## NOTICE

Figure 19 illustrates the boiler re-configured with the DHW pipes moved to the right side of the boiler, as instructed in Figure 11. See Figures 16-21 for illustrations of other configuration options.

## WARNING

The piping will not support the weight of the circulators. Refer to the circulator manufacturer's instructions to properly support the circulator. Failure to comply with these instructions could result in property damage, severe personal injury, or death.

## CAUTION

On NC085 / NC110 / NC150 / NC199 Models Only.  
If the boiler's DHW connections are not used, cap them and set **CH forced diverter position** = ON (2.10.8 = 1) to lock the 3-way valve in the central heating position. Access the **CH forced diverter position** setting from the Tech Menu - DHW Menu - Advanced Menu. Failure to lock the valve in the central heating position may prevent the boiler from delivering heat, which could result in property damage.

## NOTES:

1. This drawing is meant to show system piping concept only. Installer is responsible for all equipment and detailing required by local codes.
2. The boiler includes a built-in primary loop with an isolation valve located between the closely spaced tees. Maintain the isolation valve in the closed position at all times, except for purging and flushing.
3. The minimum pipe size should be:
  - ¾" diameter for DHW piping
  - 1" diameter for CH piping
4. Circulators are shown with isolation flanges. The alternative is standard flanges with full port ball valves. Purge valves can be used with circulator flanges as an alternative.
5. Install a minimum of 12 diameters of straight pipe upstream of all circulators.
6. IWH Applications - a mixing valve is recommended if the DHW temperature is set above 119°F.

## Part 4 - Water Piping

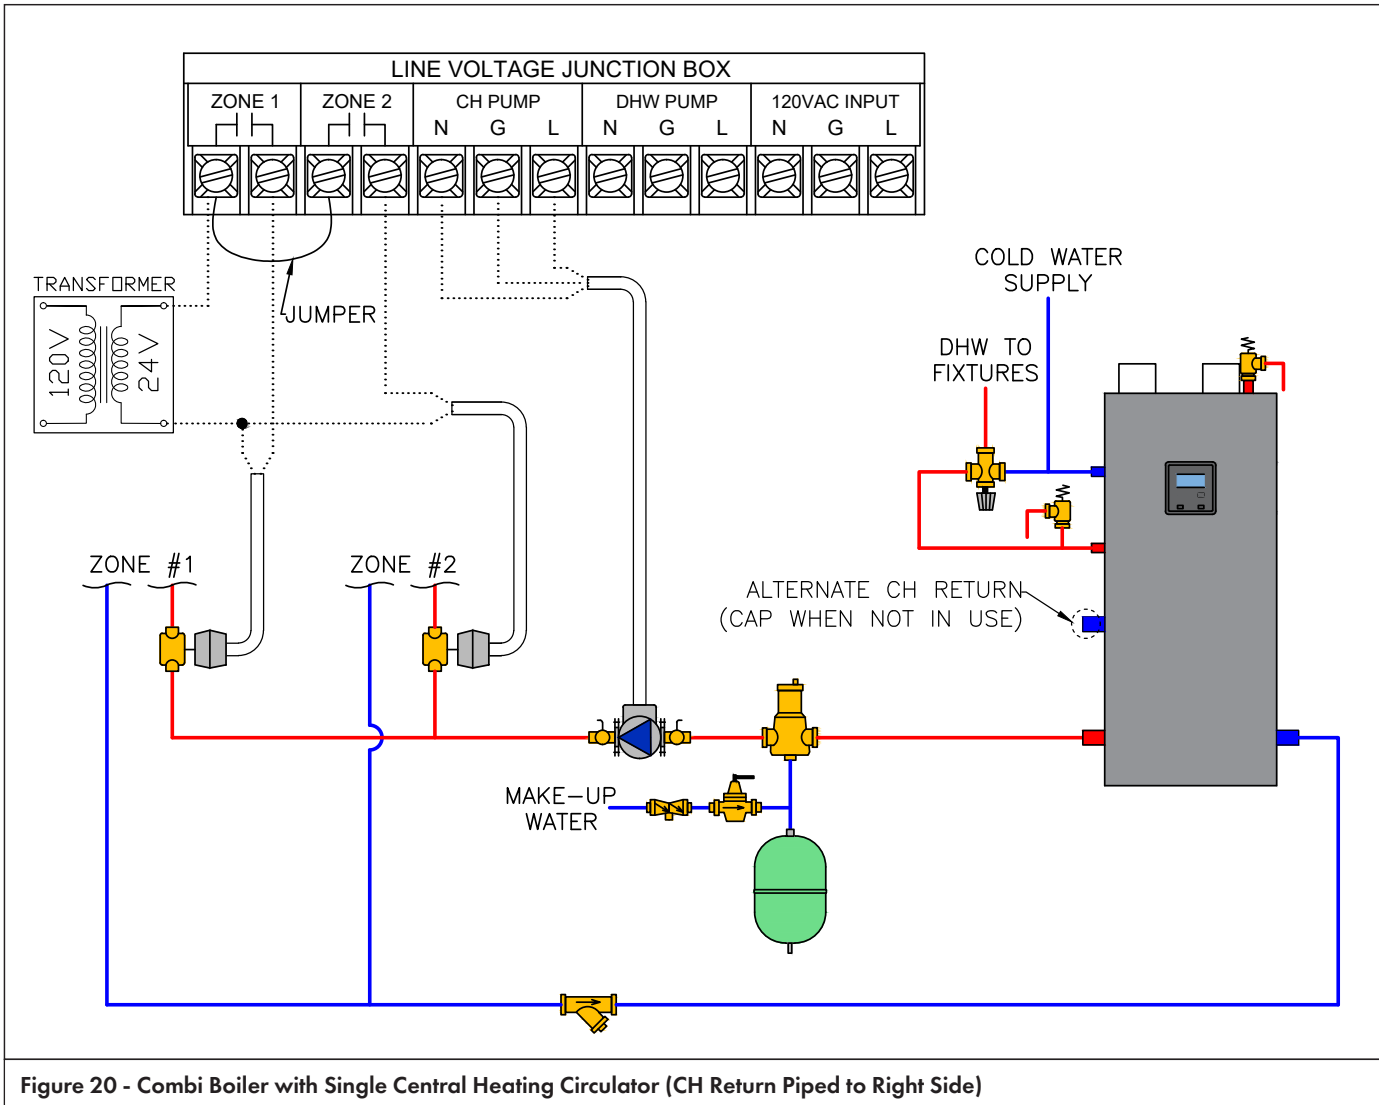


Figure 20 - Combi Boiler with Single Central Heating Circulator (CH Return Piped to Right Side)

**NOTE:** In piping applications utilizing a single zone, it is recommended that the installer use flow / check valves with weighted seats at or near the appliance to prevent gravity circulation.

### NOTICE

Figure 20 illustrates the boiler in the factory configuration (i.e. with the CH and DHW connections on the left side.) See Figures 16-21 for illustrations of other configuration options.

### ! WARNING

The piping will not support the weight of the circulators. Refer to the circulator manufacturer's instructions to properly support the circulator. Failure to comply with these instructions could result in property damage, severe personal injury, or death.

### NOTES:

1. This drawing is meant to show system piping concept only. Installer is responsible for all equipment and detailing required by local codes.
2. The boiler includes a built-in primary loop with an isolation valve located between the closely spaced tees. Maintain the isolation valve in the closed position at all times, except for purging and flushing.
3. The minimum pipe size should be:
  - $\frac{3}{4}$ " diameter for DHW piping
  - 1" diameter for CH piping
4. Circulators are shown with isolation flanges. The alternative is standard flanges with full port ball valves. Purge valves can be used with circulator flanges as an alternative.
5. Install a minimum of 12 diameters of straight pipe upstream of all circulators.

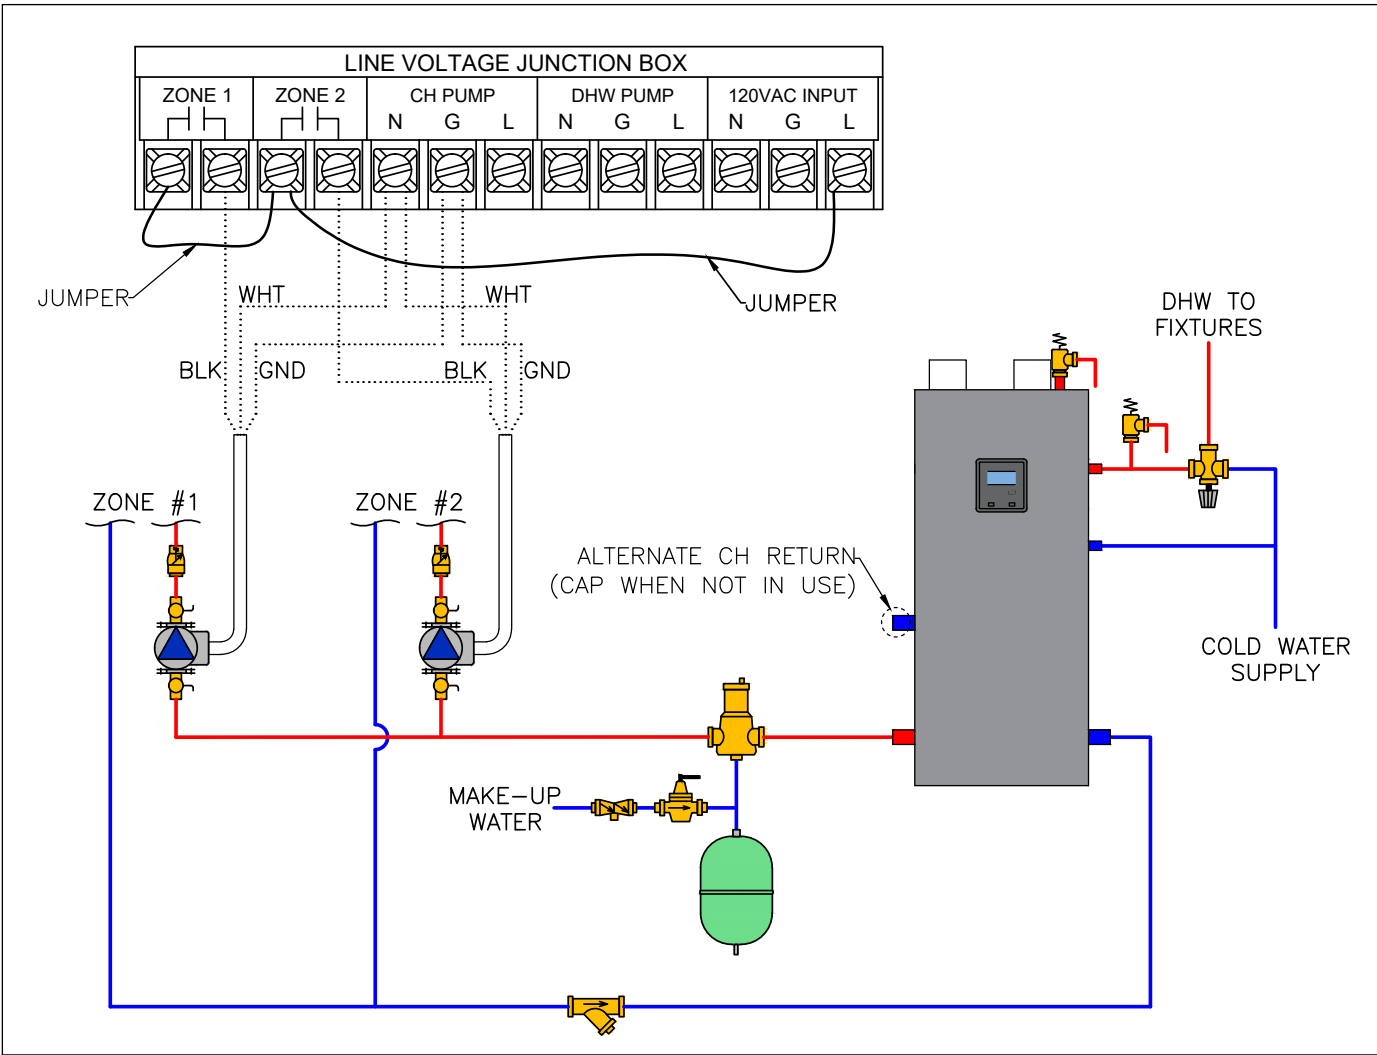


Figure 21 - Combi Boiler with Multiple Central Heating Circulators (DHW and CH Return Piped to Right Side)

**NOTE:** In piping applications utilizing a single zone, it is recommended that the installer use flow / check valves with weighted seats at or near the appliance to prevent gravity circulation.

**NOTICE**

Figure 21 illustrates the boiler re-configured with the DHW pipes moved to the right side of the boiler, as instructed in Figure 10. See Figures 16-21 for illustrations of other configuration options.

**! WARNING**

The piping will not support the weight of the circulators. Refer to the circulator manufacturer's instructions to properly support the circulator. Failure to comply with these instructions could result in property damage, severe personal injury, or death.

**NOTES:**

1. This drawing is meant to show system piping concept only. Installer is responsible for all equipment and detailing required by local codes.
2. The boiler includes a built-in primary loop with an isolation valve located between the closely spaced tees. Maintain the isolation valve in the closed position at all times, except for purging and flushing.
3. The minimum pipe size should be:
  - 3/4" diameter for DHW piping
  - 1" diameter for CH piping
4. Circulators are shown with isolation flanges. The alternative is standard flanges with full port ball valves. Purge valves can be used with circulator flanges as an alternative.
5. Install a minimum of 12 diameters of straight pipe upstream of all circulators.



This page intentionally left blank.



**! DANGER**

The boiler must be vented as detailed in this section. Ensure exhaust vent and intake piping complies with these instructions regarding vent system. Inspect finished exhaust vent and intake piping thoroughly to ensure all joints are well secured, airtight, and comply with all applicable code requirements, as well as the instructions provided in this manual. Failure to properly install the vent system will result in severe personal injury or death.

**A. General****! DANGER**

This boiler is certified as a "Category IV" appliance and requires a special venting system. The vent system will operate with a positive pressure in the pipe. Exhaust gases must be piped directly outdoors using the vent materials and rules outlined in these instructions. Do not connect vent connectors serving appliances vented by natural draft into any portion of mechanical draft systems operating under positive pressure. Follow the venting instructions carefully. Failure to do so will result in substantial property damage, severe personal injury, or death.

Exhaust and intake are to be piped separately. This boiler cannot share a common exhaust or intake with multiple appliances. Failure to follow these instructions will result in substantial property damage, severe personal injury, or death.

1. Installation should be made in accordance with the regulations of the Authority Having Jurisdiction, local code authorities, and utility companies which pertain to this type of water heating equipment.
2. Install the venting system in accordance with these instructions and with the National Fuel Gas Code, ANSI Z223.1/NFPA 54, CAN/CGA B149, and / or applicable provisions of local building codes.
3. This boiler must be vented with materials, components, and systems listed and approved for Category IV appliances.

**NOTE:** To avoid contamination often contained in indoor air, it is best to pipe all intake combustion air directly to the outdoors.

**NOTE:** Care must be taken to prevent condensate freezing in the exhaust vent pipe system. See local, state, provincial, and national codes for best practices to prevent condensate freezing in the exhaust vent pipe system.

**! WARNING**

Improper seating of vent pipe gaskets can cause eventual gasket failure and exhaust gas leakage. Ensure the exhaust vent pipe is properly beveled and seated before insertion into the flue adapter. Failure to do so could result in property damage, severe personal injury, or death.

Exhaust vent connections are not designed as load-bearing devices, and must not be used to support exhaust vent piping. All vent pipes must be properly connected, supported, and the exhaust vent must be pitched a minimum of 1/4" per foot back to the boiler to allow drainage of condensate. Failure to properly support vent piping and follow the information in this statement could result in product damage, severe personal injury, or death.

It is required to insert the provided exhaust and intake screens into the vent terminations to prevent blockage caused by debris or birds. Failure to keep terminations clear could result in property damage, severe personal injury, or death.

**! WARNING****Breathing Hazard - Carbon Monoxide Gas**

- Do not operate heater if flood damaged.
- Install vent system in accordance with local codes and manufacturers installation instructions.
- Do not obstruct heater air intake or exhaust. Support all vent piping per manufacturers installation instructions.
- Do not place chemical vapor emitting products near unit.
- According to NFPA 720, carbon monoxide detectors should be installed outside each sleeping area.
- Never operate the heater unless it is vented to the outdoors.
- Analyze the entire vent system to make sure that condensate will not become trapped in a section of vent pipe and therefore reduce the open cross sectional area of the vent.

**Breathing carbon monoxide can cause brain damage or death. Always read and understand instruction manual.**

**! DANGER**

Due to the extreme flammability of most glues, cements, solvents, and primers used to join plastic exhaust vent and intake pipes, explosive solvent vapors must be cleared from all vent piping before start-up. Avoid using excess cement or primer, as this may pool in the vent pipes. Vent assemblies should be allowed to cure for a period of at least 8 hours before powering a connected appliance. Failure to follow these instructions will result in substantial property damage, severe personal injury, or death. It is the installers' responsibility to understand the hazards associated with explosive solvents and take the necessary precautions to avoid these risks.

**! WARNING**

Only Stainless Steel exhaust vent pipe material may be insulated.

DO NOT insulate the first three (3) linear feet of the exhaust vent run.


DO NOT insulate PVC, CPVC, or Polypropylene exhaust vent pipe material. Doing so will cause increased vent wall temperatures, which could result in vent pipe failure.

CPVC, Polypropylene, or Stainless Steel pipe material MUST be used if the first three (3) linear feet of the exhaust vent run passes through an enclosed space greater than 6" in length, such as a wall or ceiling.\*

If CPVC is used to meet these requirements, the balance may be installed with approved PVC pipe.

If Polypropylene or Stainless Steel is used to meet these requirements, the balance of the vent run MUST be installed with the same material. Failure to comply with these requirements could result in property damage, severe personal injury, or death.

\*This rule applies when the exhaust vent passes through the enclosed space into another interior space, i.e. through a floor or wall from the mechanical room into another room. This rule DOES NOT apply when the exhaust vent passes through the enclosed space immediately to the exterior of the building.

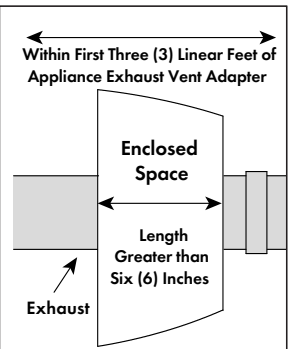

**B. Approved Materials for Exhaust Vent and Intake Pipe**

| Item  | Material                | Standards for Installation In:                              |                                       |
|---|-------------------------|---|---------------------------------------|
|   |                         | United States   | Canada                                |
| <b>Pipe and Fittings Approved for Intake ONLY</b> | ABS*                    | ANSI/ASTM D2661   | ANSI/ASTM D2661                       |
| <b>Pipe Approved for Intake OR Exhaust Vent</b>   | PVC Schedule 40/80      | UL-1738 or ANSI/ASTM D1785                                  | UL-1738 or ULC-S636                   |
|   | PVC-DWV Schedule 40/80  | UL-1738 or ANSI/ASTM D2665                                  |                                       |
|   | CPVC Schedule 40/80     | UL-1738 or ANSI/ASTM F441                                   |                                       |
|   | Polypropylene           | UL-1738 or ULC-S636   |                                       |
|   | Stainless Steel AL29-4C | Certified for Category IV and Direct Vent Appliance Venting |                                       |
| <b>Pipe Fittings</b>                              | PVC Schedule 40         | UL-1738, ANSI/ASTM D2466 or D2665                           | UL-1738 or ULC-S636                   |
|   | PVC Schedule 80         | UL-1738, ANSI/ASTM D2467 or D2665                           |                                       |
|   | CPVC Schedule 40        | UL-1738 or ANSI/ASTM F438                                   |                                       |
|   | CPVC Schedule 80        | UL-1738 or ANSI/ASTM F439                                   |                                       |
| <b>Pipe Cement</b>                                | ABS*                    | ANSI/ASTM D2235   | ANSI/ASTM D2235                       |
|   | PVC                     | ANSI/ASTM D2564   | ULC-S636 Approved Cements and Primers |
|   | CPVC                    | ANSI/ASTM F493  |                                       |
| <b>Pipe Primer</b>                                | PVC / CPVC              | ASTM F656   |                                       |

**Table 12 - Approved Materials for Exhaust Vent and Intake Pipe**

**! DANGER**

- The exhaust and intake components installed with this appliance must be used for near appliance piping BEFORE transitioning to the approved materials listed above. DO NOT REMOVE these installed components. Doing so WILL VOID appliance warranty.
- In the US/Canada, PVC vent pipe and fittings SHALL NOT BE USED within the closet or alcove. Only approved CPVC, Polypropylene, or Stainless Steel vent pipe and fittings may be used.
- PVC / CPVC pipe and fittings of the same diameter are considered interchangeable.
- The use of cellular core PVC (ASTM F891), cellular core CPVC, or Radel® (polyphenolsulfone) in exhaust venting systems is prohibited.
- Covering non-metallic vent pipe and fittings with thermal insulation is prohibited.
- The boiler’s vent and air intake connections are designed to accept 3” PVC/CPVC and Polypropylene directly. DO NOT insert PVC piping into the boiler’s exhaust connection. When venting with PVC, insert the factory supplied 5” length of CPVC before transitioning to PVC.
- When installing AL29-4C vent piping, install a PVC-to-stainless adapter at the boiler vent connection, and at the termination when using a PVC termination kit. DO NOT mix AL29-4C piping from different manufacturers unless using adapters specifically designed for the purpose by the manufacturer.
- DO NOT mix components from different venting systems without proper adapters. The vent system could fail, causing leakage of flue products into the living space. Use only the approved pipe and fitting materials, and primer and cement specifically designed for the material used, as listed in the above table.
- A double wall vent or insulated material may be used when using stainless steel vent material in a freezing climate.
- \*ABS may be used for air intake applications ONLY.
- Contact the venting material manufacturer if there is any question about the applicability of the proposed venting material.

**Failure to follow these directions will result in substantial property damage, severe personal injury, or death.**

**CAUTION**

High heat sources (generating heat 100°F / 37°C or greater, such as boiler flue pipes, space heaters, etc.) may damage plastic components of the boiler as well as plastic vent pipe materials. Such damages ARE NOT covered by warranty. It is recommended to keep a minimum clearance of 8” from high heat sources. Observe heat source manufacturer instructions, as well as local, state, provincial, and national codes, laws, regulations, and ordinances when installing this boiler and related components near high heat sources.

**NOTE:** The use of double-wall vent or insulated material for the combustion air intake pipe is recommended in cold climates to prevent the condensation of airborne moisture in the incoming combustion air.

**! DANGER**

You must not use “B” vent in an exhaust application. “B” vent is for intake applications ONLY. Using “B” vent in an exhaust application will result in serious injury or death.

**C. Additional Requirements for Installation in Canada**

1. Installations must be made with a vent pipe system certified to ULC-S636.
2. The first three (3) feet of vent pipe from the boiler flue outlet must be readily accessible for visual inspection.
3. The components of the certified vent system must not be interchanged with other vent systems or unlisted pipe / fittings.

D. Exhaust Vent and Intake Pipe Location

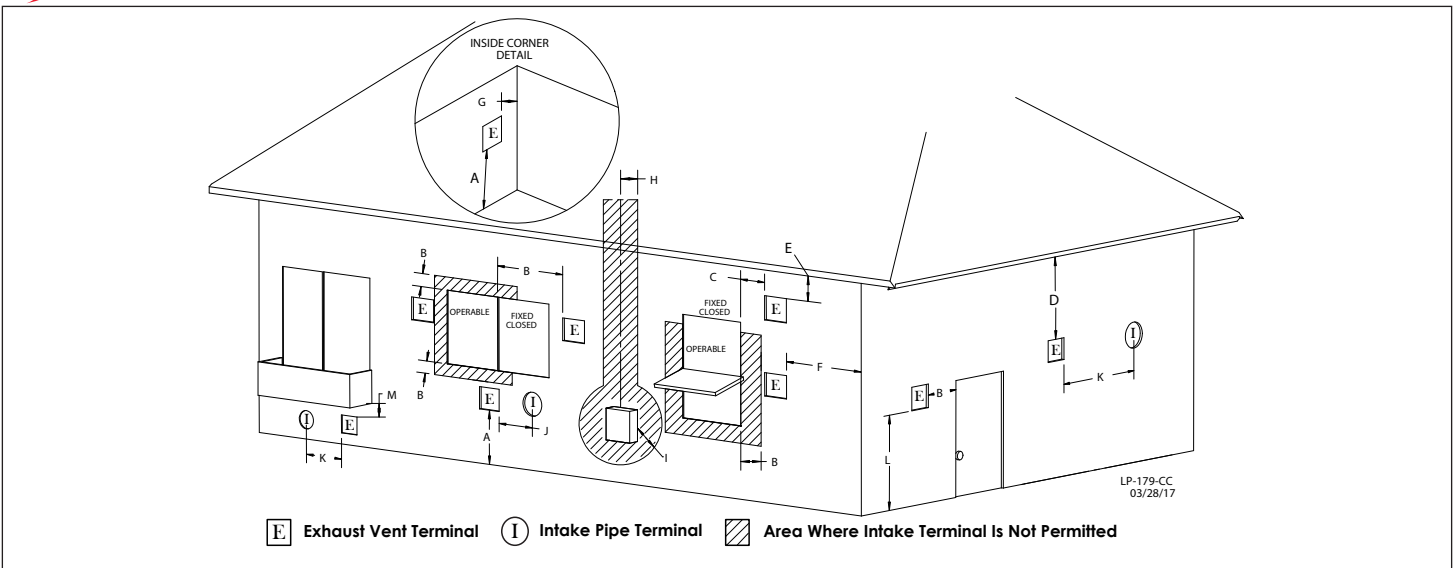


Figure 22 - Exit Terminals for Direct Vent Systems - ANSI Z223.1 / NFPA 54 for US and CAN/CSA B149.1 for Canada

| DESCRIPTION |   | US  | CANADA   |
|-------------|---|---|--|
| <b>A</b>    | Clearance above grade, veranda, porch, deck, or balcony   | 1 foot (30 cm)                                    |  |
| <b>B</b>    | Clearance to window or door that may be opened  | Direct Vent                                       | 1 ft (30 cm) for inputs up to and including 100 MBH  |
|             |   | Power Vent  | 4 ft below or to side of opening; 1 ft above opening |
| <b>C</b>    | Clearance to permanently closed window  | Not Applicable                                    |  |
| <b>D</b>    | Vertical clearance to ventilated soffit located above the terminal within a horizontal distance 2 feet (61 cm) from the center line of the terminal | 6 feet (1.83 m)                                   |  |
| <b>E</b>    | Clearance to unventilated soffit  | Not Applicable                                    |  |
| <b>F</b>    | Clearance to outside corner   | Not Applicable                                    |  |
| <b>G</b>    | Clearance to inside corner  | 3 feet (91 cm)                                    |  |
| <b>H</b>    | Clearance to each side of center line extended above meter / regulator assembly   | 3 feet (91 cm) within a height of 15 feet (4.6 m) |  |
| <b>I</b>    | Clearance to service regulator vent outlet  | refer to ANSI Z223.1 / NFPA 54                    | refer to CSA B149.1                                  |
| <b>J</b>    | Clearance to nonmechanical air supply inlet to building or the combustion air inlet to any other appliance  | Direct Vent                                       | 1 foot   |
|             |   | Power Vent  | 4 ft below or to side of opening; 1 ft above opening |
| <b>K</b>    | Clearance to mechanical air supply inlet  | 3 feet above if within 10 feet horizontally       | 6 feet (1.83 m)                                      |
| <b>L</b>    | Clearance above paved sidewalk or paved driveway located on public property   | Direct Vent                                       | *  |
|             |   | Power Vent  | 7 feet (2.13 m)                                      |
| <b>M</b>    | Clearance under veranda, porch deck, or balcony   | *   | 1 foot (30 cm)                                       |

Table 13 - Vent Termination Clearances - \*NOTE: For clearances not specified in ANSI Z223.1 / NFPA 54 for US and CAN/CSA B149.1 for Canada, please use clearances in accordance with local installation codes and the requirements of the gas supplier.

**! WARNING**

The building owner is responsible for keeping the exhaust and intake terminations free of snow, ice, or other potential blockages, as well as scheduling routing maintenance. Failure to keep the vent piping terminations clear and properly maintain the heater could result in property damage, severe personal injury, or death.

**! WARNING**

Appliances that terminate through an outside wall of a building and discharge flue gases perpendicular to the adjacent wall shall be located not less than 10 ft (3.05 m) horizontally from an operable opening in an adjacent building. This requirement shall not apply to vent terminals that are 2 ft (61 cm) or more above or 25 ft (7.62 m) or more below operable openings.

## Part 5 - Venting

### E. Exhaust Vent and Intake Pipe Sizing

- All models ship with 3" diameter vent pipe exhaust vent and intake air pipe connections.
  - Vent diameter may be DECREASED to 2".
  - Increasing the vent diameter IS NOT an option.
- The total length of the intake air pipe run must not exceed **one hundred (100) feet in 2" pipe, or one hundred fifty (150) feet in 3" pipe.**

**NOTE:** There is no minimum length for the intake air pipe run.

- The **total length** of the exhaust vent pipe run **must not be less than six (6) feet.**
- The **total length** of the exhaust vent pipe run **must not exceed one hundred (100) feet in 2" pipe, or one hundred fifty (150) feet in 3" pipe.**

| Minimum - Maximum Vent Run Lengths |              |              |
|------------------------------------|--------------|--------------|
| Diameter                           | 2"           | 3"           |
| Intake Air Pipe Run                | 0 - 100 feet | 0 - 150 feet |
| Exhaust Vent Run                   | 6 - 100 feet | 6 - 150 feet |

Table 14 - Minimum - Maximum Vent Runs

- The equivalent length of elbows, tees, and other fittings are listed in the Friction Loss Table below.

| Friction Loss Equivalent in Piping and Fittings |                 |
|---|-----------------|
| Fittings or Piping                              | Equivalent Feet |
|   | 2" or 3"        |
| 90 Degree Elbow *                               | 5'              |
| 45 Degree Elbow                                 | 3'              |
| Coupling  | 0'              |
| One Foot of Straight Pipe                       | 1'              |
| Concentric Kit                                  | 3'              |

Table 15 - \*Friction loss for long radius elbow is 1 foot less. **NOTE:** Consult Polypropylene venting instructions for friction loss and pressure drop equivalents.

#### Vent Sizing Example

If the exhaust vent run has two 90° elbows, 10 feet of straight pipe and a concentric kit we will calculate:

**Exhaust Vent Equivalent Length** =  $(2 \times 5) + 10 + 3 = 23$  feet - Well below the maximum of 100 ft in 2" pipe, or 150 ft in 3" pipe.

If the intake air pipe run has one 90° elbow, two 45° elbows, and 14 feet of straight pipe:

**Intake Air Pipe Equivalent Length** =  $5 + (2 \times 3) + 14 = 25$  feet -

Well below the maximum of 100 ft in 2" pipe, or 150 ft in 3" pipe.

**NOTE:** The intake air pipe and exhaust vent do not have to be of equal length. There is no balancing requirement between intake and exhaust.

### ! WARNING

Failure to install the boiler within the minimum and maximum vent length requirements could result in improper product operation and property damage, serious personal injury, or death.

### F. Tightening Boiler Collar to Exhaust Vent and Intake Pipe

Follow the steps to install exhaust vent pipe into the boiler vent collar. See Figure 23 for additional details.

**NOTE:** Clean and dry the boiler connection.

DO NOT use primer or cement on the boiler connection.

When preparing pipe for installation:

- Ensure cuts are square.
- Bevel cut edges by 1/16" - 1/8". Deburr the pipe.
- Lubricate the gasket.

- Push the length of pipe into the connection until it touches the bottom of the fitting.
- Tighten the clamps using a screwdriver.
- Ensure the pipe is secure before continuing installation.

**NOTE:** To install intake pipe, follow the steps for installing exhaust vent pipe.

### ! WARNING

When venting with PVC, first install the included 5" length of 3" CPVC into the boiler's exhaust connection, then adapt to PVC using approved CPVC to PVC transition cement. Installing PVC pipe into the boiler's exhaust connection is strictly prohibited - the strain of the gear clamp combined with heat can deform PVC over time and result in flue gas leakage causing property damage, severe personal injury, or death.

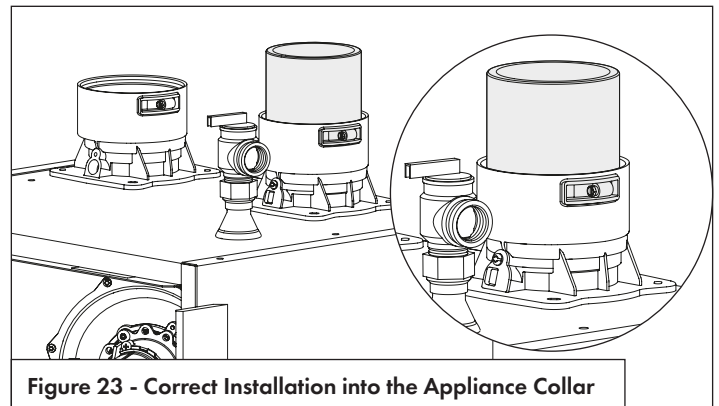


Figure 23 - Correct Installation into the Appliance Collar

G. Exhaust Vent and Intake Pipe Installation

**! WARNING**

All joints of positive pressure vent systems must be sealed completely to prevent leakage of flue products into the living space. Failure to do so could result in property damage, serious injury, or death.

1. Use only solid PVC, CPVC, or stainless steel pipe or a Polypropylene vent system approved for use with Category IV appliances. ABS pipe material may be used on air inlet piping **only**.
2. Remove all burrs and debris from joints and fittings.
3. When using PVC or CPVC pipe, all joints must be properly cleaned, primed, and cemented.  
Use only cement and primer approved for use with the pipe material. Cement must conform to ASTM D2564 for PVC and ASTM F493 for CPVC pipe.  
**NOTE: DO NOT CEMENT POLYPROPYLENE PIPE.**
4. Ensure the vent is located where it will not be exposed to prevailing winds.
5. In all roof venting applications, exhaust discharge must point away from the pitch of the roof.
6. If the exhaust vent is to be terminated in a walled off area (such as a roof with a parapet wall), ensure the exhaust vent terminates a minimum of 10' from nearest wall and extends level with or above the top of the wall.  
This will ensure flue gas does not get trapped and possibly recirculated into the intake air pipe, which could contaminate the combustion air.
7. To prevent water leakage, install adequate roof flashing where the pipe enters the roof.
8. If it can be avoided do not locate vent directly over public walkways, driveways, or parking lots in climates where freezing conditions are possible.  
Condensate could drip and freeze, resulting in a slip hazard or damage to vehicles or machinery.
9. Due to potential moisture build-up, sidewall venting may not be the preferred venting option. To save time and cost, carefully consider venting installation and location.
10. Horizontal lengths of exhaust vent must slope back towards the boiler not less than 1/4" per foot to allow condensate to drain from the vent pipe.
11. Do not terminate vent where vapors can accumulate and harm people or pets.
12. When it can be avoided, do not terminate vent where vapors can damage shrubs or plants. Such damages are not covered by product warranty.
13. Moisture in the exhaust gas will condense as it leaves the vent terminal. In cold weather this condensate can freeze on the exterior wall, under the eaves, and on surrounding objects, including shrubs.  
Some discoloration to the exterior of the building is to be expected. However, improper location or installation can result in severe damage to the structure or exterior finish of the building, and increase the opportunity for vent blockages and nuisance shutdowns.
14. In vacant chimney applications, install and seal a rain cap over existing chimney openings.
15. All piping must be fully supported. Use pipe hangers at a minimum of 4 foot intervals to prevent sagging of the pipe where condensate may form.
16. Do not use the boiler to support any piping.
17. Ensure the outdoor exhaust vent and intake pipe terminations are screened to prevent blockage caused by debris or birds. Vent screens are included with this boiler.

18. Maximum Snow Level Determination: These installation instructions reference snow levels in establishing a minimum height for the installation of exhaust vent or air intake terminations. Snow levels shall be determined as follows:
  - a. The installation location may, by ordinance, designate how snow levels are calculated in that location; or
  - b. In the absence of specific ordinances, snow levels shall be calculated from the average monthly maximum depth of snow accumulation as indicated by the National Weather Service's 10 year statistics for the installation location/geographical area.

In addition:

- Total length of vent piping shall not exceed the limits specified in this manual.
- The vent piping for this direct vented appliance is approved for zero clearance to combustible construction.
- The flue products coming from the exhaust vent will create a large plume when the heater is in operation. Avoid venting in areas that will affect neighboring buildings or be considered objectionable.
- DO NOT locate exhaust vent or intake pipe in a parking area where machinery may damage the pipe.
- DO NOT vent near soffit vents, crawl space vents, or other areas where condensate or vapor could create a nuisance or hazard or cause property damage.
- DO NOT vent where condensate vapor could cause damage or could be detrimental to the operation of regulators, relief valve, or other equipment.

**In the Commonwealth of Massachusetts and as Required by State and Local Codes:**

- The vented gas fueled appliance shall not be installed so its combustion, ventilation, or dilution air is obtained from a bedroom or bathroom.
- Signage: Whenever any through-the-wall (horizontal or sidewall) vent is installed less than seven feet above the finished grade, a metal or plastic identification plate shall be permanently mounted to the exterior of the building at a minimum height of eight feet above grade directly in line with the exhaust vent terminal. The sign shall read, in print no less than 0.5 inches in size, "GAS VENT DIRECTLY BELOW. KEEP CLEAR OF ALL OBSTRUCTIONS".
- Marking of Exhaust Vent and Intake Pipe: Piping used for ventilation, make-up, or combustion air intake shall be labeled as follows:
  - a. Throughout the entire developed length:
    - i. Labels must be placed every ten feet for exposed/visible piping; or
    - ii. Labels must be placed every three feet for concealed piping.
  - b. At all changes of direction;
  - c. On each side of a penetration through a partition, wall or ceiling; and
  - d. The labels shall be black lettering that:
    - i. Indicates that the piping is used for ventilation, make-up, or combustion air intake, and
    - ii. The letters shall be sized equal to a minimum of the pipe diameter. However, for piping with a diameter exceeding two inches, said lettering does not need to be larger than two inches.

The following table lists optional exhaust/intake terminations available from NTI:

| Description                        | Stock Code |
|------------------------------------|------------|
| 3" PVC Concentric Termination Kit  | 84634      |
| 3" PVC Low Profile Termination Kit | 84357      |
| 2" PVC Low Profile Termination Kit | 85062      |

**Table 16 - Optional Vent Kits**

## Part 5 - Venting

| Description  | Vent Size | Supplier Part Number      | Figure         | Vent Material Compatibility | Vent Option Availability |      |
|--|-----------|---------------------------|----------------|-----------------------------|--------------------------|------|
|  |           |                           |                |                             | Roof                     | Wall |
| <b>IPEX (or Equivalent) Low Profile (Wall)</b> <sup>7</sup>              | 2"        | 196984<br>(NTI p/n 85062) | 25, 29         | PVC/CPVC                    | No                       | Yes  |
|  | 3"        | 196985<br>(NTI p/n 84357) | 25, 29         |                             |                          |      |
| <b>IPEX (or Equivalent) Concentric (Wall/Roof)</b> <sup>4, 5, 6, 7</sup> | 2"        | 196125                    | 26, 30, 37, 41 |                             |                          |      |
|  | 3"        | 196116<br>(NTI p/n 84634) | 26, 30, 37, 41 |                             |                          |      |
|  |           | 196117                    | 26, 30, 37, 41 |                             |                          |      |
| <b>DuraVent Polypro® Concentric (Wall)</b>                               | 2 - 3"    | 2PPS-HK, 3PPS-HK          | 27, 31         |                             | Polypro® Polypropylene   | No   |
| <b>DuraVent Polypro® Concentric (Roof)</b>                               | 2 - 3"    | 2PPS-VK, 3PPS-VK          | 38, 42         | Yes                         |                          | No   |
| <b>InnoFlue® Flush Mount (Wall)</b>                                      | 2 - 3"    | ISLPT0202,<br>ISLPT0303   | 24, 28         | InnoFlue® Polypropylene     | No                       | Yes  |
| <b>InnoFlue® Concentric (Wall)</b>                                       | 2 - 3"    | ICRT2439,<br>ICTC0224     | 27, 31         |                             | No                       | Yes  |
| <b>InnoFlue® Concentric (Roof)</b>                                       | 2 - 3"    | ICRT3539,<br>ICTC0335     | 38, 42         |                             | Yes                      | No   |
| <b>Z-DENS® Concentric (Wall)</b>   | 2 - 3"    | 2ZDHK2, 2ZDHK3            | Not Shown      | Z-DENS® Polypropylene       | No                       | Yes  |
| <b>Z-DENS® Concentric (Roof)</b>   | 2 - 3"    | 2ZDVK2, 2ZDVK3            | Not Shown      |                             | Yes                      | No   |

### NOTES:

- Instructions included with termination kits contain detailed assembly and installation instructions.
- Clearance requirements in this manual supersede those of the instructions included with the vent terminal.
- Piping **MUST** be secured to the vent terminal during installation.
- IPEX Concentric Terminal **MUST** be cemented together and to the vent pipes during installation.
- Vent Screens provided with boiler may be used with the IPEX Concentric Vent Kits; otherwise use IPEX vent screens (2 in. vent screen p/n 196050; 3 in. vent screen p/n 196051 - each sold separately).
- IPEX Low Profile and Concentric kits (excluding p/n 197117) are constructed out of ULC-S636 approved PVC. Check with your local authority for the acceptance of PVC as a venting material prior to use.
- IPEX Concentric kits can be shortened to fit the requirements of the installation. See instructions included with the kit for more details.

Table 17 - Optional Vent Termination Kits

## H. Applications

### 1. Direct Vent Installation of Exhaust and Intake

If installing a direct vent option, combustion air must be drawn from the outdoors directly into the boiler intake, and exhaust must terminate outside. There are three basic direct vent options detailed in this manual:

- Side Wall Venting,
- Roof Venting, and
- Unbalanced Venting.

Be sure to locate the boiler such that the exhaust vent and intake pipe can be routed through the building and properly terminated. Different vent terminals can be used to simplify and eliminate multiple penetrations in the building structure (see Optional Equipment in Venting Section). The exhaust vent and intake pipe lengths, routing and termination methods must all comply with the methods and limits given in the Venting section of this manual.

When installing a combustion air intake from outdoors, care must be taken to utilize uncontaminated combustion air.

**NOTE:** To prevent combustion air contamination, see Table 6.

### ! WARNING

All vent pipes must be glued, properly supported, and the exhaust pitched a minimum of 1/4" per foot back to the boiler to allow drainage of condensate. When placing support brackets on vent piping, the first bracket must be within 1 foot of the boiler and the balance of 4 foot intervals on the vent pipe. Venting must be readily accessible for visual inspection from the first three feet from the boiler.

Take extra precaution to adequately support the weight of vent pipes terminating through the roof. Failure to properly support roof terminated piping could result in property damage, serious injury, or death.

Sidewall Venting Options - Direct Vent Installation

Two Pipe Termination

**! WARNING**

Exhaust must terminate a minimum of 18" above the air intake termination. See Figure 28 for more details.

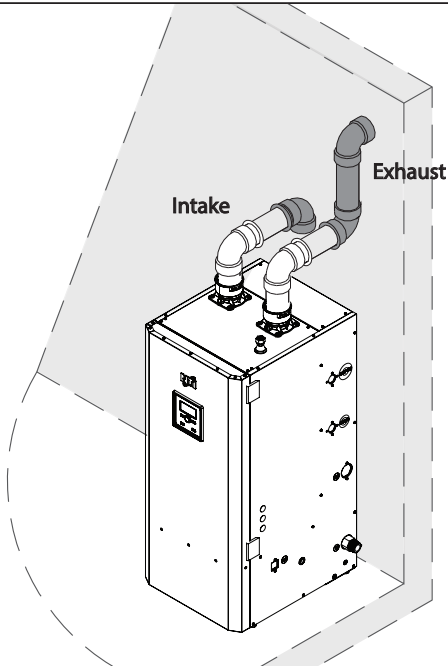


Figure 24 - Two Pipe Sidewall Venting

Low Profile Termination

**! WARNING**

Exhaust must terminate a minimum of 18" above the air intake termination. See Figure 29 for more details.

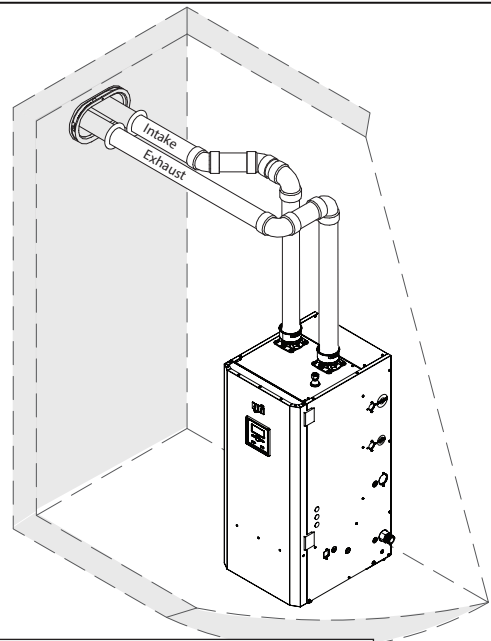


Figure 25 - Low Profile Sidewall Termination (with Optional IPEX Kit)

Concentric Termination

**! WARNING**

3" IPEX Concentric Termination illustrated. See Figure 30 for more details.

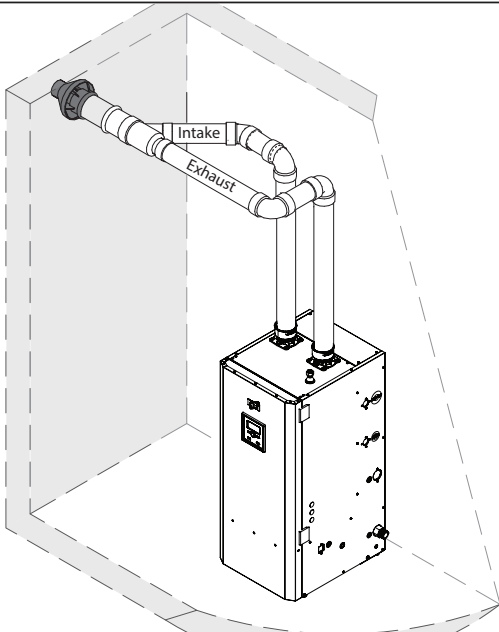


Figure 26 - Sidewall Concentric Termination (with Optional IPEX kit)

**! WARNING**

3" Duravent / InnoFlue Concentric Termination illustrated. See Figure 31 for more details.

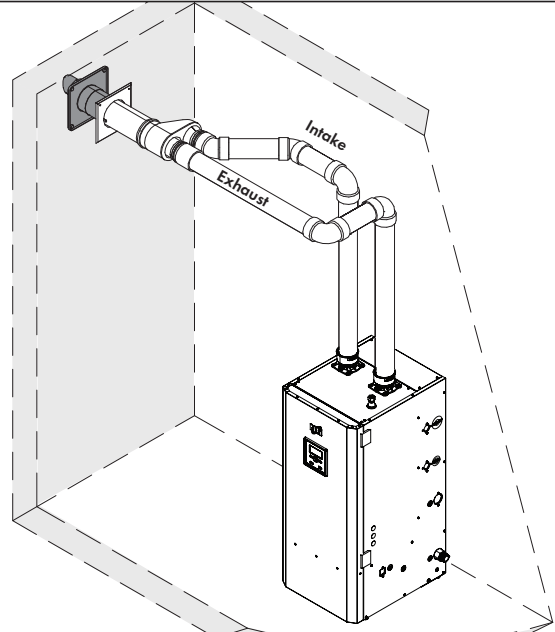


Figure 27 - Sidewall Concentric Termination (with Optional Duravent / InnoFlue Kit)

**NOTE:** These drawings are meant to demonstrate system venting only. The installer is responsible for all equipment and detailing required by local codes.

## Part 5 - Venting

### Sidewall Venting Options - Direct Vent Installation

#### Two Pipe Termination

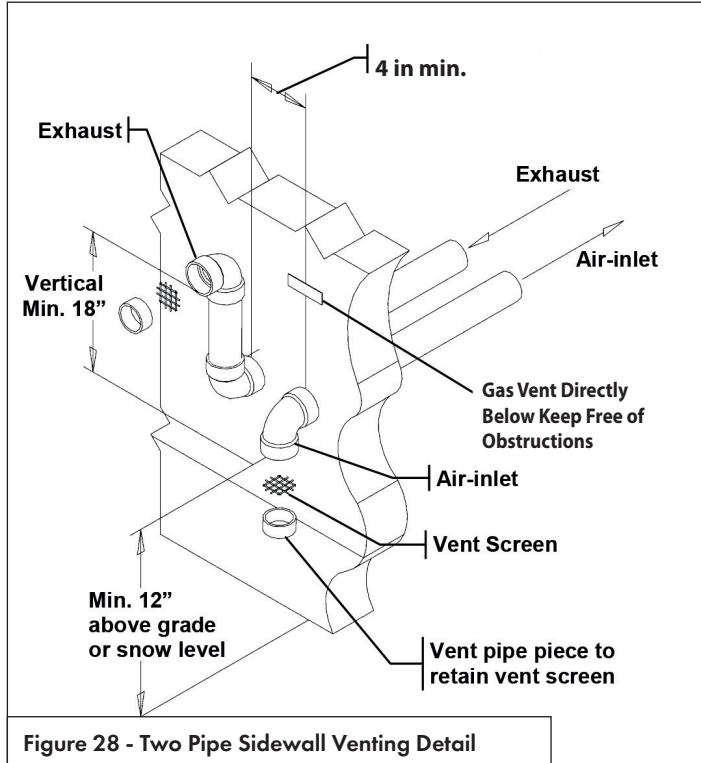


Figure 28 - Two Pipe Sidewall Venting Detail

#### Concentric Termination

### ! WARNING

Refer to documentation included with termination kit for complete installation instructions.

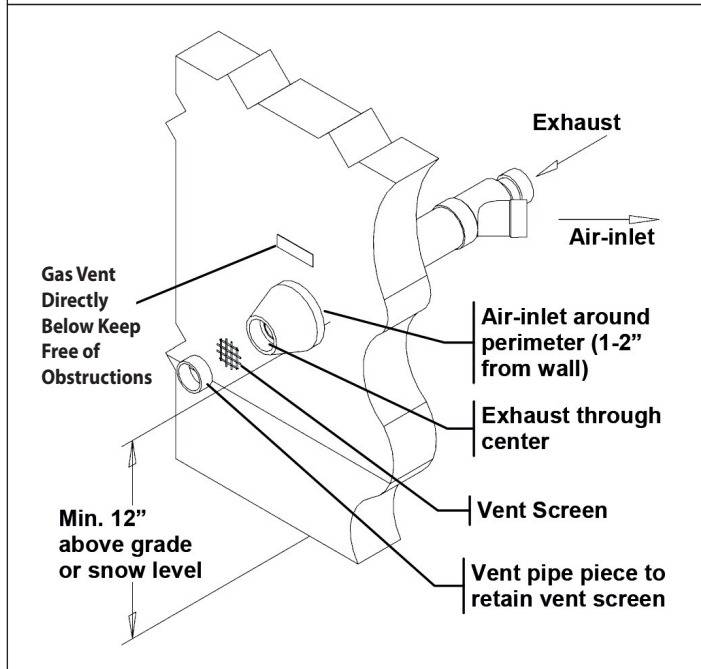


Figure 30 - Sidewall Concentric Termination (with Optional IPEX kit)

#### Low Profile Termination

### ! WARNING

Refer to documentation included with termination kit for complete installation instructions.

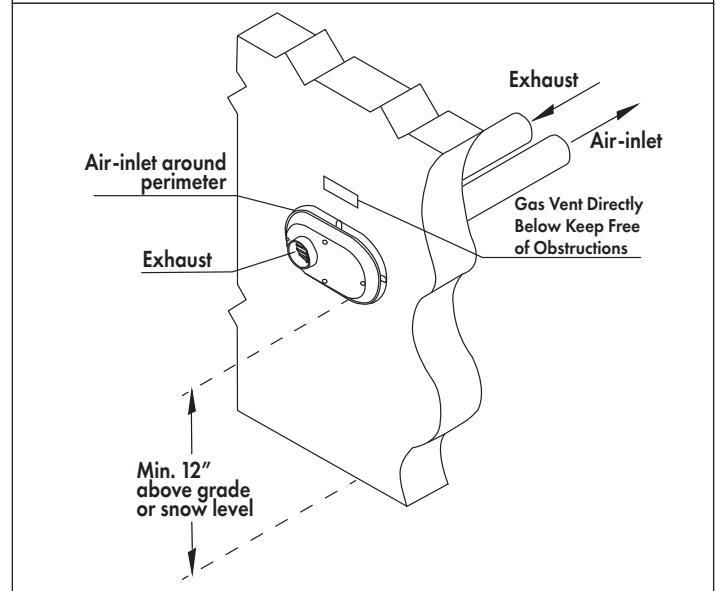


Figure 29 - Low Profile Sidewall Termination (with Optional IPEX Kit)

### ! WARNING

Refer to documentation included with termination kit for complete installation instructions.

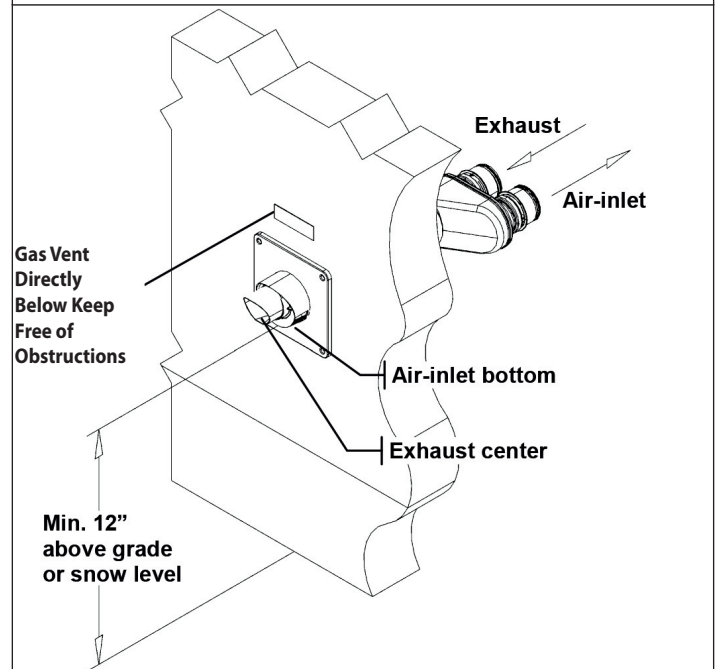


Figure 31 - Sidewall Concentric Termination (with Optional Duravent / InnoFlue Kit)

**NOTE:** These drawings are meant to demonstrate system venting only. The installer is responsible for all equipment and detailing required by local codes.



### Snorkel Venting (Two Pipe Sidewall Venting Terminations Beneath an Overhang)

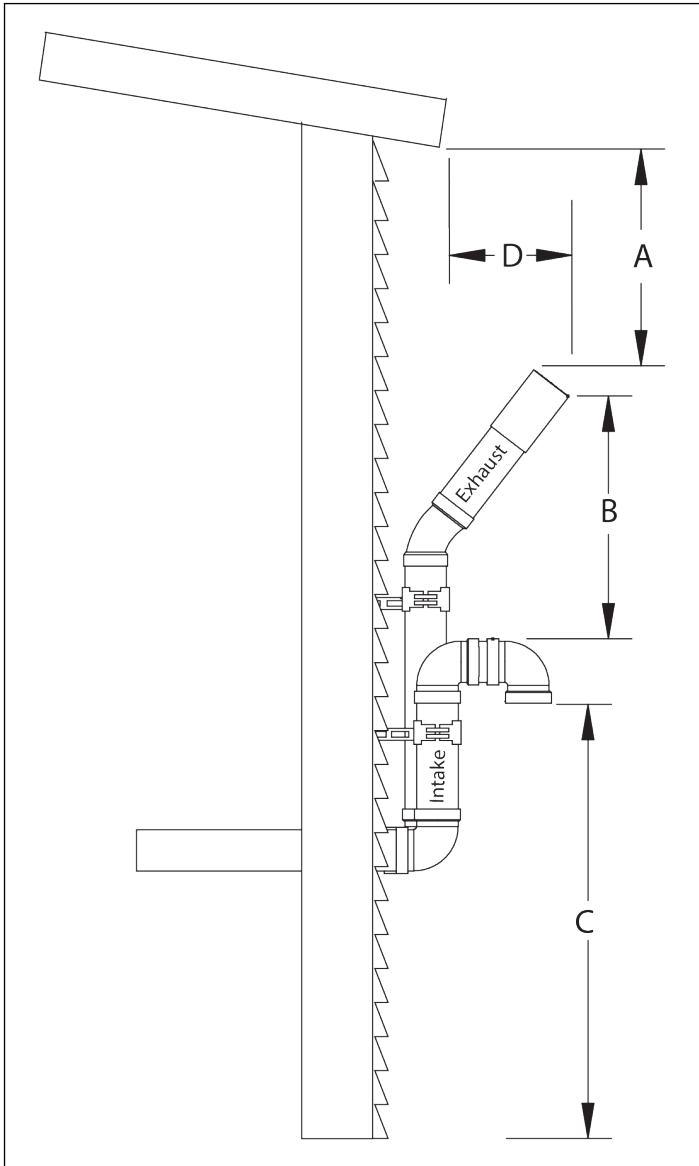


Figure 32 - Two Pipe Sidewall (Horizontal Snorkel) Venting

**NOTES:**

- A. For every 1" of overhang, the exhaust vent must be located 1" vertical below the overhang (12" minimum). Overhang means top of building structure (roof) and not two adjacent walls (corner of building).
- B. Maintain minimum separation between exhaust vent and air intake sidewall terminations, as required by local codes.
- C. Maintain 12" minimum clearance above highest anticipated snow level or grade (whichever is greater).
- D. The exhaust vent must extend a minimum of 12" to a maximum of 24" beyond the building.

**NOTE:** These drawings are meant to demonstrate system venting only. The installer is responsible for all equipment and detailing required by local codes.

### Venting Below Grade

For installations that exit the wall below grade:

1. Excavate the site to a point where the pipes are to exit as shown in Figure 33.
2. Ensure the wall is fully sealed where the pipes penetrate.
3. The exhaust vent / air intake piping **MUST** be secured to the side of the building above grade, as shown, to provide rigidity.
4. Ensure that the exhaust vent / air intake clearances are maintained.

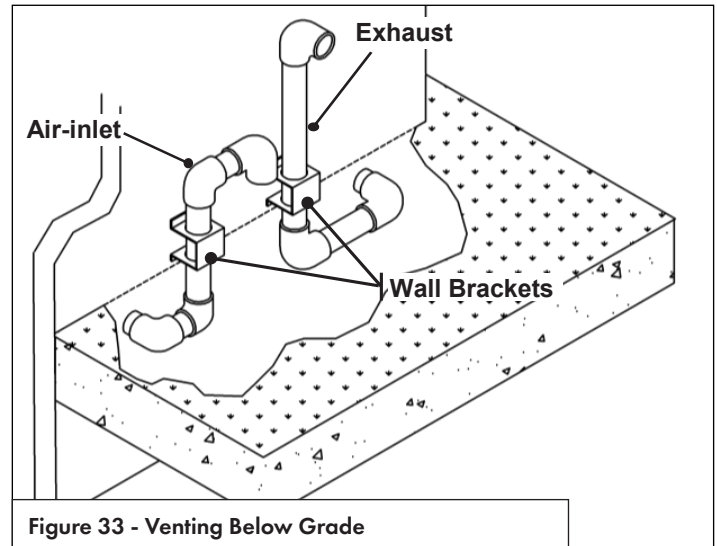


Figure 33 - Venting Below Grade

### Outdoor Venting

Vent piping outside the building is permitted under the following conditions:

1. The maximum length outside the building is 20 feet (6.1 m). Note that outdoor length must be included in the overall vent length calculation.
2. All normal termination clearances are maintained.
3. The pipe is supported every 24" (610 mm).
4. The exhaust and air intake are sloped back to the boiler 1/2" elevation for every linear foot (13 mm for every linear 305 mm).

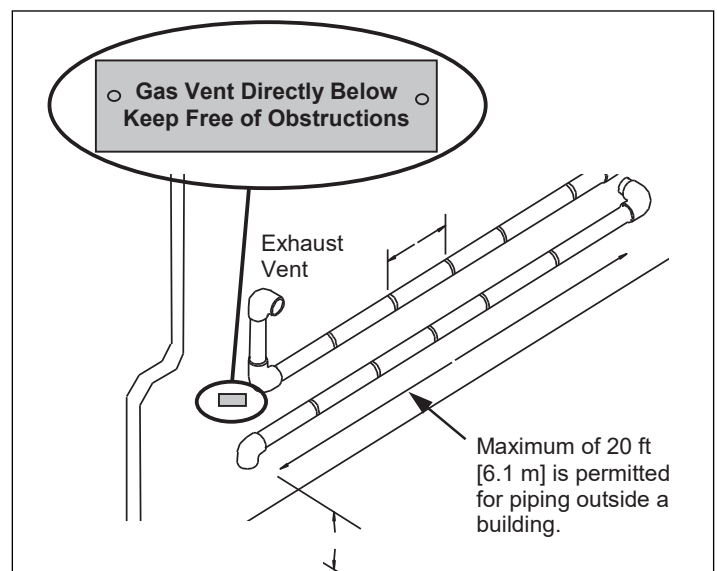


Figure 34 - Outdoor Venting

## Part 5 - Venting

### Roof Venting Options - Direct Vent Installation

#### Two Pipe Termination

#### ! WARNING

Exhaust must terminate a minimum of 18" above the air intake termination. See Figure 39 for more details.

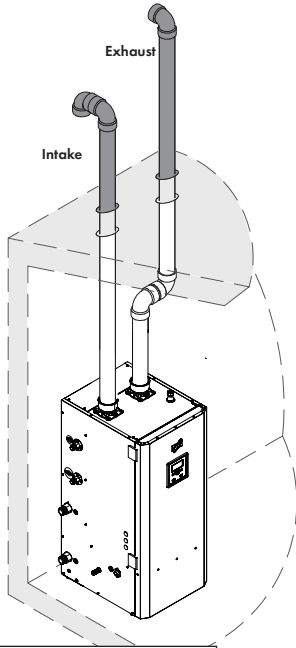


Figure 35 - Two Pipe Roof Venting

#### Unbalanced Termination (Roof Exhaust / Sidewall Intake)

#### ! WARNING

Exhaust must terminate a minimum of 12" above snow level. See Figure 40 for more details.

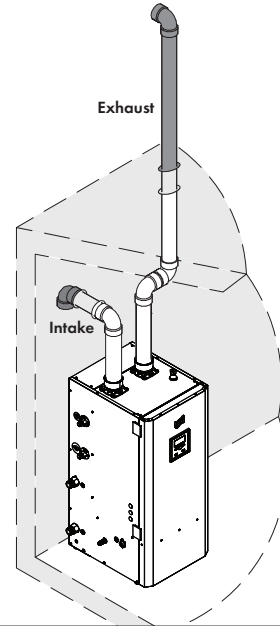


Figure 36 - Unbalanced Venting -  
Roof Exhaust and Sidewall Intake

#### Concentric Termination

#### ! WARNING

3" IPEX Concentric Termination illustrated. See Figure 41 for more details.

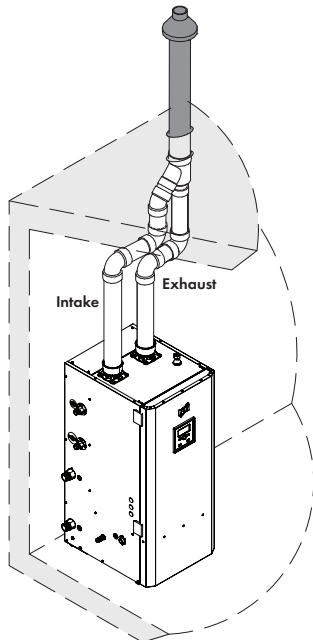


Figure 37 - Roof Concentric Termination (with Optional IPEX kit)

#### ! WARNING

3" Polypro / InnoFlue Concentric Termination illustrated. See Figure 42 for more details.

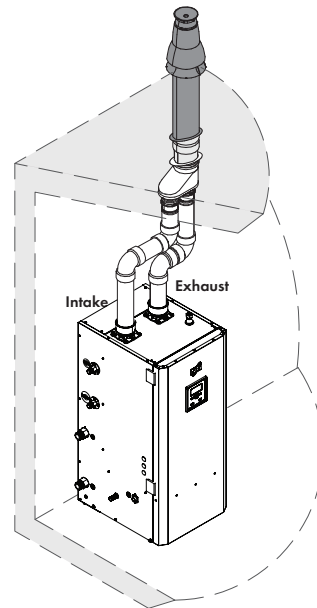


Figure 38 - Roof Concentric Termination  
(with Optional DuraVent / InnoFlue Kit)

**NOTE:** These drawings are meant to demonstrate system venting only. The installer is responsible for all equipment and detailing required by local codes.

Roof Venting Options - Direct Vent Installation

Two Pipe Termination

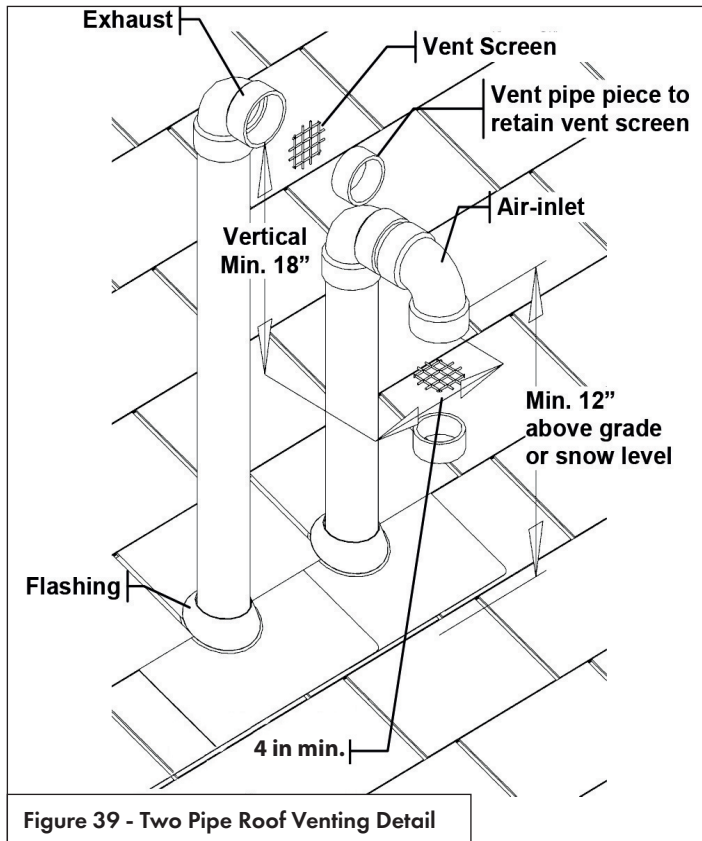


Figure 39 - Two Pipe Roof Venting Detail

Unbalanced Venting - Roof Exhaust Termination

**! WARNING**

Figure 40 illustrates two options for exhaust termination only. Neither vent pipe illustrated is intended for combustion air intake.

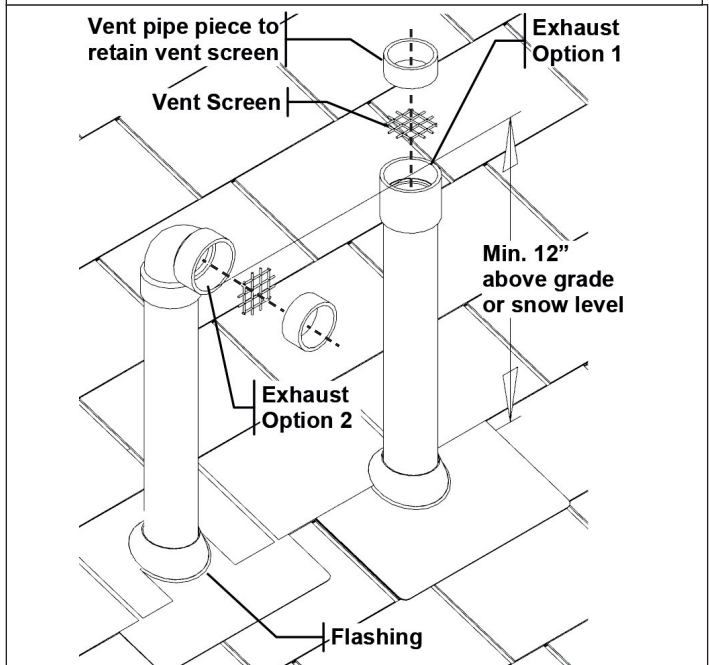


Figure 40 - Unbalanced Venting - Roof Exhaust Termination Options

Concentric Termination

**! WARNING**

Refer to documentation included with termination kit for complete installation instructions.

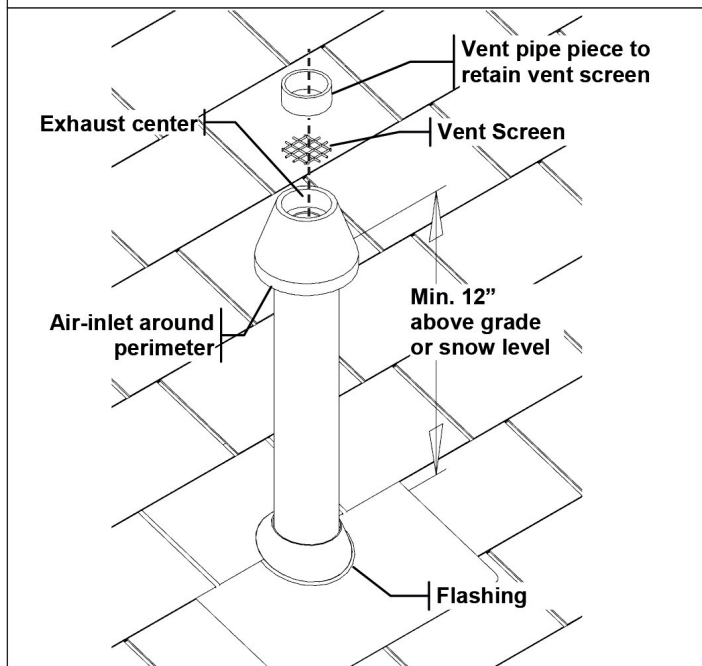


Figure 41 - Roof Concentric Termination (with Optional IPEX kit)

**! WARNING**

Refer to documentation included with termination kit for complete installation instructions.

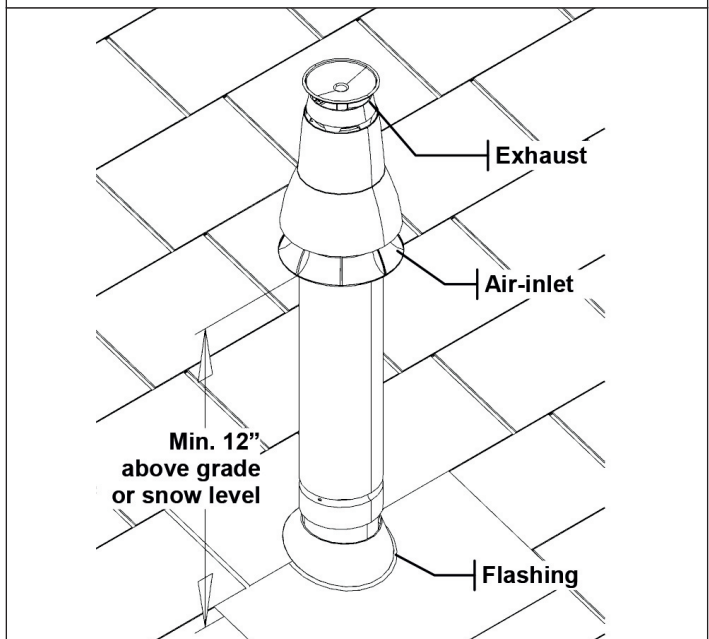


Figure 42 - Roof Concentric Termination (with Optional DuraVent / InnoFlue Kit)

**NOTE:** These drawings are meant to demonstrate system venting only. The installer is responsible for all equipment and detailing required by local codes.

## Part 5 - Venting

### 2. Venting Through an Existing System

This boiler may be vented through an existing unused vent system. The inner diameter of the existing vent system is utilized for the combustion air source. Two methods have been approved for such venting: Concentric Venting Through an Existing System and Venting as a Chase.

| Vent / Air Inlet Size | Minimum Existing Vent / Chase Size |
|-----------------------|------------------------------------|
| 2"                    | 4"                                 |
| 3"                    | 5"                                 |

Table 18 - Minimum Existing Vent / Chase Sizing

### **!** DANGER

Do not install the boiler into a common existing vent with any other appliance. This will cause flue gas spillage or boiler malfunction, resulting in substantial property damage, serious personal injury, or death.

The upper and lower vent terminations as well as all joints in the venting system must be properly sealed to ensure that all combustion air is drawn properly and exhaust does not leak from the system. Failure to properly seal the venting system will result in property damage, serious personal injury, or death.

### CAUTION

Contractors must check state and local codes before installing through an existing vent opening. State and local codes always take precedence over manufacturer's instructions. Failure to check state and local codes before installing through an existing opening could result in property damage and add significantly to installation costs.

If an existing venting system is converted for use with this boiler, the installer must ensure that the existing venting system is clean and free from particulate contamination that could damage the boiler. Failure to do so could result in property damage and boiler failure. Such failure IS NOT covered under warranty.

### Concentric Venting Through an Existing System

NOTE: The following instructions refer only to venting through an existing vent system, and not to venting with NTI's optional concentric vent kits. Refer to Concentric Vent Kit installation manual (LP-166) for further information on venting with the optional concentric vent kits. Concentric venting through an existing system must run vertically through the roof. See Table 18 for proper minimum vent sizing. Use only the approved venting materials specified in Table 12 for piping the system. All instructions listed in this Venting section apply. See Figures 43-1 and 43-2 for venting demonstrations.

### Chase Venting Through an Existing System

When venting as a chase, follow all instructions included in this Venting section, including those in the previous Concentric Venting Through an Existing System section. See Figure 43-3 for chase venting demonstration.

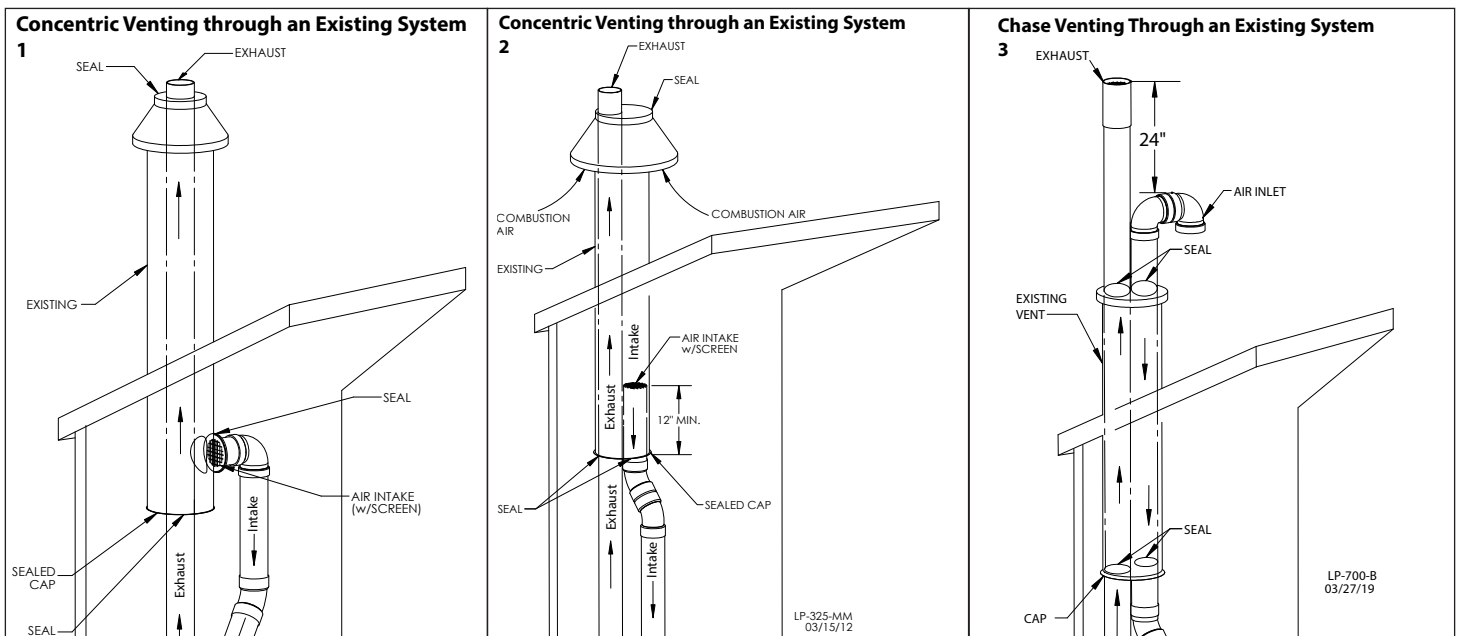


Figure 43 - 1, 2 - Concentric Venting Through an Existing System, 3, Chase Venting Through an Existing System

NOTE: These drawings are meant to demonstrate system venting only. The installer is responsible for all equipment and detailing required by local codes.

**3. Power Venting, Indoor Combustion Air in Confined or Unconfined Space**

This boiler requires fresh, uncontaminated air for safe operation and must be installed in a mechanical room where there is adequate combustion and ventilating air. **NOTE: To prevent combustion air contamination, see Table 6.**

When the installation uses Indoor Combustion Air, provisions for combustion and ventilation air, in accordance with section "Air for Combustion and Ventilation," of the National Fuel Gas Code, ANSI Z223.1/NFPA 54 (USA), or Clause 8.2, 8.3 or 8.4 of the Natural Gas and Propane Installation Code, CAN/CSA B149.1 (Canada), or applicable provisions of the local building codes, must be adhered to.

Combustion air from the indoor space can be used if the space has adequate area or when air is provided through a duct or louver to supply sufficient combustion air based on the boiler input. **Never obstruct the supply of combustion air to the boiler.** If the boiler is installed in areas where indoor air is contaminated (see Figure 44) it is imperative that the boiler be installed as direct vent so that all combustion air is taken directly from the outdoors into the boiler intake connection.

**Unconfined space** is space with volume greater than 50 cubic feet per 1,000 Btu/hour (4.8 cubic meters per kW) of the total input rating of all fuel-burning appliances installed in that space. Rooms connected directly to this space, through openings not furnished with doors, are considered part of the space.

**Confined space** is space with volume less than 50 cubic feet per 1,000 Btu/hour (4.8 cubic meters per kW) of the total input rating of all fuel-burning appliances installed in that space. Rooms connected directly to this space, through openings not furnished with doors, are considered part of the space.

When drawing combustion air from inside a conventionally constructed building to a confined space, such space should be provided with two permanent openings: one located 6" (15 cm) below the space ceiling, the other 6" (15cm) above the space floor. Each opening should have a free area of one square inch per 1,000 Btu/hr (22cm<sup>2</sup>/kW) of the total input of all appliances in the space, but not less than 100 square inches (645cm<sup>2</sup>).

If the confined space is within a building of tight construction, air for combustion must be obtained from the outdoors as outlined in the Venting section of this manual. See Figure 45.

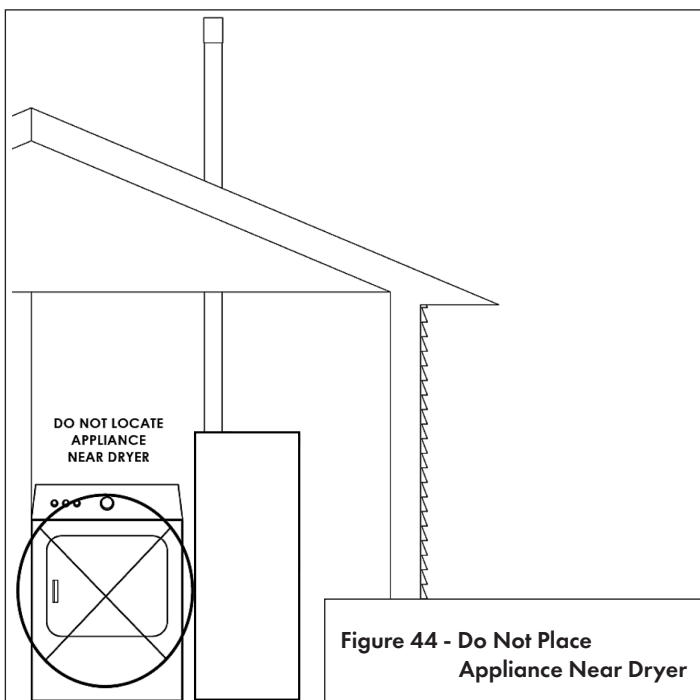


Figure 44 - Do Not Place Appliance Near Dryer

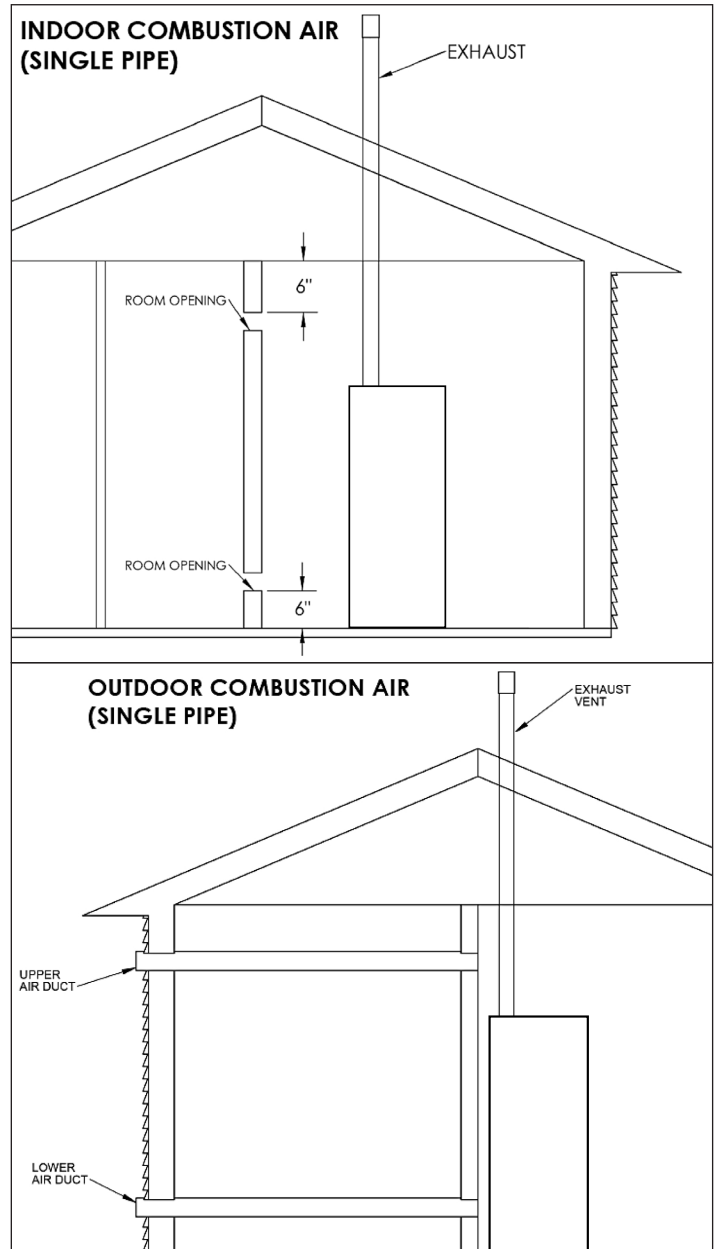



Figure 45 - Indoor and Outdoor Combustion Air - Single Pipe

**⚠ WARNING**

**Breathing Hazard - Carbon Monoxide Gas**



- Do not operate heater if flood damaged.
- Install vent system in accordance with local codes and manufacturers installation instructions.
- Do not obstruct heater air intake or exhaust. Support all vent piping per manufacturers installation instructions.
- Do not place chemical vapor emitting products near unit.
- According to NFPA 720, carbon monoxide detectors should be installed outside each sleeping area.
- Never operate the heater unless it is vented to the outdoors.
- Analyze the entire vent system to make sure that condensate will not become trapped in a section of vent pipe and therefore reduce the open cross sectional area of the vent.

Breathing carbon monoxide can cause brain damage or death. Always read and understand instruction manual.

### CAUTION

This condensing high efficiency boiler has a condensate removal system. Condensate is water vapor derived from combustion products, similar to that produced by an automobile when it is initially started. It is very important that the condensate line is sloped down away from the boiler and to a suitable drain.

The condensate line must remain unobstructed. If allowed to freeze in the line or obstructed in any other manner, condensate can exit from the boiler tee, resulting in potential water damage to property.

When installing a condensate pump, select one approved for use with condensing boilers and furnaces. The condensate pump should have an overflow switch to prevent property damage from spillage.

Condensate from the boiler will be slightly acidic (pH from 2 to 4.5). Check with your local gas company to determine if combustion condensate disposal is permitted in your area. Install a neutralizing filter if required by local codes.


#### NOTES:

1. Due to its efficient design, the boiler produces condensate (water) as a normal by-product. This condensate is acidic, with a pH level between 2 and 4.5. This condensate must be drained away from the boiler and disposed in accordance with all local regulations.
2. The condensate line should be as short as possible and must be pitched at least  $\frac{1}{4}$ " per foot to properly drain. If this cannot be done, increase the condensate line to a minimum of 1" ID and place a tee in the line to properly reduce vacuum lock in the drain line. Tees should be placed after the condensate neutralizer (if used).
3. Use corrosion-resistant materials to drain condensate. Use the included flexible plastic hose and flexible tube, PVC, or CPVC pipe. PVC or CPVC pipe must comply with ASTM D1785, F441, or D2665. Cement must comply with ASTM D2564 for PVC pipe or F493 for CPVC pipe. For Canadian applications, use CSA or ULC certified flexible tube, PVC or CPVC pipe, fittings, and cement.

4. If using flexible tube, place an overflow tee in the tube line to prevent condensate backing up into the boiler if the tube should kink. Ensure the overflow tee is positioned near a drain or in a location that will not damage the surrounding area.
5. Do not reduce the size of the condensate line. The line must at minimum equal the diameter of the line included with the appliance.
6. A frozen condensate line could result in a blocked vent condition. It is very important to protect the condensate line from freezing temperatures or any type of blockage. In installations that may encounter sustained freezing conditions, the use of heat tape is recommended to avoid freezing of the condensate line. Longer condensate runs are more prone to freezing.
7. Support of the condensate line may be necessary to avoid blockage of the condensate flow.
8. Local building codes may require an in-line neutralizer to be installed (not included) to treat the condensate. See Figure 46. If required by local authorities, a condensate filter of lime crystals, marble, or phosphate chips will neutralize slightly acidic condensate. Follow all the installation instructions included with the neutralizer. If a neutralizer is installed, periodic replacement of the limestone (or neutralizing agent) will be required. The rate of depletion of the limestone varies with usage of the boiler. During the first year of boiler operation, check the neutralizer every few months for depletion.
9. Route the drain line to a nearby floor drain, laundry tub, or condensate pump. If the boiler condensate outlet is lower than the drain, you must use a condensate removal pump.
 

**NOTE:** If a nearby laundry tub is used as a disposal for waste water from the washing machine, draining the condensate into this tub allows the soapy water discharge to neutralize the acidic condensate.
10. An error will appear on the boiler display if condensate line is blocked. The boiler will not operate with a blocked condensate line. It is extremely important to have this condition repaired by a qualified service technician.
11. Damages due to frozen or blocked condensate lines or leaks ARE NOT covered by warranty.
 

**NOTE:** To clean out condensate trap, see Maintenance section.

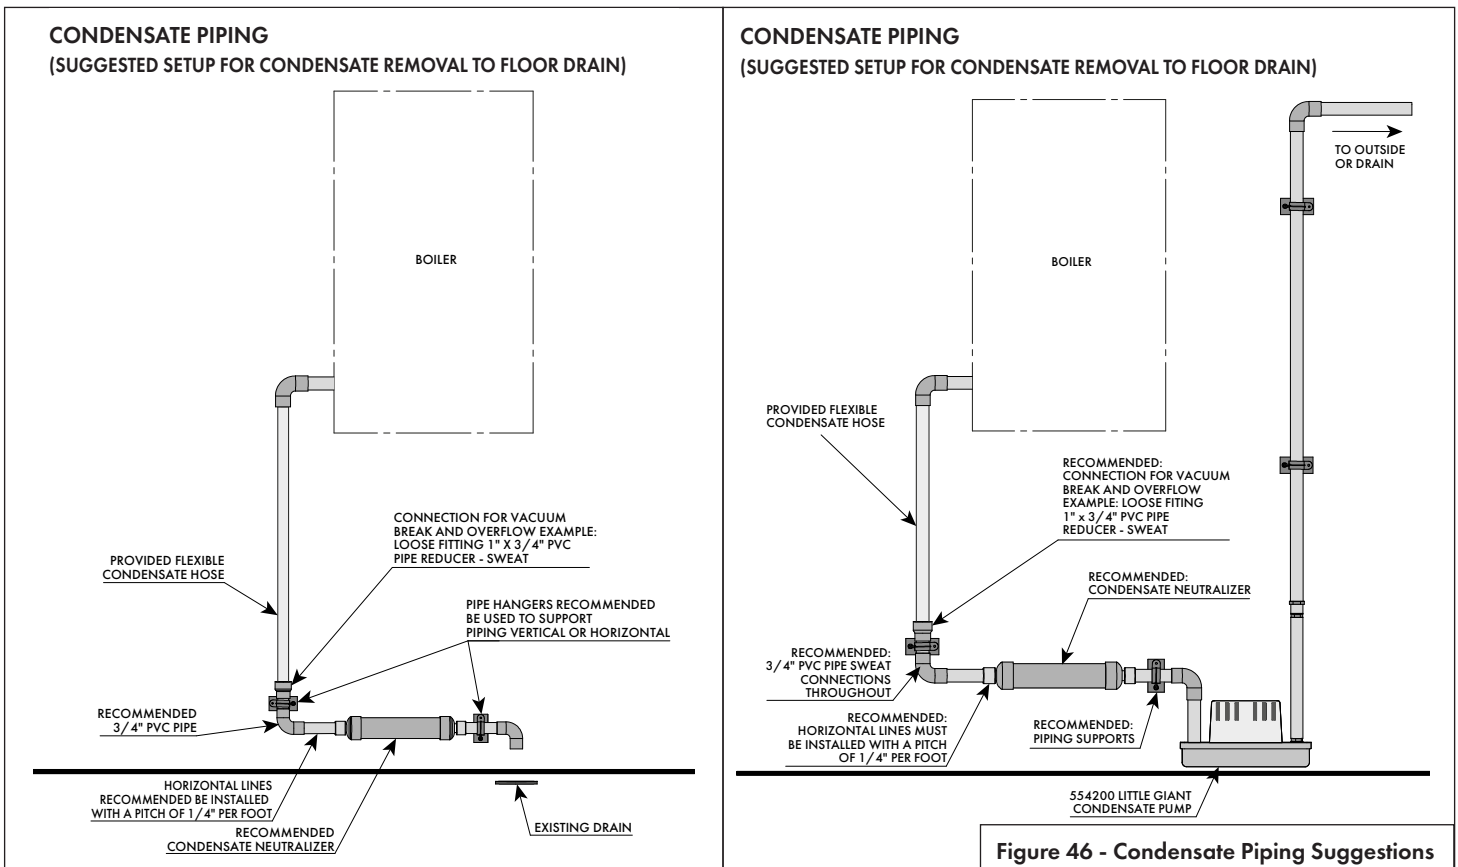

**! WARNING**

Install wiring and electrically ground boiler in accordance with the authority having jurisdiction or, in the absence of such an authority, follow the National Electrical Code, NFPA 70, and/or CSA C22.1 Electrical Code-Part 1 in Canada. Failure to follow all applicable local, state, and national regulations, mandates, and building supply codes for guidelines to install the electrical power supply could result in property damage, serious personal injury, or death.

**ELECTRICAL SHOCK HAZARD** – To ensure safety, turn off electrical power supply at service entrance panel before making any electrical connections to avoid possible electric shock hazard. Failure to do so could result in property damage, serious personal injury, or death.


Jumping out control circuits or components WILL VOID product warranty and can result in property damage, personal injury, or death.

It is of extreme importance that this unit be properly grounded. It is very important that the building system ground is inspected by a qualified electrician prior to making this connection. Electrical power must only be turned on when the boiler is completely filled with cold water. Failure to follow these instructions could result in component or product failure, serious injury, or death.


**A. Wiring**

The boiler is equipped with a three prong power cord. The boiler is limited to a maximum of 15 amps at 120 volts in use.

**Ensure the Appliance is Properly Grounded**

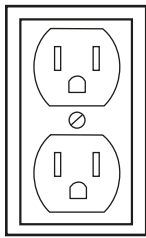

Grounded Electrical Outlet

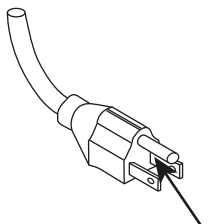

**WARNING! DO NOT REMOVE THIS GROUNDING PRONG FROM THE APPLIANCE PLUG!**

Figure 47 - Proper Grounding

**CAUTION**

Label all wires prior to disconnecting when servicing the boiler. Wiring errors can cause improper and dangerous operation. Failure to follow these instructions may result in property damage or personal injury.

**NOTE:** For additional electrical protection, the use of a whole house surge protector is recommended. Damage caused by power surges IS NOT covered by the warranty.

1. This boiler must be properly grounded. Ensure the electrical receptacle is properly grounded. Do not remove the grounding prong from the boiler plug.
2. Do not attach the ground wire to either the gas or water piping.
3. The wiring diagrams in this manual are to be used for reference purposes only.
4. Refer to these diagrams and the wiring diagrams of any external controls used with the installation when wiring the boiler. Read, understand, and follow all wiring instructions supplied with the controls.
5. Do not disconnect the power supply when the boiler is in normal operation.

**1. Connecting Power for DHW & CH Pumps (120V) and Zone Outputs (dry contact)**

To connect power for the CH and DHW external pumps and zone loads (pumps or valves) at the boiler junction box:

1. Shut off the power supply at the boiler and at the circuit breaker.
2. Shut off the gas at the manual shutoff.
3. Remove the boiler front cover.
4. Unlatch the bottom clips securing the junction box cover and rotate the cover upwards unhooking the cover at the top.
5. Insert the field wiring through the hole in the side panel; use an appropriate strain relief/conduit hub to secure the cable to the side panel.
6. Connect the field wiring to the respective output; see Figure 48. **NOTE:** CH PUMP & DHW PUMP output 120V directly. **NOTE:** ZONE 1 & ZONE 2 outputs are dry contact; power must be applied to one side. See examples in Figures 16-21.
7. Reconnect the cover of the junction box.
8. Reinstall the boiler front cover
9. Restore gas to the boiler.
10. Restore power to the boiler.

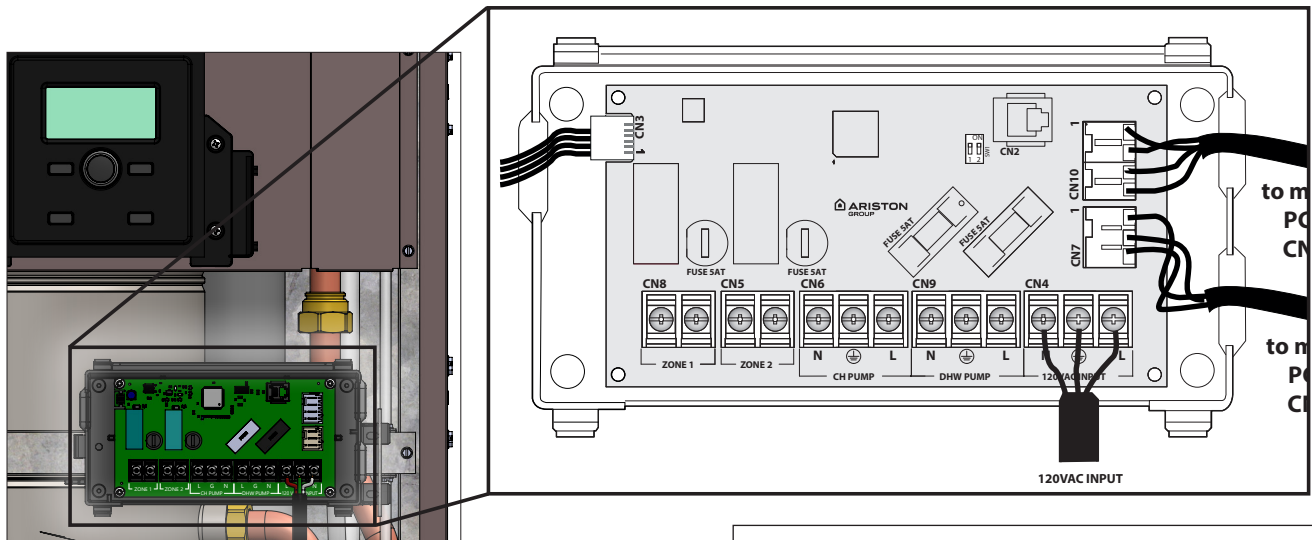


Figure 48 - 120V Connections for DHW and CH Circulators

## Part 7 - Connecting Electrical Service

### 2. Low Voltage Wiring Connections

To access the low voltage wiring connections:

1. Shut off the power supply at the boiler and at the circuit breaker.
2. Shut off the gas at the manual shutoff.
3. Remove the boiler front cover.
4. Push in the tabs and pull the control panel housing forward.
5. Disconnect the two clips. See Figure 49.

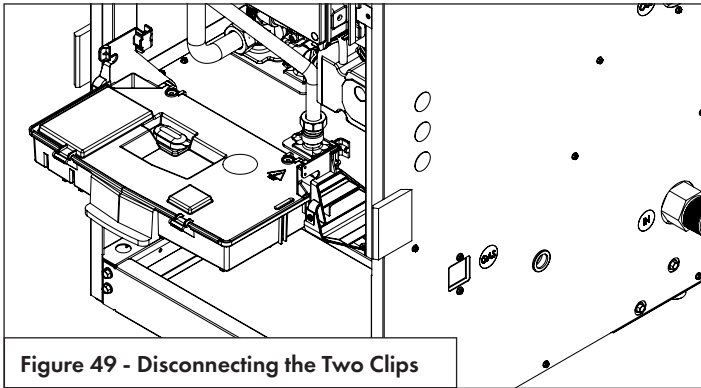


Figure 49 - Disconnecting the Two Clips

| Low Voltage Wiring Connections |   |
|--------------------------------|---|
| <b>BUS</b>                     | Remote Control Connection                   |
| <b>TT2</b>                     | Room Thermostat 2                           |
| <b>OD</b>                      | Outdoor Sensor                              |
| <b>TNK</b>                     | Tank Temperature Sensor (Probe / Aquastat)  |
| <b>SYS</b>                     | System Sensor (Cascade Manager boiler only) |
| <b>TT1</b>                     | Room Thermostat 1                           |

Table 19 - Low Voltage Wiring Connections

6. Open the control panel cover to have access to the main PCB. See Figure 50.

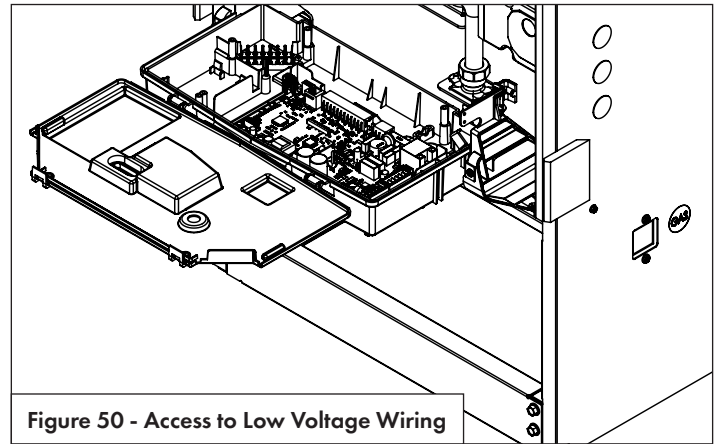


Figure 50 - Access to Low Voltage Wiring

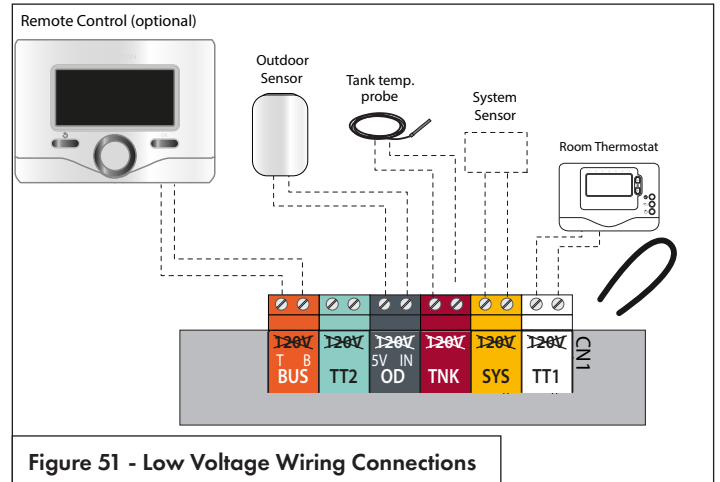


Figure 51 - Low Voltage Wiring Connections

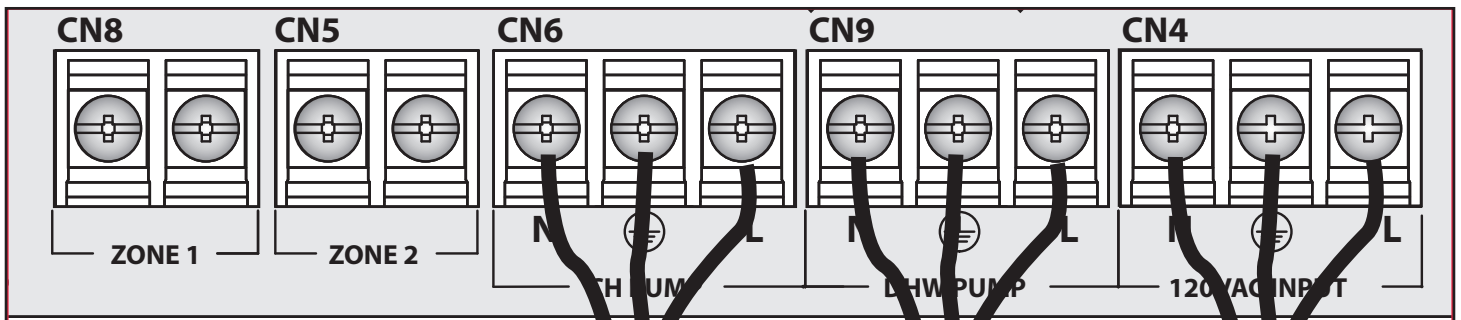


Figure 52 - Field Wiring Details

| Zone 1   | Zone 2 | CH PUMP  | DHW PUMP                          | 120 VAC INPUT               |
|--|--------|--|-----------------------------------|-----------------------------|
| Dry Contacts (NO)<br>up to 120 V   Fused @ 5 A   |        | 120 V AC Outputs<br>(to power external pumps)<br>Fused @ 5 A |                                   | Factory-wired<br>power cord |
| ZONE OUTPUTS – engaged when<br>a CH demand is applied to the<br>respective TT input (or via NTI<br>Room Sensor configured to an<br>individual zone). |        | <b>N:</b> NEUTRAL  | <b>G:</b> EARTH GROUND            | <b>L:</b> LINE (120 V AC)   |
|  |        | Energized on<br>CH demands.                                  | Energized only on<br>DHW demands. |                             |

Figure 53 - Field Wiring Details



**CAUTION**

DO NOT CONNECT 120V TO ANY CONTROL WIRING CONNECTION! DOING SO WILL RESULT IN IMPROPER OPERATION AND POSSIBLE DAMAGE TO THE BOILER. SUCH DAMAGES ARE NOT COVERED BY PRODUCT WARRANTY!

**NOTICE**

Remove the factory installed jumper from TT1.

**3. Room Thermostat Wiring Connections**

To connect a room thermostat:


1. Access the low voltage wiring connections by following the directions in Item 3, Low Voltage Wiring Connections.
2. Loosen the cable clamp using a screwdriver and insert the wires leading from the room thermostat.
3. Connect the room thermostat wires to the terminals indicated in Table 19 and Figure 51.
4. Ensure that the wires are well connected and not subject to stress when the control panel or cabinet cover are closed.

**CAUTION**

NOTE: Some newer thermostat models may draw too much power from the boiler and will require an additional power supply to operate properly. Review the instructions provided with the thermostat to determine if an additional power supply is needed. Failure to do so could result in improper boiler and/or thermostat operation.

**4. Outdoor Sensor Connections**

**NOTE: WHEN CONNECTING THE BOILER TO EXTERNAL CONTROLS, DO NOT RUN 120V CABLES AND CABLES FOR CONTROL CIRCUITS (WHICH ARE LOW VOLTAGE) TOGETHER. USE SEPARATE CABLES TO PREVENT INDUCED VOLTAGE ON THE LOW VOLTAGE CIRCUITS.**

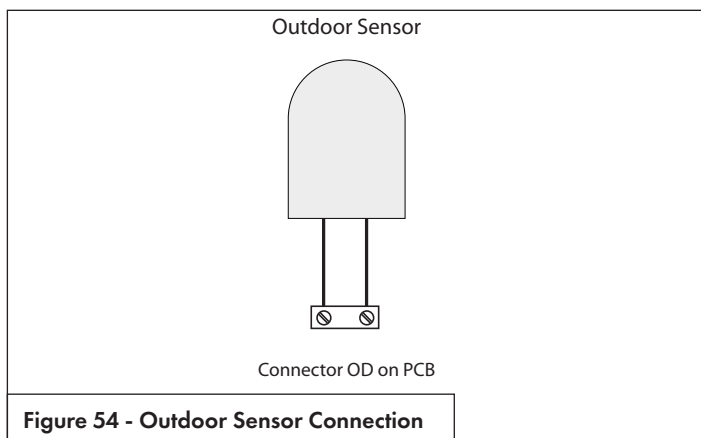

**5. Aquastat (Default) and Tank Sensor (Optional) Connections (non-Combi Models)**

The boiler is designed for managing the production of domestic hot water via an indirect water heater (IWH) in one of two ways:

1. **AQUASTAT (default)** - with DHW Mode = 2, the tank temperature is managed through an ON/OFF aquastat installed in the tank.
2. **TANK SENSOR (optional)** - with the DHW Mode = 1, the boiler manages the IWH temperature directly via an NTC sensor installed in the tank and connected to the boiler (see electrical diagram). The setting of the tank temperature can be adjusted by the DHW Setpoint, accessed from the DHW Setup menu of either the User or Tech Menu.

**NOTE:** When an aquastat or a tank sensor is equipped, the boiler target temperature for DHW IWH demands can be adjusted via the Modulation Setpoint (accessed from the Advanced Settings menu under Tech Menu - DHW Setup) - default setting is 179°F.

B. Internal Wiring Details

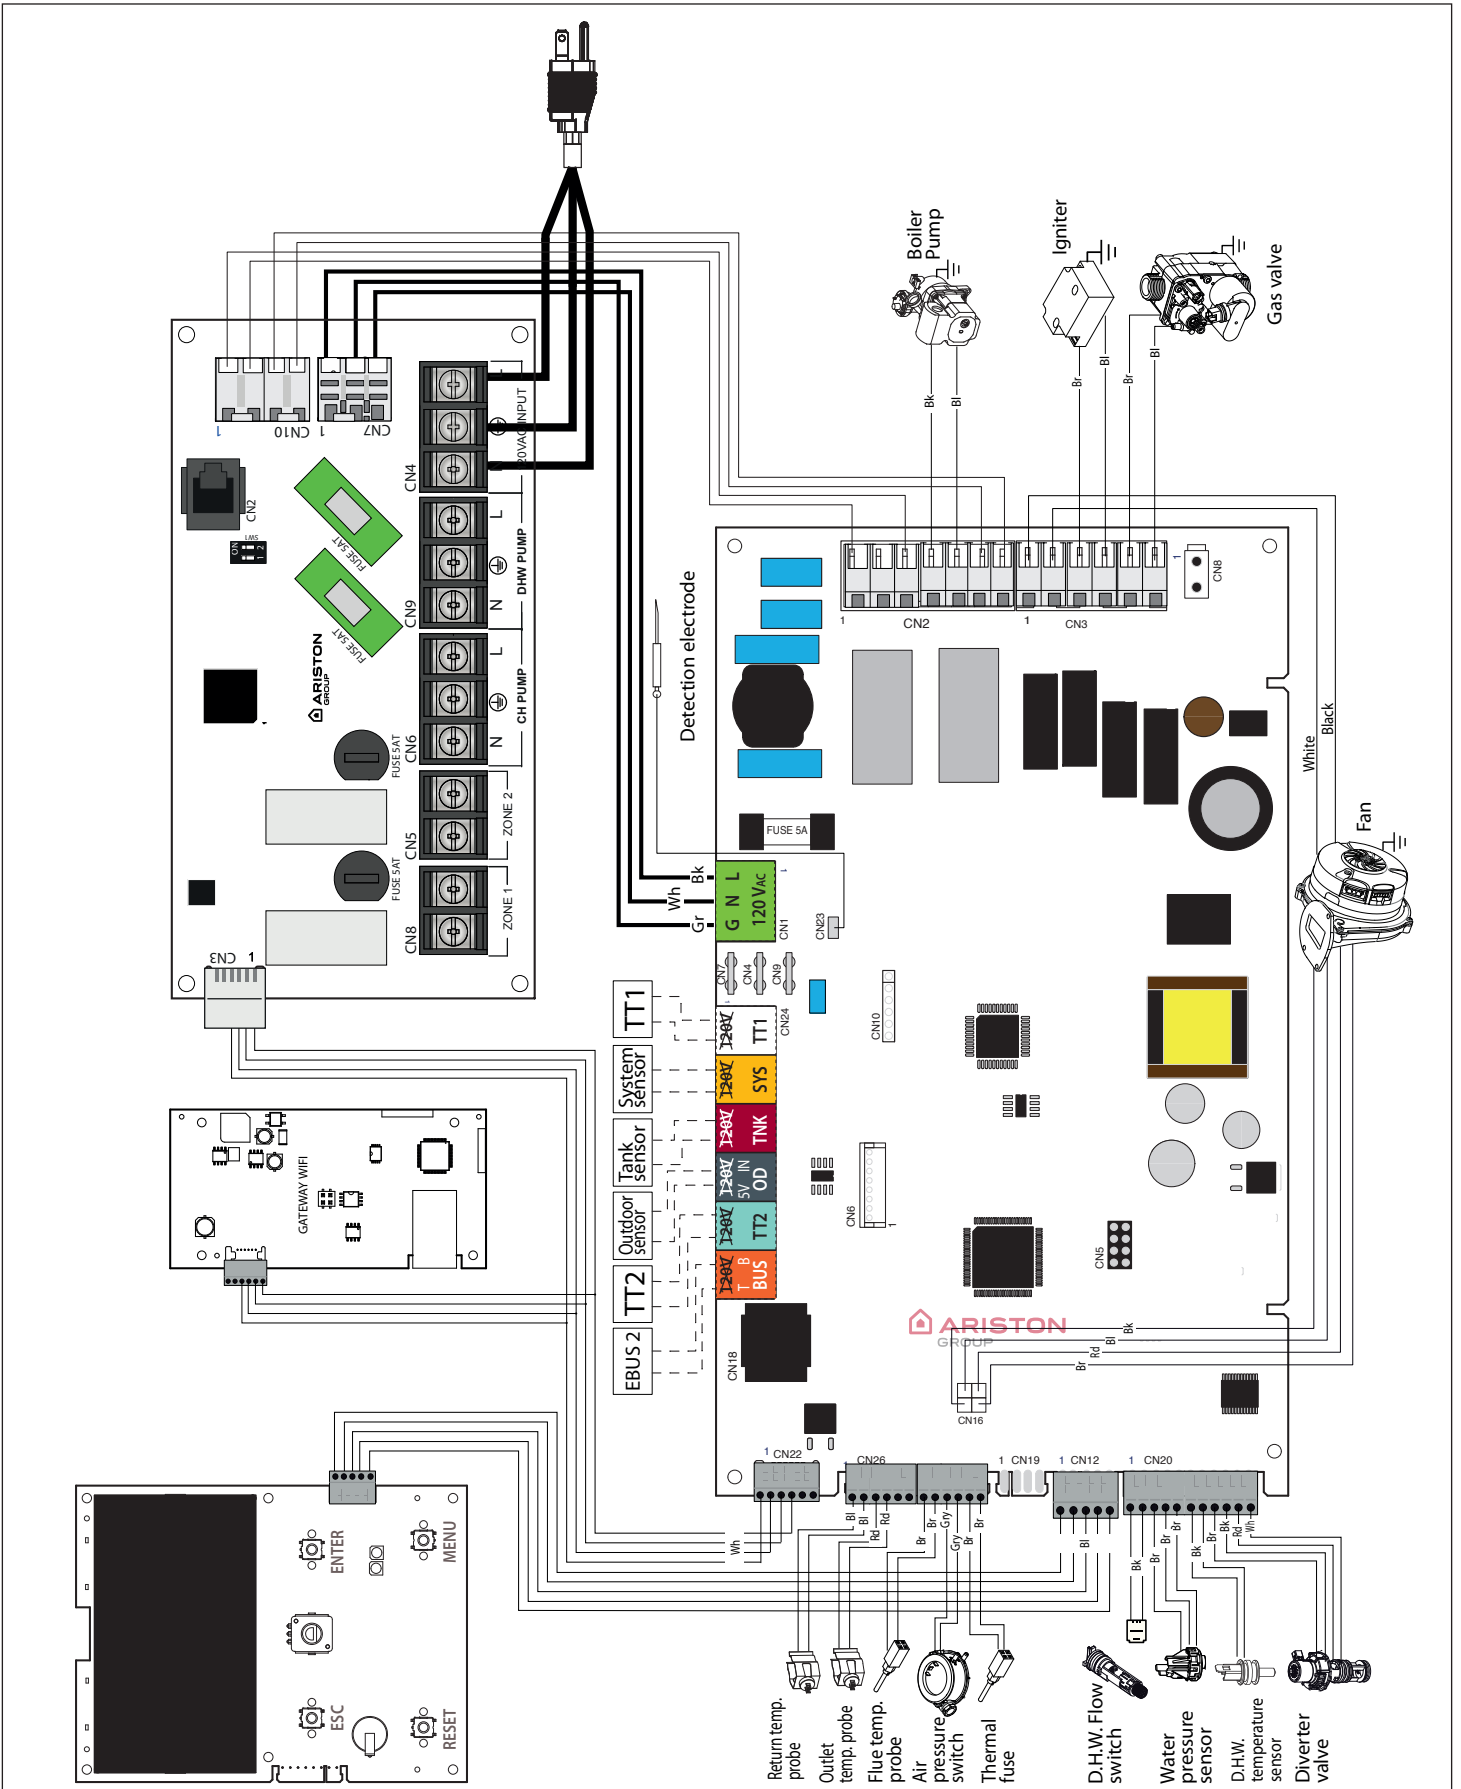


Figure 55 - Electrical Wiring Diagram

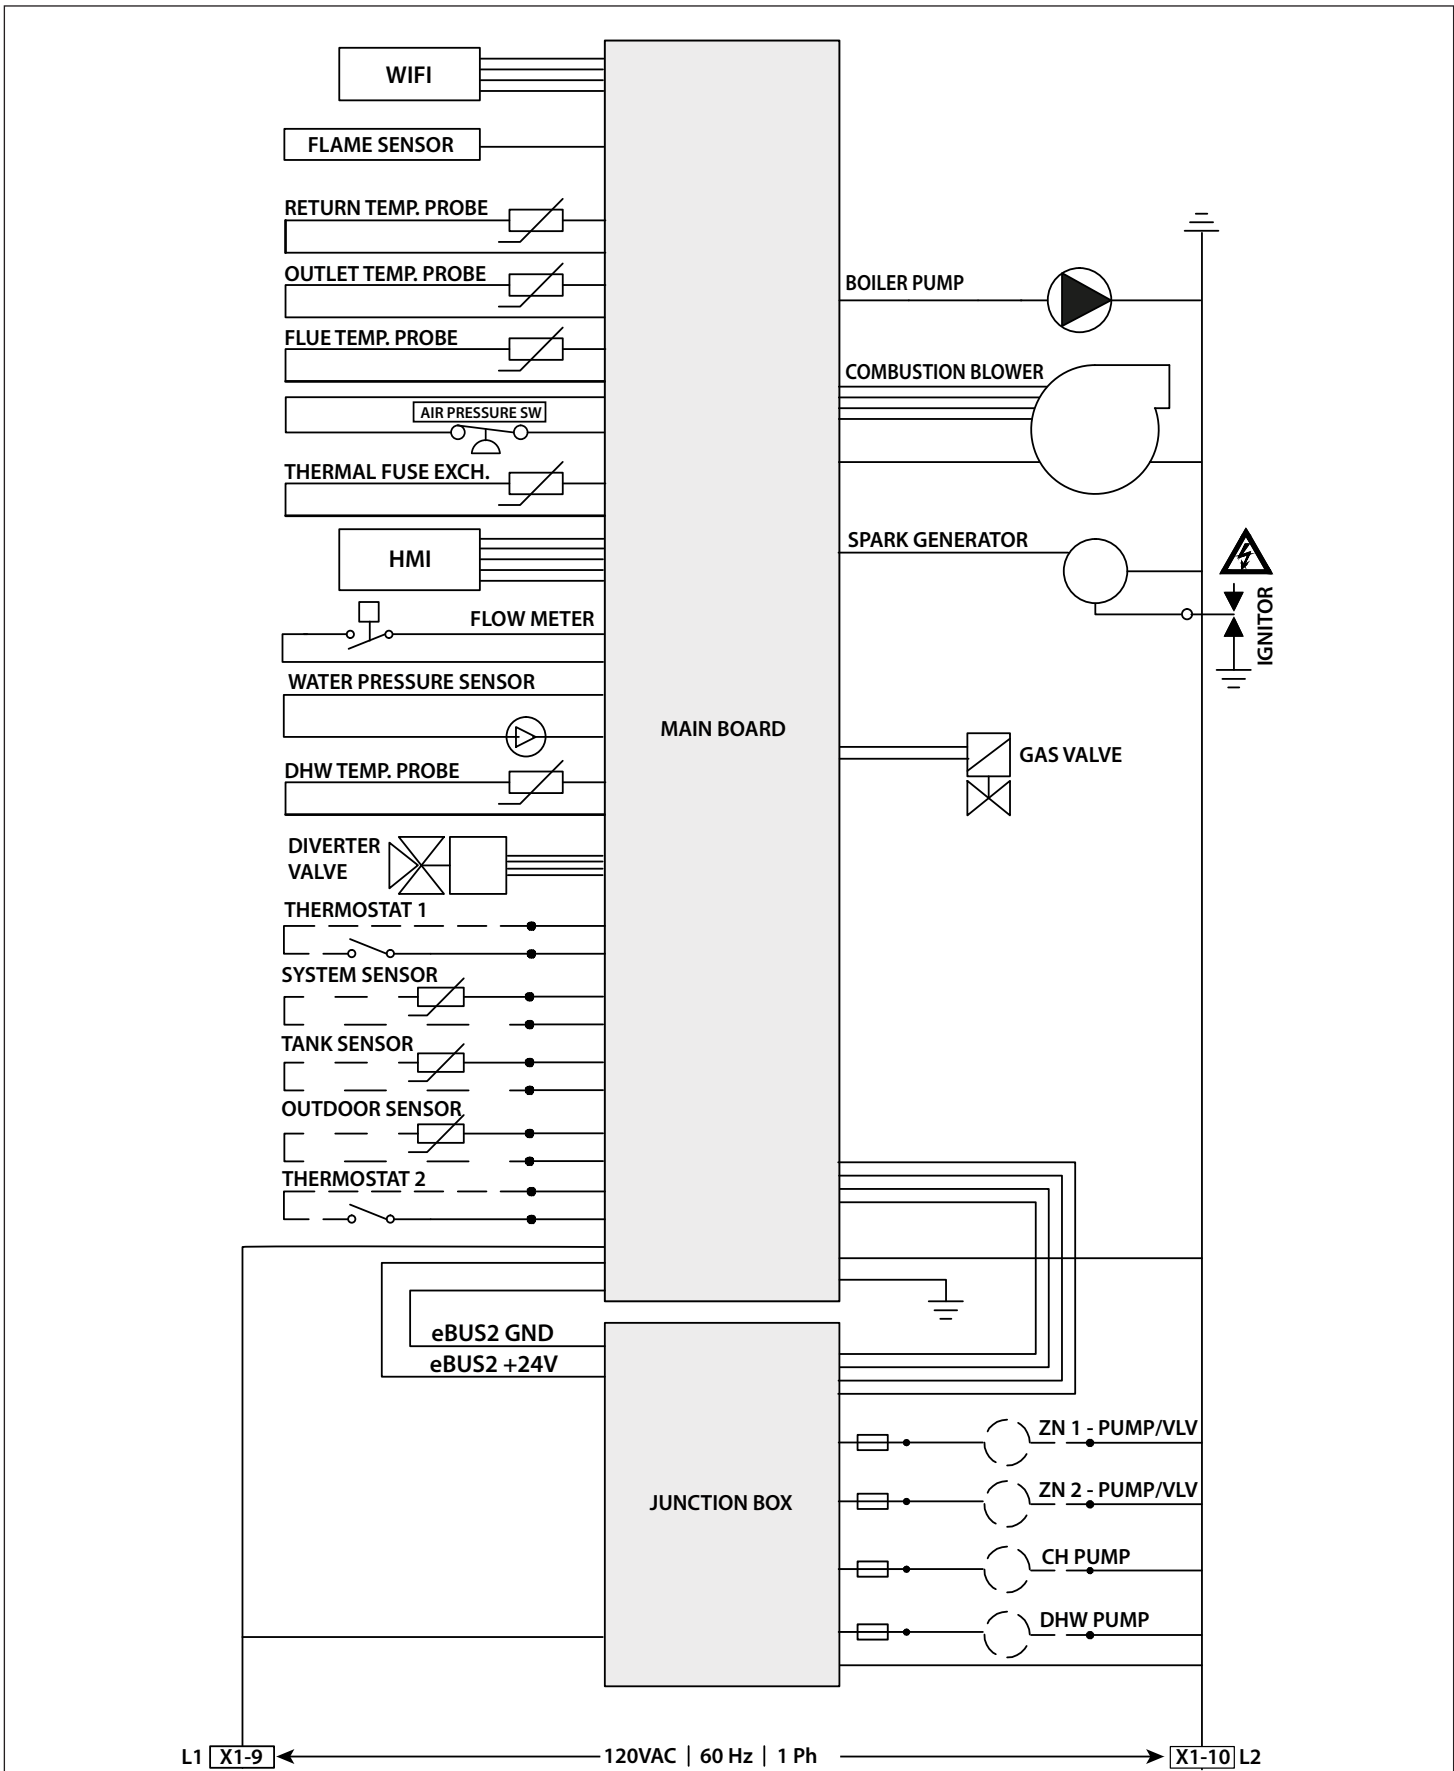


Figure 56 - Ladder Diagram

## Part 7 - Connecting Electrical Service

| Connector       |  | Pin | Description                                 | HT Selv       |                        |
|-----------------|--|-----|---|---------------|------------------------|
| No. of Location |  |     |   |               |                        |
| CN1             | POWER SUPPLY                                   | 1   | 120 VAC LIVE INPUT                          | HT (120V~) AC |                        |
|                 |  | 2   | 120 VAC NEUTRAL INPUT                       |               |                        |
|                 |  | 3   | PROTECTIVE EARTH                            |               |                        |
| CN2             | EXTERNAL PUMP 2 /<br>Hi-V DIVERTER VALVE (DHW) | 1   | 120 VAC EXT. PUMP2 INPUT / 120VAC LINE DIV1 | HT (120V~) AC |                        |
|                 |  | 2   | 120 VAC NEUTRAL                             |               |                        |
|                 |  | 3   | 120 VAC EXT. PUMP2 (NO) / 120VAC LINE DIV2  |               |                        |
|                 | BOILER PUMP                                    | 4   | 120 VAC LIVE (NO)                           |               |                        |
|                 |  | 5   | 120 VAC NEUTRAL                             |               |                        |
|                 | EXTERNAL PUMP 1 (CH)                           | 6   | 120 VAC EXT. PUMP1 INPUT                    |               |                        |
|                 |  | 7   | 120 VAC EXT. PUMP1 (NO)                     |               |                        |
| CN3             | FAN ON/OFF                                     | 1   | 120 VAC LIVE                                | HT (120~) AC  |                        |
|                 |  | 2   | 120 VAC NEUTRAL                             |               |                        |
|                 | IGNITER  | 3   | 120 VAC LIVE (NO)                           |               |                        |
|                 |  | 4   | 120 VAC NEUTRAL                             |               |                        |
|                 | GAS VALVE                                      | 5   | 120 VRAC + (NO)                             |               |                        |
|                 |  | 6   | 120 VRAC - (NO)                             |               |                        |
| CN8             | POWER SUPPLY OUT                               | 1   | 120 VAC LINE                                | HT (120V~) AC |                        |
|                 |  | 2   | 120 VAC NEUTRAL                             |               |                        |
| CN4             | PROTECTIVE EARTH                               | 1   |   |               |                        |
| CN7             | PROTECTIVE EARTH                               | 1   |   |               |                        |
| CN9             | PROTECTIVE EARTH                               | 1   |   |               |                        |
| CN26            | NTC HEAT RETURN                                | 1   | +5V   | SELV (5V)     |                        |
|                 |  | 2   | CH RETURN NTC SENSOR SIGNAL                 |               |                        |
|                 | NTC HEAT FLOW 1                                | 3   | +5V   |               |                        |
|                 |  | 4   | CH FLOW 1 NTC SENSOR SIGNAL                 |               |                        |
|                 |  | 5   | NOT USED                                    |               |                        |
|                 |  | 6   |   |               |                        |
|                 |  | 7   |   |               | +5V                    |
|                 |  | 8   |   |               | FLUE NTC SENSOR SIGNAL |
|                 | AIR PRESSURE SWITCH                            | 9   | +24V  |               | SELV (24V)             |
|                 |  | 10  | APS DETECTION SIGNAL                        |               |                        |
|                 | THERMAL FUSE MAIN HEAT EXCHANGER               | 11  | +24V  |               |                        |
|                 |  | 12  | OVERHEAT signal                             |               |                        |
| CN20            | DHW FLOW SENSOR                                | 1   | +5V   | SELV (5V)     |                        |
|                 |  | 2   | GROUND                                      |               |                        |
|                 |  | 3   | DHW FLOW DETECTION SIGNAL                   |               |                        |
|                 | WATER PRESSURE SWITCH                          | 4   | +5V   |               |                        |
|                 |  | 5   | GROUND                                      |               |                        |
|                 |  | 6   | CH WATER PRESSURE SWITCH SIGNAL             |               |                        |
|                 | NTC HEAT DHW                                   | 7   | +5V   |               |                        |
|                 |  | 8   | DHW OUTLET NTC SENSOR SIGNAL                |               |                        |
|                 | DIVERTER VALVE                                 | 9   | STEPPER DIVERTER VALVE COIL 1 START         |               |                        |
|                 |  | 10  | STEPPER DIVERTER VALVE COIL 1 END           |               |                        |
|                 |  | 11  | STEPPER DIVERTER VALVE COIL 2 START         |               |                        |
|                 |  | 12  | STEPPER DIVERTER VALVE COIL 2 END           |               |                        |

Table 20 - Boiler Wiring - 1

| Connector       |                               | Pin | Description               | HT Selv         |
|-----------------|-------------------------------|-----|---------------------------|-----------------|
| No. of Location |                               |     |                           |                 |
| CN24            | ROOM THERMOSTAT               | 1   | +24V                      | SELV (24V)      |
|                 |                               | 2   | ROOM THERMOSTAT 1 SIGNAL  |                 |
|                 | NTC SYSTEM                    | 3   | +5V                       | SELV (5V)       |
|                 |                               | 4   | CASCADE NTC SENSOR SIGNAL |                 |
|                 | NTC TANK                      | 5   | +5V                       |                 |
|                 |                               | 6   | BOILER NTC SENSOR SIGNAL  |                 |
|                 | OUTDOOR SENSOR                | 7   | +5V                       |                 |
|                 |                               | 8   | OUTDOOR NTC SENSOR SIGNAL |                 |
|                 | ROOM THERMOSTAT 2             | 9   | +24V                      | SELV (24V)      |
|                 |                               | 10  | ROOM THERMOSTAT 2 SIGNAL  |                 |
|                 | EBUS2                         | 11  | EBUS2 SIGNAL              | SELV (24V)      |
|                 |                               | 12  | GROUND                    |                 |
| CN16            | FAN MANAGEMENT                | 1   | GROUND                    | SELV (24V)      |
|                 |                               | 2   | PWM FAN-DRIVER            |                 |
|                 |                               | 3   | HALL_EFFECT SENSOR        |                 |
|                 |                               | 4   | +24V                      |                 |
| CN19            | EXTERNAL CLIP-IN              | 1   | +24V                      | SELV (24V - 5V) |
|                 |                               | 2   | GROUND                    |                 |
|                 |                               | 3   | CLIP-IN SERIAL TX SIGNAL  |                 |
|                 |                               | 4   | CLIP-IN SERIAL RX SIGNAL  |                 |
| CN12            | HMI                           | 1   | +5V                       | SELV (24V - 5V) |
|                 |                               | 2   | GROUND                    |                 |
|                 |                               | 3   | HMI SERIAL TX SIGNAL      |                 |
|                 |                               | 4   | HMI SERIAL RX SIGNAL      |                 |
|                 |                               | 5   | +24V                      |                 |
| CN22            | PWM PUMP                      | 1   | PWM PUMP SIGNAL           | SELV (24V)      |
|                 |                               | 2   | NOT USED                  |                 |
|                 |                               | 3   | GROUND                    |                 |
| CN23            | FLAME                         | 1   | FLAME SENSOR SIGNAL       | HT (110Vrms) AC |
| CN18            | SERVICE TOOL SERIAL INTERFACE | 1   | +5V                       | SELV (24V - 5V) |
|                 |                               | 2   | GROUND                    |                 |
|                 |                               | 3   | MODE                      |                 |
|                 |                               | 4   | SERIAL TX SIGNAL TO PC    |                 |
|                 |                               | 5   | SERIAL RX SIGNAL FROM PC  |                 |
|                 |                               | 6   | +24V                      |                 |

**Table 21 - Boiler Wiring - 2**

**! WARNING**

**FIRE AND/OR EXPLOSION HAZARD**  
**To avoid serious injury or death, the gas line installation and the gas line inlet pressure test must be done by a licensed professional.**

Ensure the gas on which the boiler will operate is the same type specified on the rating plate (natural gas or LP gas). This boiler must be converted to propane operation. Follow Gas Conversion Manual instructions (separate document). Failure to follow these instructions could result in property damage, personal injury, or death.

**! WARNING**

Make sure the gas line pressures are within normal limits. Pressures outside normal limits can result in poor performance and hazardous operating conditions, property damage, personal injury, or death.

**NOTICE**

Do not operate the boiler on Natural Gas or LP gas with average sulfur rates greater than 30 mg/m<sup>3</sup>. Doing so could result in improper product operation and failure, and WILL VOID the boiler warranty.

**A. Gas Pipe Sizing Tables**

**1. Gas Pipe Sizing**

This information is for reference use only. Refer to gas pipe manufacturer specifications for actual delivery capacity. The DOE standard for Natural Gas is 1100 BTU/ft<sup>3</sup>. Contact the local gas supplier for actual BTU/ft<sup>3</sup> rating.

| Pipe Size (in.) | Length of Pipe (Feet) |       |       |       |      |      |      |      |      |      | BTU's Per Hour x 1,000   |
|-----------------|-----------------------|-------|-------|-------|------|------|------|------|------|------|--|
|                 | 10                    | 20    | 30    | 40    | 50   | 60   | 80   | 100  | 150  | 200  |  |
| 3/4             | 360                   | 247   | 199   | 170   | 151  | 137  | 117  | 104  | 83   | 71   | Schedule 40<br>Metallic Pipe<br><br>(0.60 Specific Gravity,<br>0.5 WC Pressure Drop) |
| 1               | 678                   | 466   | 374   | 320   | 284  | 257  | 220  | 195  | 157  | 134  |  |
| 1 1/4           | 1390                  | 957   | 768   | 657   | 583  | 528  | 452  | 400  | 322  | 275  |  |
| 1 1/2           | 2090                  | 1430  | 1150  | 985   | 873  | 791  | 677  | 600  | 482  | 412  |  |
| 2               | 4020                  | 2760  | 2220  | 1900  | 1680 | 1520 | 1300 | 1160 | 928  | 794  |  |
| 3               | 11300                 | 7780  | 6250  | 5350  | 4740 | 4290 | 3670 | 3260 | 2610 | 2240 |  |
| 4               | 23100                 | 15900 | 12700 | 10900 | 9660 | 8760 | 7490 | 6640 | 5330 | 4560 |  |

Table 22 - Natural Gas Delivery Capacity - Refer to ANSI Z223.1 - National Fuel Gas Code, Latest Edition

**3. LP (Liquid Propane) Gas Pipe Sizing**

Contact gas supplier to size pipes, tanks, and 100% lockup gas pressure regulator. Adjust propane supply regulator provided by the gas supplier for 14 inches w.c. maximum pressure.

**B. Gas Connection Requirements**

- The gas connection fitting is 3/4" NPT.  
**NOTE:** The gas pipe size must not be less than 3/4".  
**NOTE:** DO NOT USE 1/2" quick flex gas lines! Doing so will result in improper appliance operation.
- The supply line must be sized for the maximum input of the boiler being installed. If there are additional gas appliances on the main supply line, measure the size of the supply line according to the COMBINED total maximum BTUH draw for the appliances as if they were operating at the same time.
- Measure the length of the gas supply line from the gas meter to the boiler. The boiler must be installed downstream of the gas meter to ensure adequate gas supply. Use the tables in this manual or refer to the gas line manufacturer's sizing information to determine the correct supply pipe size.
- The National Fuel Gas Code (NFPA 54) requires that a sediment trap (drip leg) be installed in the gas line on boilers not so equipped. The drip leg must be accessible, a minimum of 3" in length, and not subject to freezing conditions. See Figure 57.
- A manual gas shut-off valve should be installed in the gas supply line close to the boiler. See Figure 57.

- To facilitate any future maintenance, it is also recommended that an approved gas union fitting be installed in the supply line between the shut-off valve and the 3/4" NPT connection on the boiler.
- Use a manometer to test the gas pressure to make sure it meets the minimum standards and does not exceed the maximum standards of the boiler.

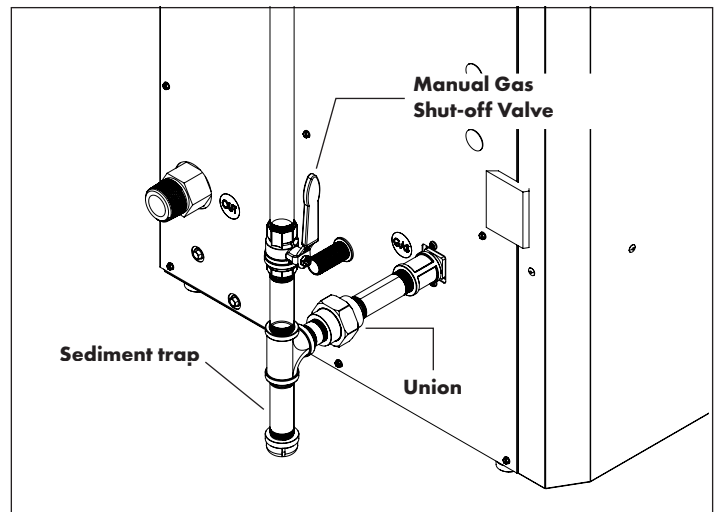


Figure 57 - Gas Line with Shut-Off and Sediment Trap Detail

8. Leak test the gas line pipe before placing the boiler in operation. Only use approved leak detector liquid solutions to check for leaks.
9. Do not operate the boiler until all connections have been completed and the heat exchanger is filled with water.

**C. Additional Precaution for Excess Flow Valve (EFV)**

If an excess flow valve (EFV) is in the gas line, check the manufacturer's minimum and maximum flow capacity ratings. An improperly sized EFV will not allow for a full flow of gas to the boiler and will cause the boiler to malfunction. See Figure 58.

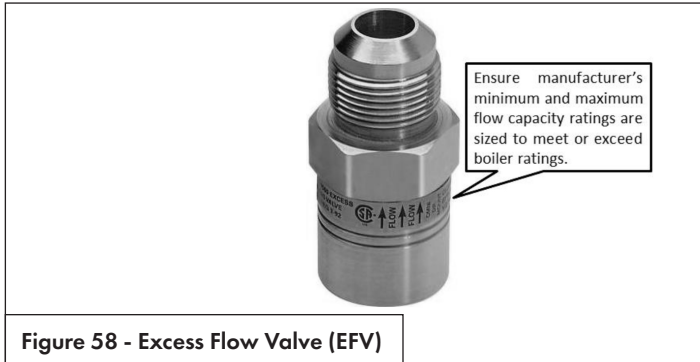


Figure 58 - Excess Flow Valve (EFV)

**! WARNING**

When performing a pressure test on the gas line piping, be sure the boiler is disconnected or isolated if the test pressure is expected to exceed 1/2 PSI (14" WC), as damage to the gas valve could occur. Such damage could result in fire, property damage, serious personal injury, or death.

**D. Checking Gas Pressure at the Boiler for Proper Operation**

**NOTE:** Refer to Figures 59 and 60 when checking gas pressure. Loosen the bolts before checking the gas inlet pressure.

1. The boiler and its individual shutoff valve must be disconnected from the gas supply piping system during any pressure testing of the system at test pressures greater than 1/2 psi (3.5 kPa).
2. The boiler must be isolated from the gas supply piping system by closing its individual manual shutoff valve during any pressure testing of the gas supply piping system at test pressures equal to or less than 1/2 psi (3.5 kPa).

The minimum and maximum inlet gas line pressures must meet the requirements shown in Table 22.

| Natural Gas      |         |
|------------------|---------|
| Minimum Pressure | 3.5" WC |
| Maximum Pressure | 10.5"WC |
| LP Gas           |         |
| Minimum Pressure | 8" WC   |
| Maximum Pressure | 13"WC   |

Table 23 - Gas Pressure Requirements

**NOTICE**

Do not fire (operate) the boiler until all connections have been completed and the heat exchanger is filled with water. Doing so will damage the boiler and void the warranty.

To check inlet gas pressure:

1. Remove yellow cap from line pressure test point. See Figure 59.
2. Unscrew "P in" screw.
3. Connect the manometer to the test point.
4. Check the inlet gas pressure.
5. Disconnect the manometer from the test point.
6. Tighten the "P in" screw (1 N/m).
7. Check for and repair any gas leaks.
8. Replace the yellow cap.


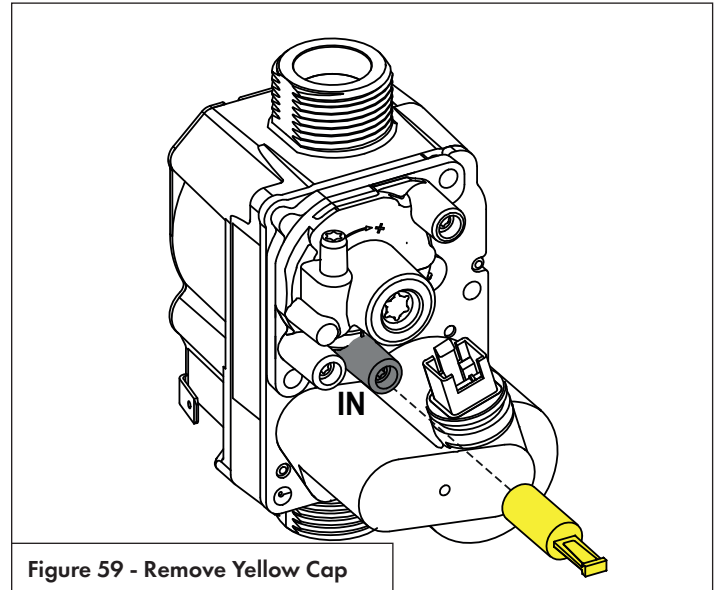


Figure 59 - Remove Yellow Cap

**! WARNING**

**DO NOT REMOVE OR ATTEMPT TO MAKE AN ADJUSTMENT TO SCREWS 2 and 4 WITHOUT A CALIBRATED COMBUSTION ANALYZER. DOING SO COULD RESULT IN FIRE, PROPERTY DAMAGE, SERIOUS PERSONAL INJURY, OR DEATH.**

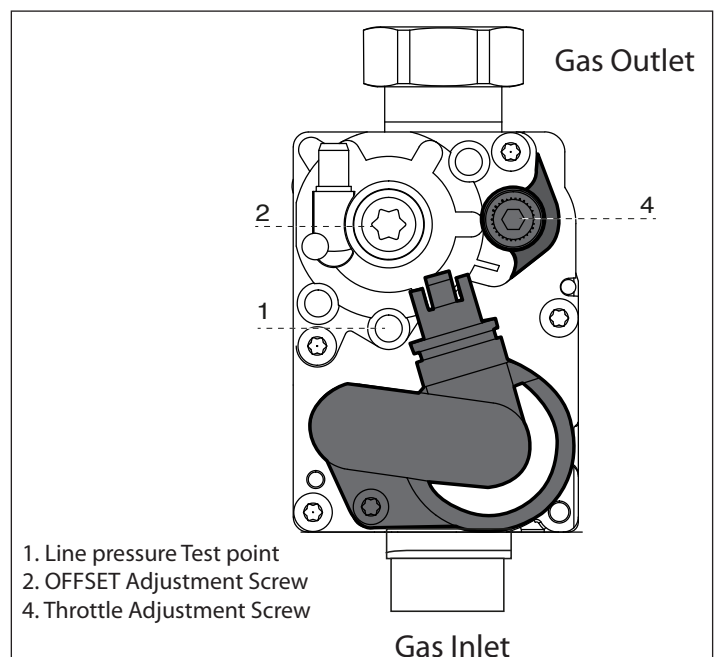

1. Line pressure Test point
2. OFFSET Adjustment Screw
4. Throttle Adjustment Screw

Figure 60 - Gas Valve Detail



This page intentionally left blank.



### A. Control Overview

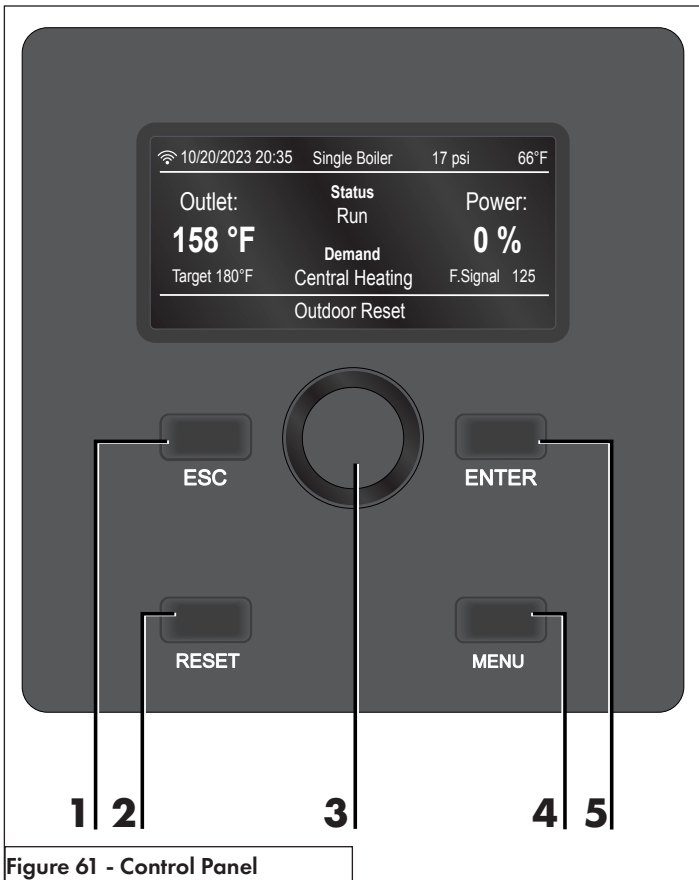


Figure 61 - Control Panel

| Item # | Description                             |
|--------|---|
| 1      | ESC - back/exit                         |
| 2      | RESET - resets lockouts                 |
| 3      | Dial - use to navigate inside each menu |
| 4      | MENU - enters the main menu             |
| 5      | ENTER (or OK) - confirms selection      |

Table 24 - Control Descriptions

### B. Display Overview

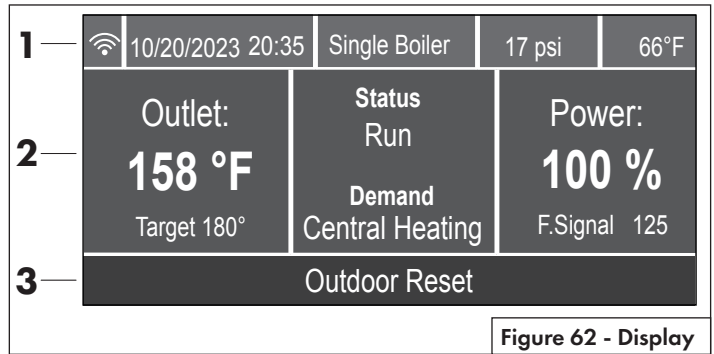


Figure 62 - Display

| Description   |  |  |  |        |             |  |   |  |                     |
|---|--|--|--|--------|-------------|--|---|--|---------------------|
| <b>1 General Information</b>  |  |  |  |        |             |  |   |  |                     |
| <table border="1"> <tr> <td>10/20/2023 20:35</td> <td>Single Boiler</td> <td>17 psi</td> <td>66°F</td> </tr> </table> |  | 10/20/2023 20:35                               | Single Boiler  | 17 psi | 66°F        |  |   |  |                     |
| 10/20/2023 20:35  | Single Boiler  | 17 psi   | 66°F   |        |             |  |   |  |                     |
| a.  | <b>WiFi Status</b>   |  |  |        |             |  |   |  |                     |
|   | <table border="1"> <tr> <td></td> <td>WiFi Upgrade</td> </tr> <tr> <td></td> <td>WiFi Active</td> </tr> <tr> <td></td> <td>WiFi connected to the local network, but without access to the server</td> </tr> <tr> <td></td> <td>WiFi not configured</td> </tr> </table> |  | WiFi Upgrade   |        | WiFi Active |  | WiFi connected to the local network, but without access to the server |  | WiFi not configured |
|   | WiFi Upgrade   |  |  |        |             |  |   |  |                     |
|   | WiFi Active  |  |  |        |             |  |   |  |                     |
|   | WiFi connected to the local network, but without access to the server  |  |  |        |             |  |   |  |                     |
|   | WiFi not configured  |  |  |        |             |  |   |  |                     |
| b.  | <b>10/20/2023 20:35</b> Date and Time  |  |  |        |             |  |   |  |                     |
| c.  | <b>Single Boiler</b> Boiler configuration (Single Boiler, Manager, or Follower #)  |  |  |        |             |  |   |  |                     |
| d.  | <b>17 psi</b> Boiler water pressure  |  |  |        |             |  |   |  |                     |
| e.  | <b>66 °F</b> Outdoor temperature (a flashing house with thermometer icon will appear if AUTO Function (Outdoor Reset) - is enabled while no outdoor temperature reading is available)  |  |  |        |             |  |   |  |                     |
| <b>2 Boiler working mode</b>  |  |  |  |        |             |  |   |  |                     |
| 2a  | <table border="1"> <tr> <td>Outlet:<br/><b>158 °F</b><br/>Target 180°</td> <td>Boiler <b>Outlet</b> temperature and <b>Target</b>, or <b>DHW</b> temperature and <b>Target</b></td> </tr> </table>   | Outlet:<br><b>158 °F</b><br>Target 180°        | Boiler <b>Outlet</b> temperature and <b>Target</b> , or <b>DHW</b> temperature and <b>Target</b> |        |             |  |   |  |                     |
| Outlet:<br><b>158 °F</b><br>Target 180°   | Boiler <b>Outlet</b> temperature and <b>Target</b> , or <b>DHW</b> temperature and <b>Target</b>   |  |  |        |             |  |   |  |                     |
| 2b  | <table border="1"> <tr> <td>Status<br/>Run<br/><br/>Demand<br/>Central Heating</td> <td>Burner Status<br/><br/>Demand type</td> </tr> </table>   | Status<br>Run<br><br>Demand<br>Central Heating | Burner Status<br><br>Demand type   |        |             |  |   |  |                     |
| Status<br>Run<br><br>Demand<br>Central Heating  | Burner Status<br><br>Demand type   |  |  |        |             |  |   |  |                     |
| 2c  | <table border="1"> <tr> <td>Power:<br/><b>100 %</b><br/>F.Signal 125</td> <td>Burner power (%) and flame signal</td> </tr> </table>  | Power:<br><b>100 %</b><br>F.Signal 125         | Burner power (%) and flame signal  |        |             |  |   |  |                     |
| Power:<br><b>100 %</b><br>F.Signal 125  | Burner power (%) and flame signal  |  |  |        |             |  |   |  |                     |
| <b>3 Additional details</b>   |  |  |  |        |             |  |   |  |                     |
| 3a  | <table border="1"> <tr> <td>Outdoor Reset</td> </tr> </table>  | Outdoor Reset                                  |  |        |             |  |   |  |                     |
| Outdoor Reset   |  |  |  |        |             |  |   |  |                     |
|   | Working mode, functional, or error details   |  |  |        |             |  |   |  |                     |

Table 25 - Display Descriptions

C. Display Home Page

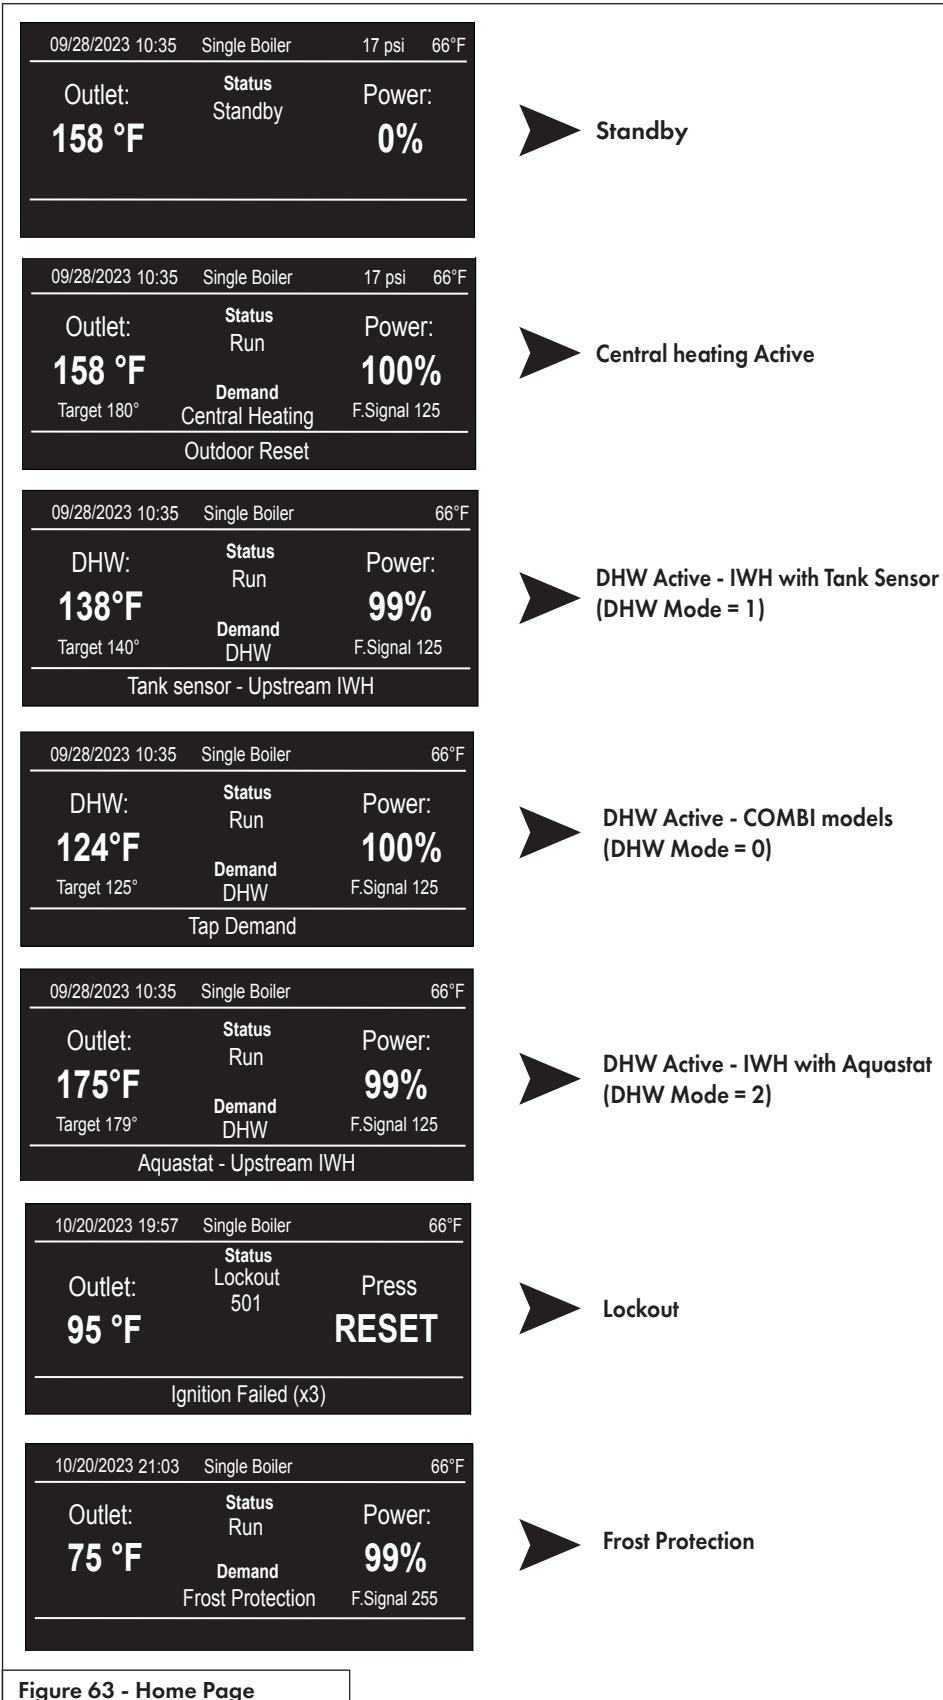


Figure 63 - Home Page

**D. Main Menu**

Navigate the Main Menu as follows:

1. From the Home Page, press ENTER.  
**Note:** if the display is "asleep", you will need to press ENTER a 2nd time to access the Main Menu.
2. Turn the dial to highlight the option you wish to access then press ENTER.
3. Press ESC to return to the previous screen.

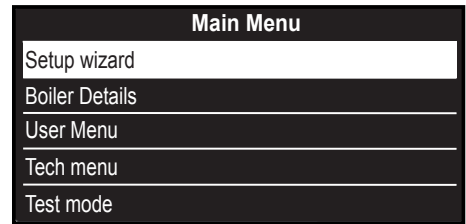


Figure 64 - Main Menu screen

| Main Menu               | Description  |   |
|-------------------------|--|---|
| <b>Setup wizard (*)</b> | The display steps you through the setup procedure of the controller.   | See page 58   |
| <b>Boiler Details</b>   | View boiler I/O readings.  | See page 59   |
| <b>User menu</b>        | Screen Settings  | See page 60   |
|                         | Time & Date  | See page 61   |
|                         | CH Setup   | See page 61   |
|                         | DHW Setup  | See page 62   |
|                         | Operating Mode   | See page 63   |
|                         | Time program   | See page 64   |
| <b>Tech Menu (*)</b>    | CH Setup   | See page 68   |
|                         | DHW Setup  | See page 71   |
|                         | Cascade Setup  | See page 72   |
|                         | Restore/Backup   | See page 72   |
|                         | BMS Control  | See page 73   |
|                         | Complete Menu  | See page 74   |
|                         | PCB Replacement  | See page 82   |
| <b>Test Mode (*)</b>    | Burner Test  | See page 83   |
|                         | Output Test  |   |
|                         | Air purge Function   |   |
| <b>Error Hystory</b>    | The display shows the last 10 errors with details of the code, description and date. Turn the dial to scroll the errors. |   |
| <b>Connectivity</b>     | WiFi Enable  | See page 84<br><br><b>Read the ComfortLink Quick Start Guide to connect the boiler.</b> |
|                         | Network Configuration  |   |
|                         | Serial Number  |   |
|                         | Connectivity reset   |   |
|                         | Signal Level   |   |
|                         | Internet Time  |   |
|                         | Internet Weather   |   |
| <b>Diagnostics</b>      | Service  | See page 85   |
|                         | Statistics   |   |
|                         | Version (SW)   |   |

Table 26 - Technical Area

(\*) If password protection is enabled, you will be prompted to enter the password (234) before accessing the Setup Wizard, Tech Menu, and Test Mode menus

**E. Setup wizard**

To start the Setup wizard proceed as follows:

1. From the **Main Menu**, turn the dial to highlight “**Setup Wizard**” and press ENTER.
2. If prompted, insert the **access code**; turn the dial to adjust the value to 234 and press ENTER.
5. Enable or disabled the **AUTO Function (Outdoor Reset)**. Turn the dial to select and press ENTER.
6. Turn the dial to **select the number of CH zones** managed by the boiler and then press ENTER.
7. Select the **Type of Heating** for the respective zone. Turn the dial to select:
  - High temperature (e.g Fin-tube Baseboard)
  - Medium temperature (e.g Cast-iron Radiators / Air-handler)
  - Low temperature (e.g Infloor Radiant)
 and press ENTER.
8. Review the **Max Temperature** setting for the respective zone. Turn the dial to adjust. Press ENTER to save.
9. Review the **Min Temperature** setting for the respective zone. Turn the dial to adjust. Press ENTER to save.
10. If **AUTO Function (Outdoor Reset)** was enabled, the controller will prompt you to input the AUTO Temp Contrl Mode for each zone. Turn the dial to select:
  - Fixed Outlet
  - Basic On/Off
  - Room Temp
  - Outdoor Temp(Factory setting)
  - Room&Outdoor
 Press ENTER to confirm.
11. **DHW Mode** (not applicable for Combi models) Turn the dial to select:
  - Tank Sensor
  - Aquastat
  - No DHW
 Press ENTER.
12. Turn the dial to adjust the **DHW setpoint temperature**, and press ENTER to confirm (not applicable when DHW Mode = Aquastat)
13. Turn the dial to select Yes or No to enable/disable **Password Protection**.
14. Select to activate the **Network configuration**. Turn the dial to select Yes or No and press Enter. If Yes is selected, follow the instructions on the display to activate the WiFi connection. **Note:** if the boiler is already connected to WiFi, then select No.

The **Setup Wizard** allows for the easy configuration of the following functions:

- **AUTO Function (Outdoor Reset)** enable/disable
- **Central Heating Zones setup**
- **DHW setup**
- **Password Protection** enable/disable
- **Network (WiFi) Configuration**

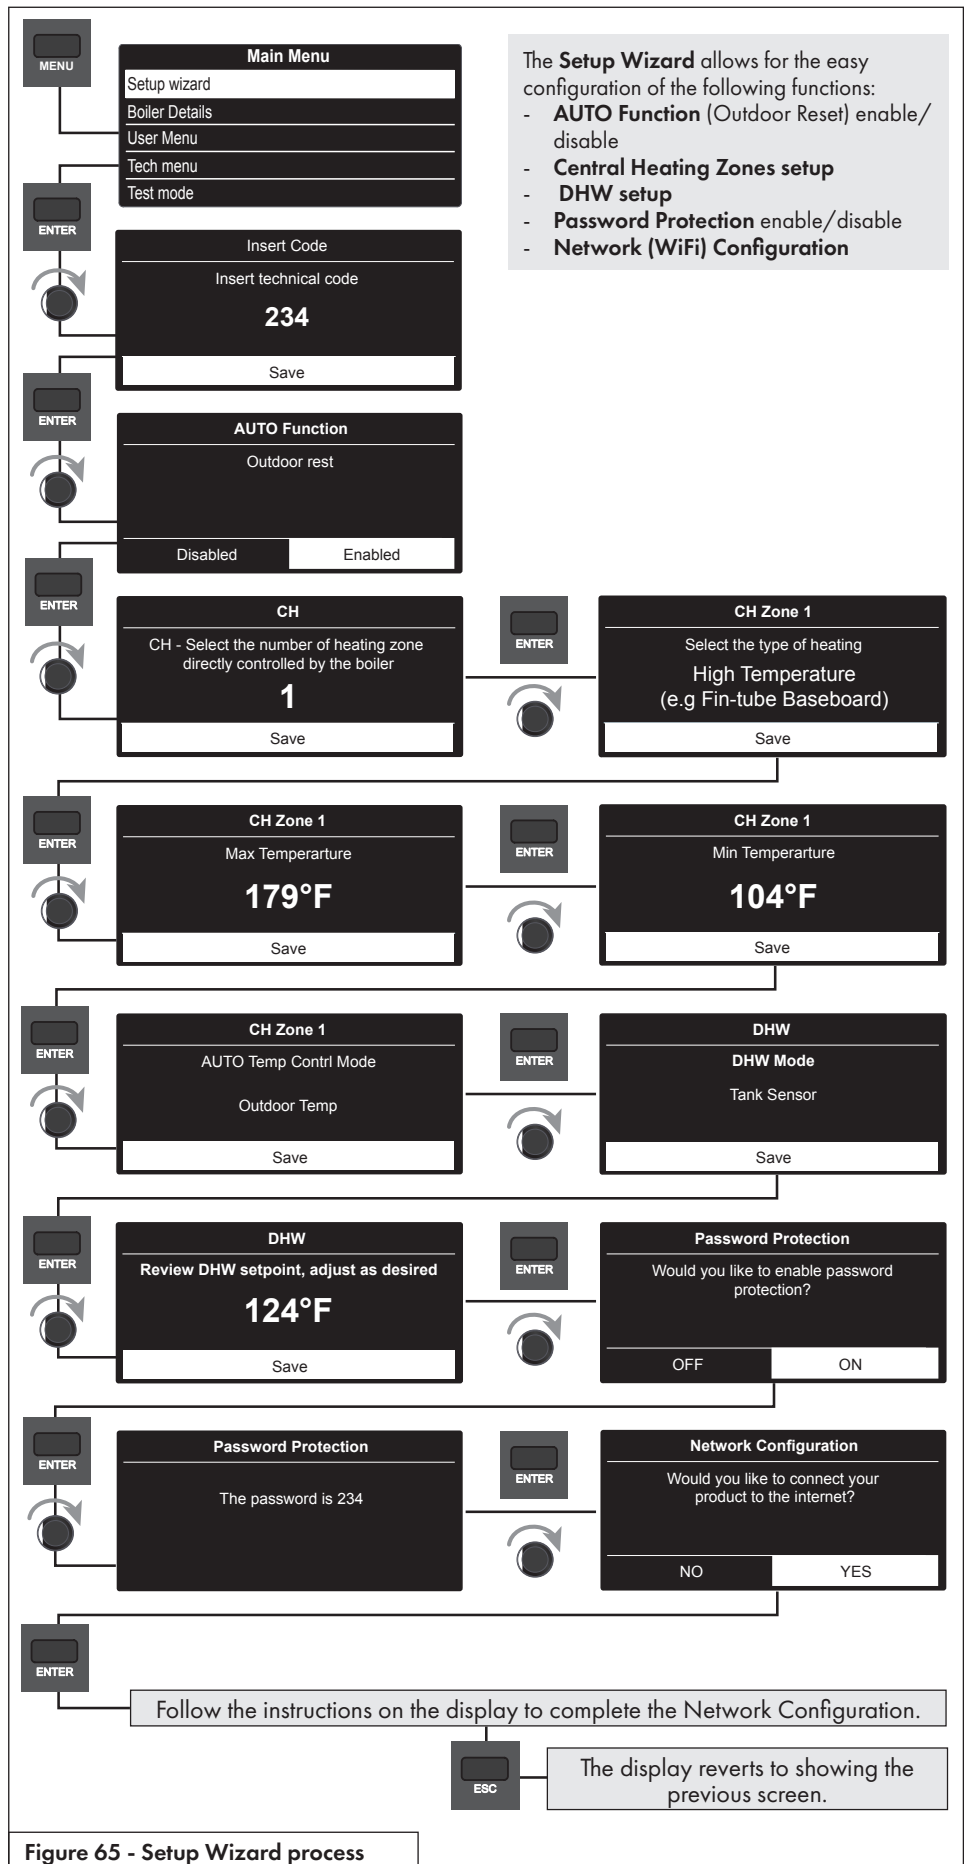


Figure 65 - Setup Wizard process

## F. Boiler Details

The **BOILER DETAILS** menu provides the status of each of the boiler's inputs and outputs.

Navigate the Boiler Details menu as follows:

1. From the Main Menu, turn the dial to highlight "Boiler Details" and press ENTER.
2. Turn the dial to scroll through the parameter readings.
3. Press ESC to return to the previous screen.

| Parameter | Description                         |
|-----------|-------------------------------------|
| 8.2.2     | Fan speed                           |
| 8.2.8     | Gas Power (kW)                      |
| 8.7.9     | Ionization current                  |
| 8.7.8     | Boiler power level (%)              |
| 8.3.0     | CH Supply Setpoint Temperature (°F) |
| 8.3.1     | CH Supply Temperature (°F)          |
| 8.3.2     | CH Return Temperature (°F)          |
| 8.3.4     | Exhausts Flue Temperature (°F)      |
| 8.3.3     | DHW Flow Temperature (°F)           |
| 8.4.0     | Tank Storage Temperature (°F)       |
| 8.7.4     | Boiler Flowswitch                   |
| 8.2.5     | DHW Flow Rate *                     |
| 2.0.0     | DHW Setpoint Temperature            |
| 8.2.1     | Fan Status                          |
| 8.7.6     | Safety Flame Sensor                 |
| 8.2.4     | 3 Way Valve Position                |
| 8.2.6     | Air Pressure Switch Status          |
| 8.3.5     | Outdoor Temperature                 |
| 8.5.0     | Months to Next Service              |
| 8.2.9     | Heating Circuit Pressure            |
| 42.2.0    | BMS Status                          |
| 42.2.2    | BMS Setpoint                        |
| 42.2.3    | BMS Input Voltage (V)               |
| 42.2.4    | BMS Input Current (mA)              |

Table 27 - Boiler Details Menu


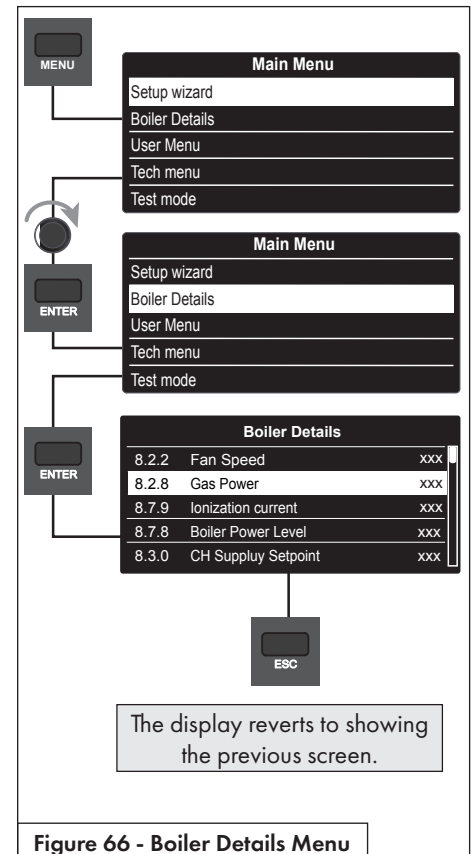


Figure 66 - Boiler Details Menu

**G. User Menu**

Navigate the User Menu as follows:

1. From the Main Menu, turn the dial to highlight "User Menu" and press ENTER.
2. Turn the dial to highlight the option you wish to access then press ENTER.
3. Press ESC to return to the previous screen.

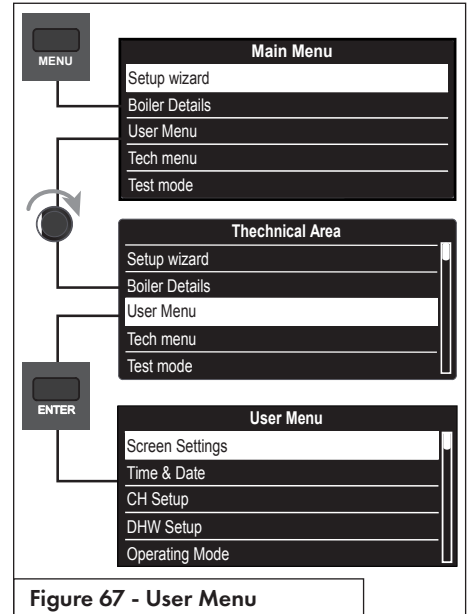


**1. User Menu - Screen settings**

Navigate the Screen Settings menu as follows:

1. From the User Menu select "Screen Settings" and press ENTER.
2. Turn the dial to highlight the option you wish to select and press ENTER; repeat as necessary for subsequent menus.
3. Turn the dial to modify the respective parameter and press ENTER to save it. Note: pressing ESC will exit the setting without saving the new value.
4. Press ESC to return to the previous screen.

| Menu Option                        | Description (Range)   | Default   |
|------------------------------------|---|-----------|
| <b>SYSTEM UNITS OF MEASUREMENT</b> |   |           |
|                                    | User can select between customary US or International system units.<br>International System (dd/mm/yy); (°C); (kW); (bar)<br>US System (mm/dd/yy); (°F); (MBH); (PSI) | US System |
| <b>SCREEN BRIGHTNESS</b>           |   |           |
|                                    | User can select the brightness of level of the display (23-100%)  | 23%       |
| <b>LANGUAGE</b>                    |   |           |
|                                    | User can select the display language.<br>(English, French, Italian, Spanish)  | English   |
| <b>Table 28 - Screen Settings</b>  |   |           |

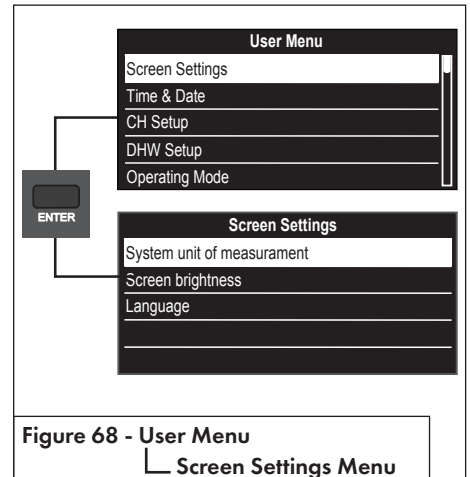

## 2. User Menu - TIME & DATE

Navigate the Time & Date menu as follows:

1. From the User Menu select "Time & Date" and press ENTER.
2. Turn the dial to highlight the parameter you wish to modify and press ENTER.
3. Turn the dial to modify the value and press ENTER to save it.
4. With the date and time correctly adjusted, turn the dial to advance to the SAVE option and press ENTER.
5. When complete, the display returns to the HOME screen.

**NOTE:** if connecting the boiler to WiFi you have the option to use Internet Time, and therefore do not have to set the date and time manually.

## 3. User Menu - CH Setup

Navigate the CH Setup menu as follows:

1. From the User Menu select "CH Setup" and press ENTER.
2. Turn the dial to highlight the option you wish to select and press ENTER.
3. Turn the dial to modify the value and press ENTER to save it. Note: pressing ESC will exit the setting without saving the new value.
4. Press ESC to return to the previous screen.

| Menu Option                                       | Description (Range)  | Default |
|---|--|---------|
| <b>HEATING CURVE OFFSET</b>                       |  |         |
| <b>ZONE 1</b>                                     |  |         |
| <b>HEATING CURVE OFFSET (4.2.3)</b>               | Provides a means to offset (+/-) the calculated reset boiler target temperature for zone 1 up or down. (-25-25°F)<br><b>Note:</b> the setting is not applicable AUTO Function (Outdoor Reset) is disabled. | 0       |
| <b>ZONE 2</b>                                     |  |         |
| <b>HEATING CURVE OFFSET (5.2.3)</b>               | Provides a means to offset (+/-) the calculated reset boiler target temperature for zone 2 up or down. (-25-25°F)<br><b>Note:</b> the setting is not applicable AUTO Function (Outdoor Reset) is disabled. | 0       |
| <b>AUTO FUNCTION (OUTDOORRESET) (2.2.4)</b>       |  |         |
|   | Allows the operator to globally enable/disable the Automatic Temperature Control Mode for all zones.   | On      |
| <b>ROOM SETPOINT (HOLIDAY/ANTI-FROST) (4.0.3)</b> |  |         |
|   | Sets the global room temperature setpoint during holiday or inactive periods. Only applicable when using an NTI Room Sensor. (35-75°F)   | 41°F    |

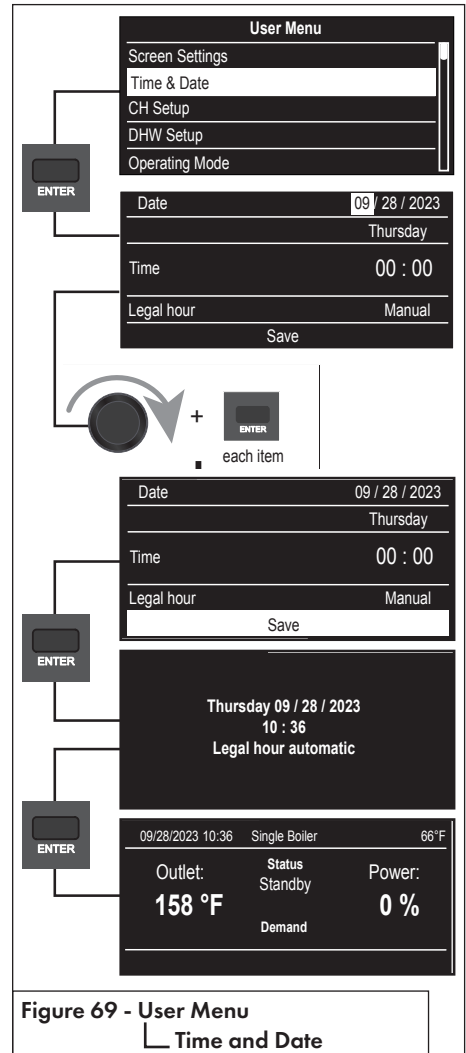


Figure 69 - User Menu Time and Date

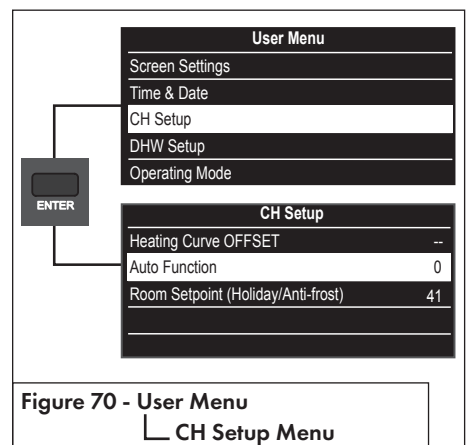


Figure 70 - User Menu CH Setup Menu

## Part 9 - Controls

### 4. User Menu - DHW Setup

Navigate the DHW Setup menu as follows:

1. From the User Menu select "DHW Setup" and press ENTER.
2. Press ENTER to select DHW Setpoint.
3. Turn the dial to modify the value and press ENTER to save it.

**Note:** pressing ESC will exit the setting without saving the new value.

4. Press ESC to return to the previous screen.

| Menu Option   Description (Range)  | Default |
|--|---------|
| <b>DHW SETPOINT (2.0.0)</b>  |         |
| <b>Combi Models</b><br>Establishes the target temperature of the DHW exiting the boiler. (97-140°F)  | 124°F   |
| <b>Non-Combi Models</b><br>establishes the target temperature of the DHW tank (IWH). Setting is only applicable when DHW Mode is set to Tank Sensor. (104-149°F) |         |

Table 30 - DHW Setup

| Approximate Time / Temperature Relationships in Scalds |                     |
|--|---------------------|
| 120°F  | More than 5 minutes |
| 125°F  | 1 1/2 to 2 minutes  |
| 130°F  | About 30 seconds    |
| 135°F  | About 10 seconds    |
| 140°F  | Less than 5 seconds |
| 145°F  | Less than 3 seconds |
| 150°F  | About 1 1/2 seconds |
| 155°F  | About 1 second      |

Table 31 - Approximate Time / Temp. Relationships

## ! WARNING

An ASSE 1017 or ASSE 1070 temperature limiting or mixing valve is recommended in installations servicing disabled or elderly persons, or children. Mixing valves do not eliminate the risk of scalding. To avoid scalding:

- Set the water heater set point temperature as low as possible.
- Feel water before bathing or showering.
- If thermostatic valves are required, use devices specifically designed for such purpose. Install these devices in accordance with instructions provided by the manufacturer.

Failure to install a temperature limiting or mixing valve and follow these instructions could result in property damage, severe personal injury, or death due to scalds.

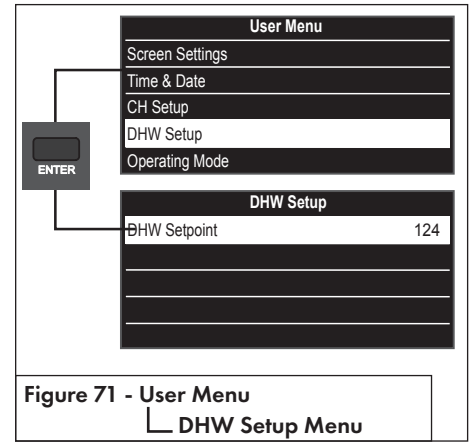


Figure 71 - User Menu  
└ DHW Setup Menu

!

## DANGER

Hotter water increases the risk of scald injury. Scalding may occur within five (5) seconds at a setting of 140°F.

Water temperature over 125°F can instantly cause severe burns or death from scalds. Children, disabled, and elderly persons are at the highest risk of being scalded. See instruction manual before setting temperature at the appliance. Feel water before bathing or showering.

!

### DANGER



### 5. User Menu - Operating Mode

Access the Operating Mode setting as follows:

1. From the User Menu select "Operating Mode" and press ENTER.
2. Turn the dial to highlight the desired settings and press ENTER.


**Note:** pressing ESC will exit the setting without saving the new value.

3. Press ESC to return to the previous screen.

**Note:** the Operating Mode must be set to WINTER in order for the boiler to provide both space and domestic hot water heating.

| Menu Option   Description (Range)  | Default       |
|--|---------------|
| <b>Winter</b>  |               |
| Boiler operates for both central heating (CH) and domestic hot water (DHW) demands, i.e., normal operation.  | <b>Winter</b> |
| <b>Summer</b>  |               |
| Boiler only operates for domestic hot water (DHW) demands.   |               |
| <b>Heating only</b>  |               |
| Boiler only operates for central heating (CH demands).   |               |
| <b>Off</b>   |               |
| Boiler will only operate for Anti-freeze function (if set to Enabled).   |               |
| <b>Holiday</b>   |               |
| Boiler will only run to maintain the room temperatures of zones with NTI Room Sensors at the Holiday setpoint; other CH zones will remain off. DHW will only be heated by the Anti-legionella Function (if set to On), or DHW frost protection (tank temp < 46°F). Holiday operating mode is not selectable from the display, only via the web or mobile app. Note: the boiler will still perform the Anti-freeze Function with Operating Mode set to Holiday. |               |

**Table 32 - Operating Mode**

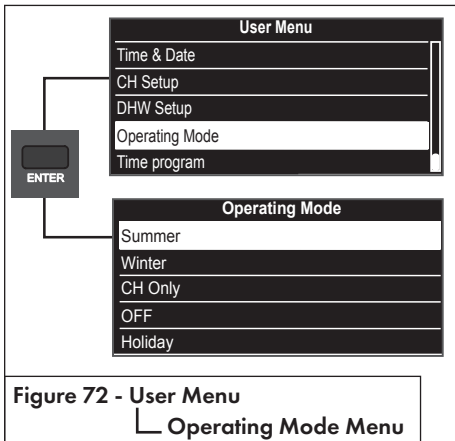

## Part 9 - Controls

### 6. User Menu - Time Program

Navigate the Time Program menu as follows:

1. From the User Menu select "Time Program" and press ENTER.
2. Turn the dial to highlight the option you wish to select and press ENTER.
3. Press ESC to return to the previous screen.

| Menu Option   Description (Range)   | Default        |
|---|----------------|
| <b>ZONE 1</b>   |                |
| <b>ZONE MODE (4.0.4)</b>  |                |
| <p>Allows the user to select the type of schedule for the selected zone:</p> <p><b>Off (0)</b> – disabled, boiler ignores zone 1 demand.</p> <p><b>Always Comfort (1)</b> – temperature is always maintained at the Comfort setpoint.</p> <p><b>Always Reduced (2)</b> – temperature is always maintained at the Reduced setpoint.</p> <p><b>Time Program (3)</b> – temperature setpoint toggles between the Comfort and Reduced setpoints according to the defined time program (see View/Edit Schedule).</p> <p><i>Only applicable when using an NTI Room Sensor.</i></p> | Always Comfort |
| <b>ROOM SETPOINT (COMFORT) (4.0.0)</b>  |                |
| Room temperature setpoint for selected zone during Comfort time period. Only applicable when using an NTI Room Sensor. (50-86°F)  | 66°F           |
| <b>ROOM SETPOINT (REDUCED) (4.0.1)</b>  |                |
| Room temperature setpoint for CH zone 1 during Reduced time period. Only applicable when using an NTI Room Sensor. (50-86°F)  | 61°F           |
| <b>ZONE 2</b>   |                |
| Same options as Zone 1 menu but dedicated to Zone 2.<br><b>Note:</b> parameter numbers for Zone 2 start with "5".   |                |
| <b>VIEW/EDIT SCHEDULE</b>   |                |
| <b>FREE TIME PROGRAMMING</b>  |                |
| The user can create a custom time program for each zone. See Page 65  |                |
| <b>WIZARD TIME PROGRAMMING</b>  |                |
| The display steps the user through creating a custom time program for each zone. See Page 66  |                |
| <b>PRESET PROGRAMS</b>  |                |
| The user can choose from five predefined time programs. See Page 67   |                |

Table 33 - Time Program

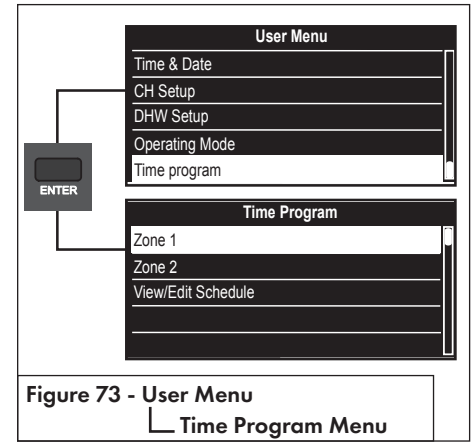


Figure 73 - User Menu  
└ Time Program Menu

**6a. User Menu - Time Program - View/Edit Schedule**

Navigate the View/Edit Schedule as follows:

1. From the Time Program menu turn the dial to highlight the "View/Edit Schedule" option and press ENTER.
2. Press ESC to return to the previous screen.

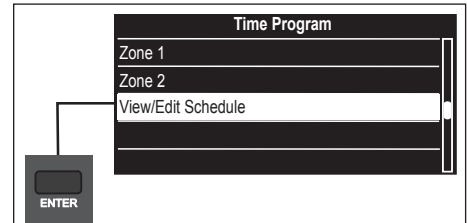



Figure 74 - User Menu



**6b. User Menu - Time Program - View/Edit Schedule - Free Time Programming**

Navigate the Free Time Programming menu as follows:

1. From the View/Edit Schedule menu select "Free Time Programming" and press ENTER.
2. Turn the dial to highlight the zone you wish to select and press ENTER.
3. Proceed with setting the time program as illustrated below.

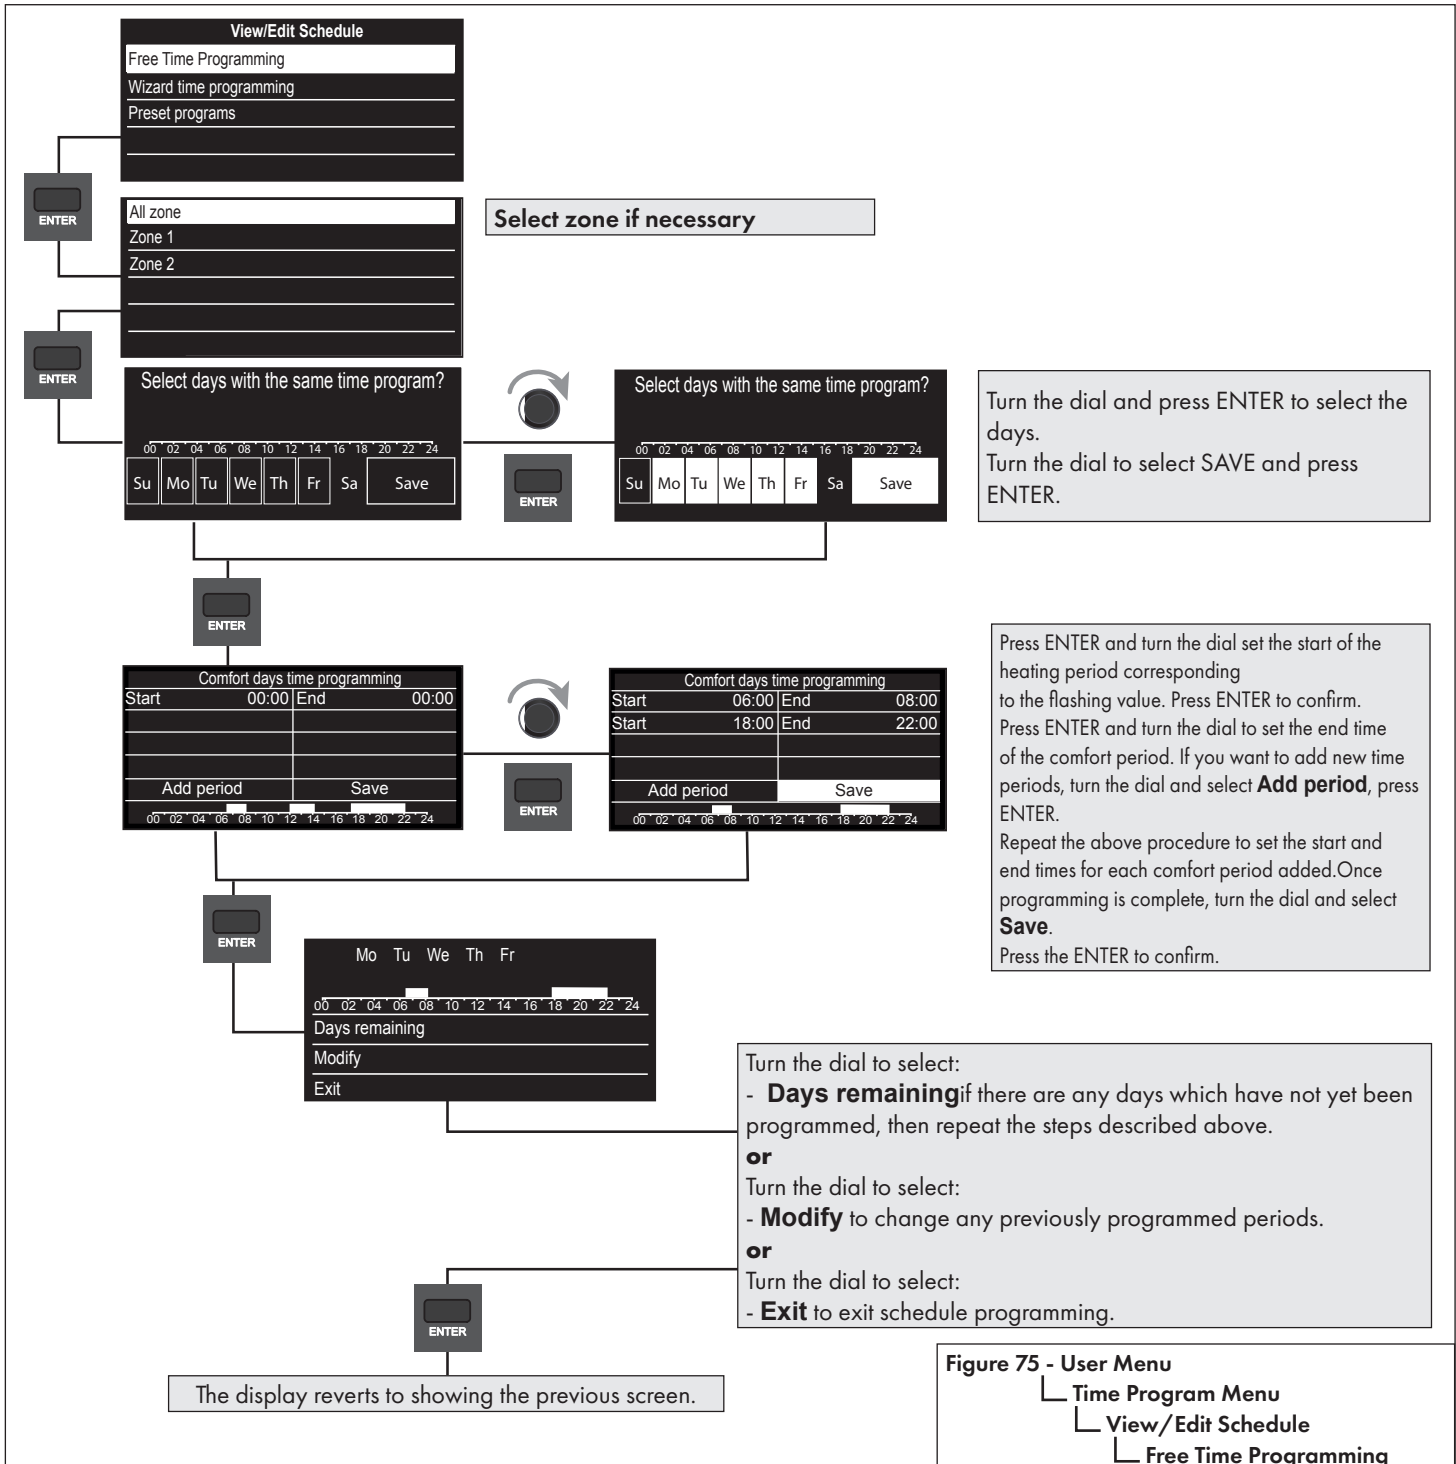

## Part 9 - Controls

### 6c. User Menu - Time Program - View/Edit Schedule - Wizard time programming

Navigate the Wizard Time Programming menu as follows:

1. From the View/Edit Schedule menu select "Wizard Time Programming" and press ENTER.
2. Turn the dial to highlight the zone you wish to select and press ENTER.
3. Proceed with setting the time program as illustrated below.

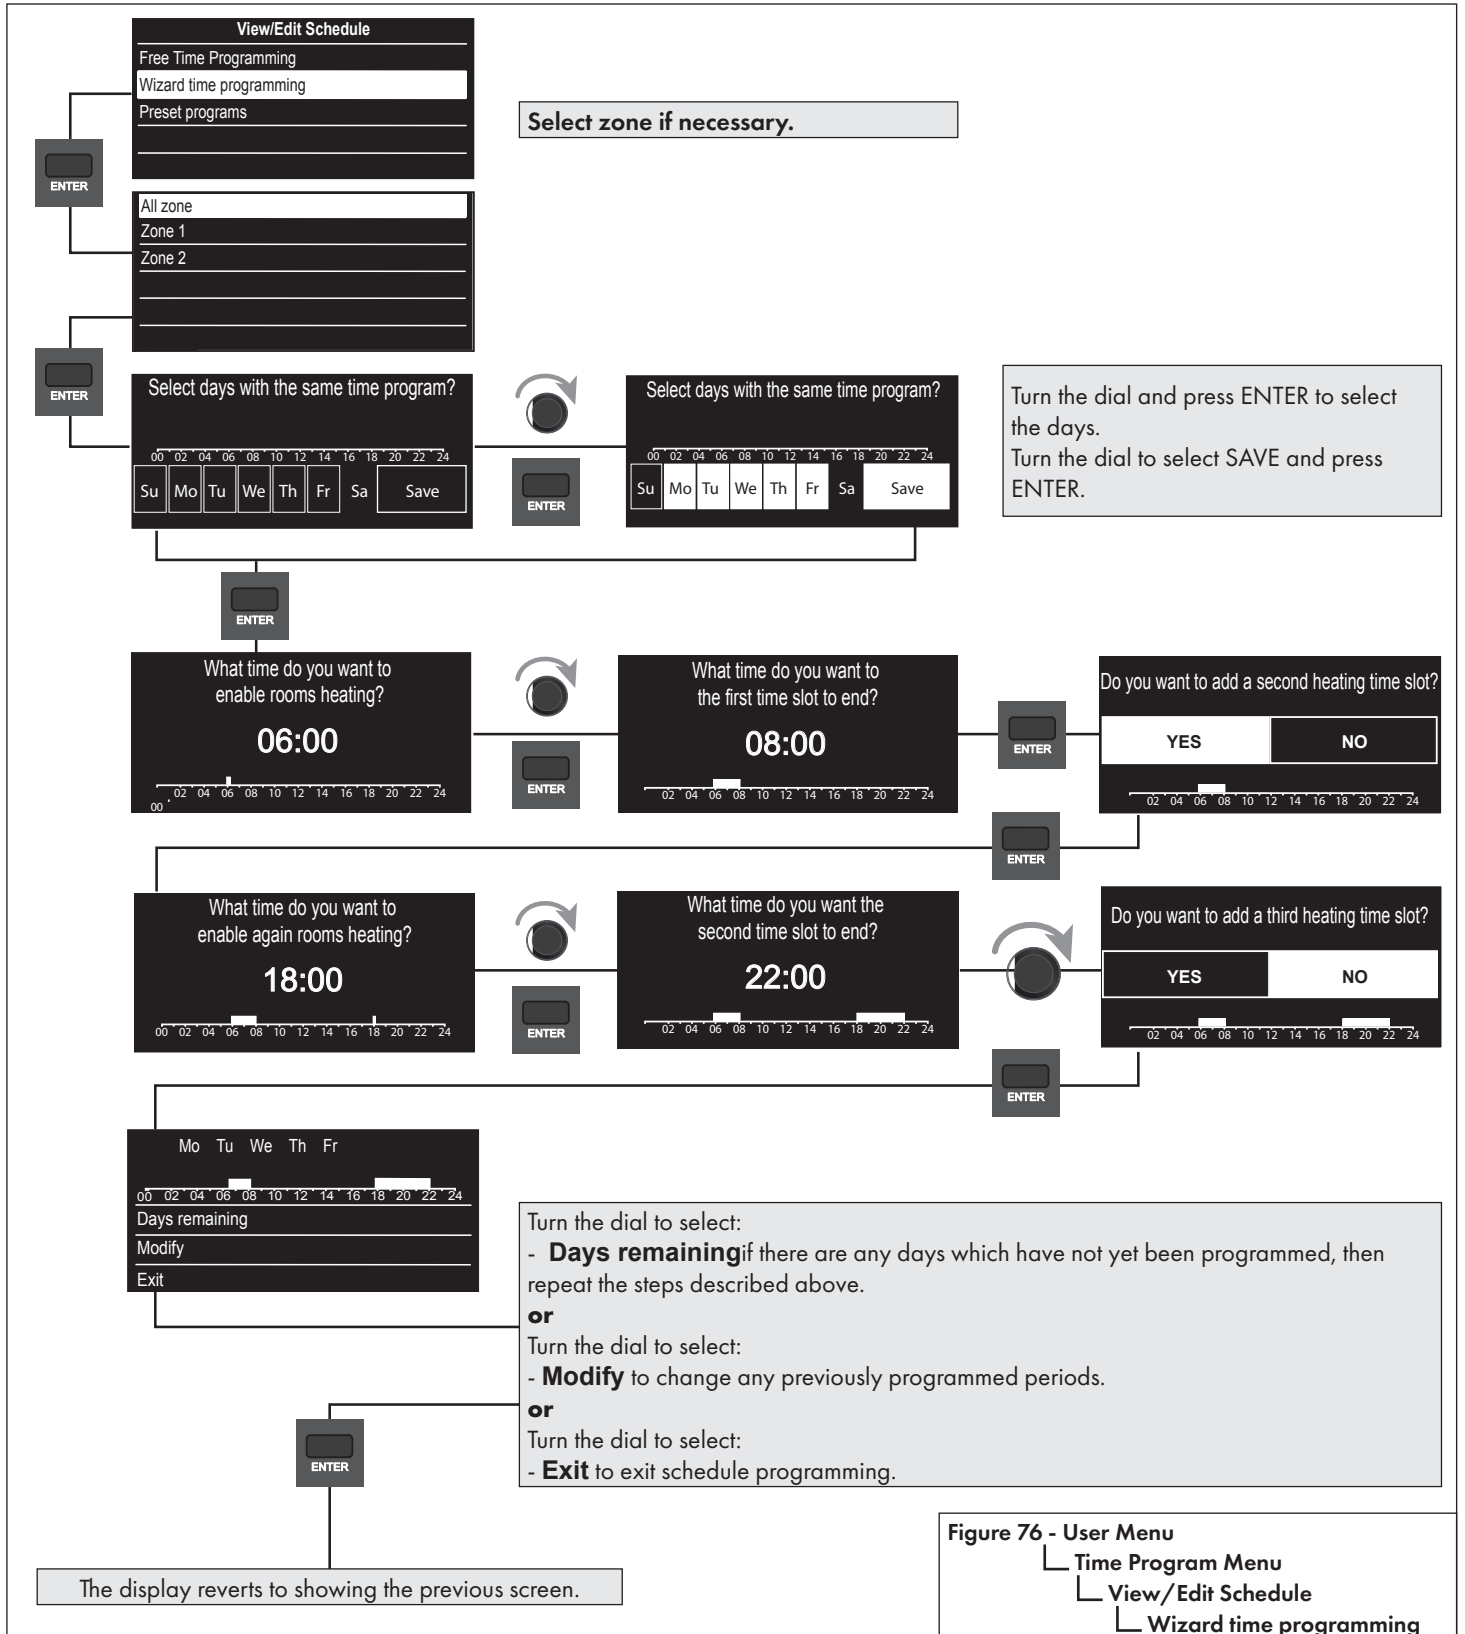


Figure 76 - User Menu  
 Time Program Menu  
 View/Edit Schedule  
 Wizard time programming

**6d. User Menu - Time Program - View/Edit Schedule - PRESET Programs**

Navigate the Preset Programs menu as follows:

1. From the View/Edit Schedule menu select "Preset Programs" and press ENTER.
2. Turn the dial to highlight the zone you wish to select and press ENTER.
3. Proceed with setting the time program as illustrated below.

The end user can choose from five predefined time programs to heat according to his wishes.  
 When a time program is activated, the boiler will operate in the desired time periods to maintain the room temperature at comfort temperature level. Outside these periods, the boiler operates at a reduced temperature level.

| Preset Programs - ON time slots |          |               |               |               |
|---------------------------------|----------|---------------|---------------|---------------|
| Family Program                  | Su       | 07:00 – 22:00 |               |               |
|                                 | Mo-Th    | 05:30 – 22:00 |               |               |
|                                 | Fr-Sa    | 05:30 – 23:00 |               |               |
|                                 | Sa       | 05:30 – 23:30 |               |               |
| No Lunch Program                | Su       | 07:00 – 23:30 |               |               |
|                                 | Mo-Th    | 06:00 – 08:00 | 16:00 – 22:00 |               |
|                                 | Fr       | 06:00 – 08:00 | 15:00 – 23:00 |               |
| Midday Program                  | Su       | 06:00 – 23:00 |               |               |
|                                 | Mo-Th    | 06:00 – 08:00 | 11:30 – 13:00 | 17:00 – 22:00 |
|                                 | Fr       | 06:00 – 08:00 | 11:30 – 23:00 |               |
| Always active                   | All days | 00:00 – 24:00 |               |               |

Table 34 - Time Program - Preset Program

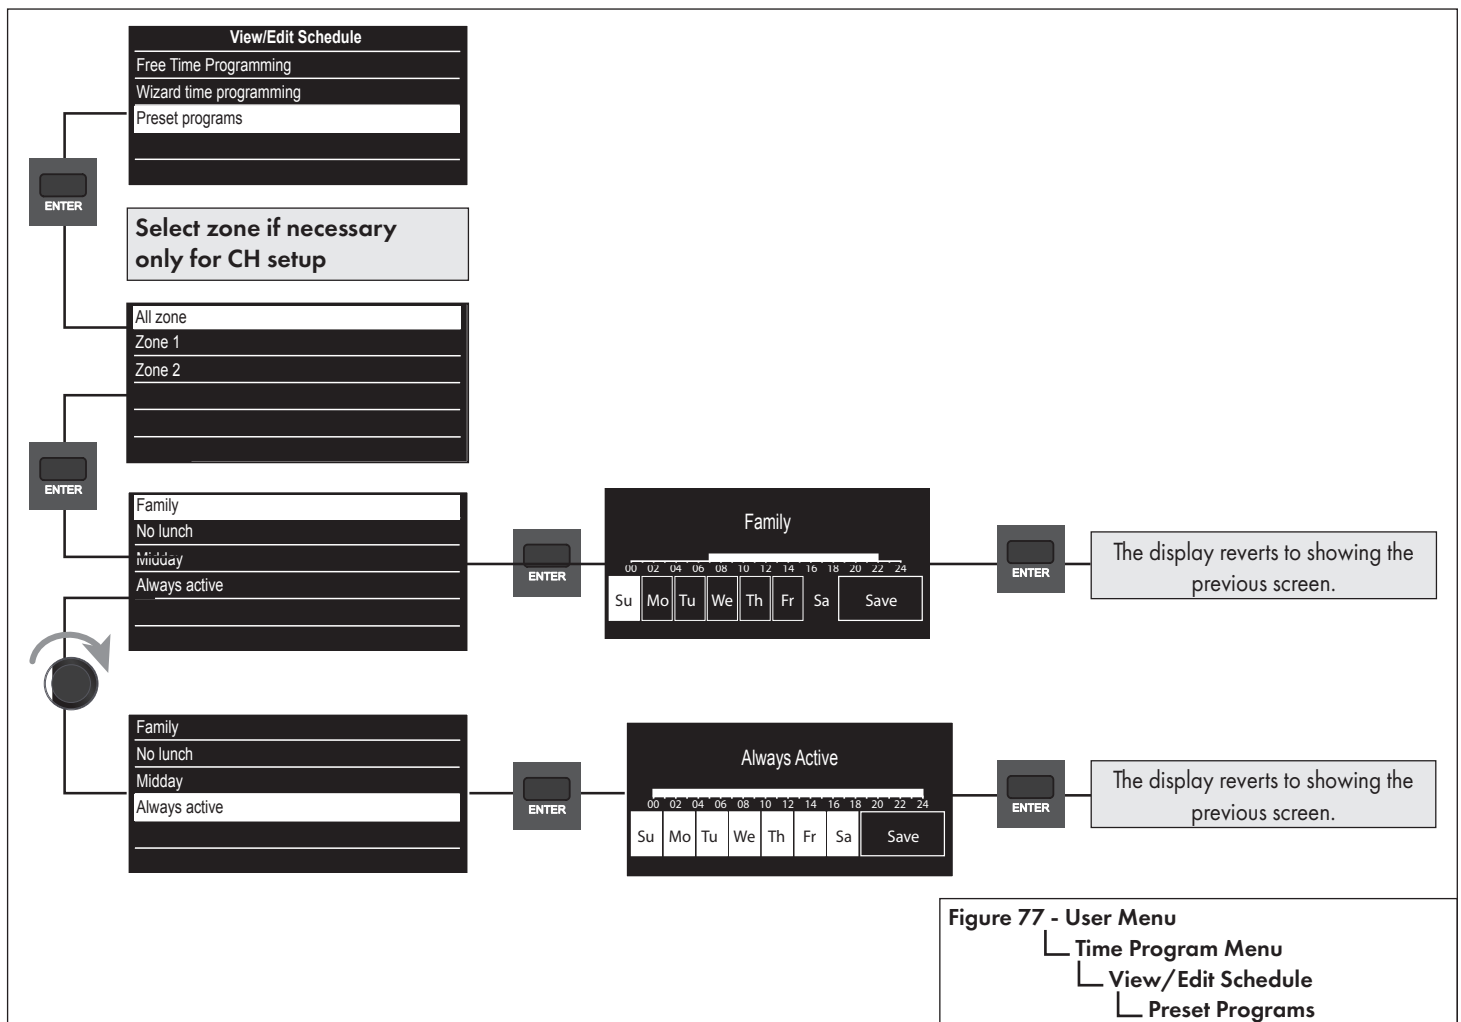


Figure 77 - User Menu  
 L Time Program Menu  
 L View/Edit Schedule  
 L Preset Programs

## H. Tech Menu

Navigate the Tech Menu as follows:

1. From the Main Menu, turn the dial to highlight "Tech Menu" and press ENTER.
2. If prompted, insert the access code; turn the dial to adjust the value to 234 and press ENTER.
3. Turn the dial to highlight the option you wish to access then press ENTER.
4. Press ESC to return to the previous screen.

### 1. CH setup

To navigate the CH Setup menu proceed as follows:

1. From the Tech Menu, turn the dial to highlight "CH Setup" and press ENTER.
2. Scroll to the option you wish to select and press ENTER; repeat for subsequent menus as necessary.
3. Scroll to the parameter to be adjusted/ viewed and press ENTER.
4. Modify the setting by turning the dial, press ENTER to save the value. Note: pressing ESC exits the screen without saving the new value.
5. Press ESC to return to the previous screen.

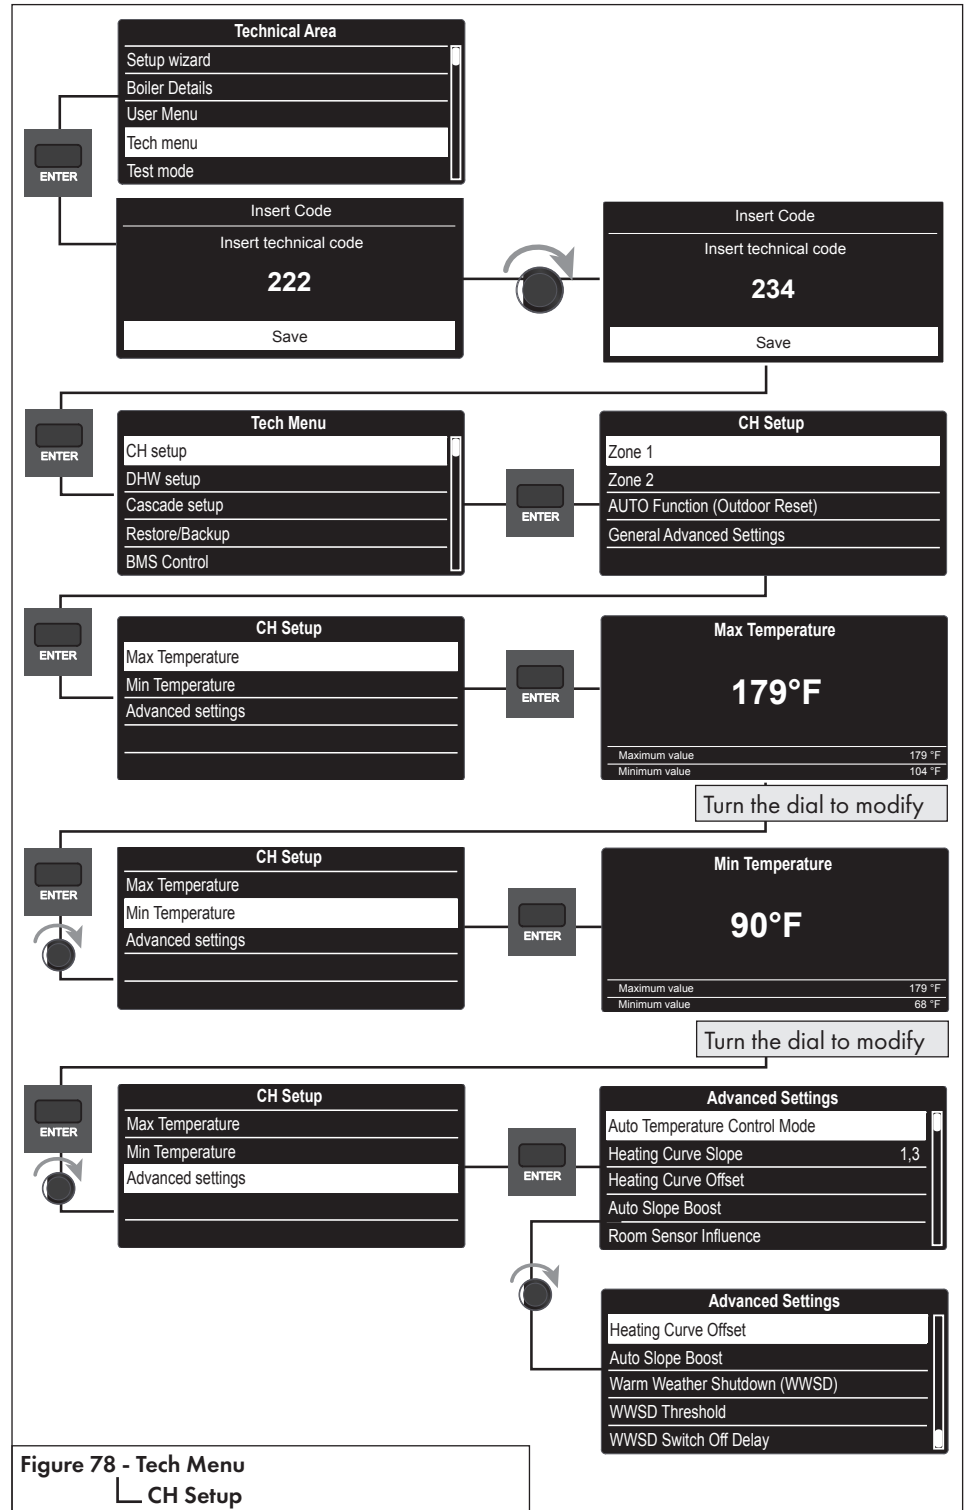


Figure 78 - Tech Menu  
└ CH Setup

| Menu Option   Description (Range)   | Default      |
|---|--------------|
| <b>ZONE 1</b>   |              |
| <b>MAX TEMPERATURE (4.2.5)</b>  |              |
| Sets the maximum allowable setpoint temperature of the boiler when operating for zone 1 demands. (68-179°F)   | 179°F        |
| <b>MIN TEMPERATURE (4.2.6)</b>  |              |
| Sets the minimum allowable setpoint temperature of the boiler when operating for zone 1 demands. (68-179°F)   | 95°F         |
| <b>AUTO FUNCTION (Outdoor Reset)</b>  |              |
| Allows the operator to globally enable/disable the Automatic Temperature Control Mode for all zones.  | On           |
| <b>ADVANCED SETTINGS</b>  |              |
| <b>AUTO TEMPERATURE CONTROL MODE (4.2.1)</b>  |              |
| <p>Sets the type of automatic temperature control for zone 1:</p> <p><b>Fixed Outlet</b> – AUTO Temperature Control is off; boiler operates to the (manually adjustable) Max Temperature setting.</p> <p><b>Basic On/Off</b> – the boiler uses the ON/OFF condition of the room thermostat to boost/reduce the boiler target temperature. With a starting (first time) boiler target temperature of 136°F, the function boosts the target temperature by 7°F every 16 minutes (adjustable via the CH Boost Delay Interval setting) a call for heat is continuously active. Similarly, the target temperature is reduced 7°F every 16 minutes that the heat call is continuously inactive. The temperature will boost/reduce a maximum of 3 times (21°F) for a given thermostat ON/OFF cycle.</p> <p><b>Room Temp</b> – the boiler target temperature automatically adjusts between the Min and Max Temperature Settings, based on the input temperature provided by an optional NTI Room Sensor.</p> <p><b>Outdoor Temp</b> – The boiler target temperature automatically adjusts between the Min and Max Temperature Settings, based on the input temperature provided by the included Outdoor Sensor (or Internet Weather via WiFi connection).</p> <p><b>Room&amp;Outdoor</b> – the boiler target temperature automatically adjusts between the Min and Max Temperature Settings, based upon the input temperatures provided by an optional NTI Room Sensor AND the included Outdoor Sensor (or Internet Weather via WiFi connection).</p> | Outdoor Temp |
| <b>HEATING CURVE SLOPE (4.2.2)</b>  |              |
| Sets the slope of the heating curve for zone 1. The greater the slope, the quicker the boiler target temperature rises as the outdoor temperature decreases. Applicable when AUTO Temperature Control Mode = Outdoor Temp or Room&Outdoor. (0.2-3.5)  | 1.3          |
| <b>HEATING CURVE OFFSET (4.2.3)</b>   |              |
| Provides a means to offset (+/-) the calculated reset boiler target temperature up or down. (-25-25). Note: the setting has no impact if AUTO Function (Outdoor Reset) is disabled, or if Auto Slope Boost = On.  | 0            |
| <b>AUTO SLOPE BOOST (4.7.5)</b>   |              |
| Acts to automatically adjust the slope of the heating curve to better match the needs of the heating system. The function boosts the boiler target temperature by increasing the slope 10% every 10 minutes a call for heat is continuously active, to a maximum of 2X the Heating Curve Slope setting. While the heat call is satisfied, the slope decreases by 1% every minute to a minimum equal to the Heating Curve Slope setting.   | Off          |
| <b>ROOM SENSOR INFLUENCE (4.2.4)</b>  |              |
| Adjusts the influence of room temperature on target boiler temperature – a higher setting causes a greater increase to the boiler target temperature as the indoor temperature drops below room setpoint. Applicable when AUTO Temperature Control Mode = Room Temp or Room&Outdoor. (0-20)   | 4            |
| <b>WARM WEATHER SHUTDOWN (WWSD) (4.1.0)</b>   |              |
| When set to On, disables the zone 1 heating demand when the outdoor temperature exceeds the WWSD Threshold for longer than the WWSD Switch Off Delay time.  |              |
| <b>WWSD THRESHOLD (4.1.1)</b>   |              |
| When set to On, disables the zone 1 heating demand when the outdoor temperature exceeds the WWSD Threshold for longer than the WWSD Switch Off Delay time.  | Off          |
| <b>WWSD THRESHOLD (4.1.1)</b>   |              |
| Outdoor temperature where the zone 1 heating demand is disabled – if WWSD is set to On. (32-86°F)   | 68°F         |
| <b>WWSD SWITCH OFF DELAY (4.1.2)</b>  |              |
| Length of time required for the outdoor temperature to exceed the WWSD Threshold before disabling the zone 1 heating demand. (0-300min)   | 2 min        |

continued on next page



## Part 9 - Controls



continued from the previous page

| Menu Option   Description (Range)  | Default |
|--|---------|
| <b>ZONE 2</b>  |         |
| Same options as Zone 1 menu but dedicated to Zone 2.<br><b>Note:</b> parameter numbers for Zone 2 start with "5".  |         |
| <b>AUTO FUNCTION (OUTDOOR RESET) (2.2.4)</b>   |         |
| Allows the operator to globally enable/disable the Automatic Temperature Control Mode for all zones.   | On      |
| <b>GENERAL ADVANCED SETTING</b>  |         |
| <b>CH ON-DIFFERENTIAL TEMPERATURE (2.10.0)</b>   |         |
| Determines how much the boiler outlet temperature can drop below target before turning the burner back on. (0-36°F)  | 11      |
| <b>CH ANTI-CYCLE TIME MODE (2.3.5)</b>   |         |
| Manual – burner CH anti-cycle time is set manually via setting CH Anti-cycle Time.<br>Automatic – the minimum amount of time burner must remain off between CH burner on cycles is set automatically.  | AUTO    |
| <b>CH ANTI-CYCLE TIME (2.3.6)</b>  |         |
| With CH Anti-cycle Time Mode set to Manual, determines the minimum amount of time the burner must remain off between CH burner on cycles. (0-7min)   | 3 min.  |
| <b>MAX CH POWER (2.3.1)</b>  |         |
| Establishes the maximum power the burner will operate at for CH demands. (0-100%)  | 100%    |
| <b>ANTI-FREEZE FUNCTION (2.10.7)</b>   |         |
| If enabled: <ul style="list-style-type: none"> <li>when the boiler temp drops below 46°F, the boiler, system and zone pumps are turned on in 2-minute intervals</li> <li>when the boiler temp drops below 39°F, the burner is operated at min power for 15 minutes, with switch off/on temperatures of 104/95°F</li> </ul> | On      |
| <b>OUTDOOR TEMP CORRECTION (2.4.9)</b>   |         |
| Allows the operator to adjust/offset the outdoor temperature reading in case the reading from the sensor or Internet weather is incorrect. (-5-5°F)  | 0       |
| <b>CH BOOST DELAY INTERVAL (2.4.4)</b>   |         |
| Sets the time delay between the automatic adjustments of the boiler target temperature in increments of +/- 7°F. Only applicable when the AUTO Temperature Control Mode = Basic On/Off. (0-60min)  | 16 min. |

Table 35 - Tech Menu - CH Setup Menu



**2. DHW setup**

To navigate the DHW Setup menu proceed as follows:

1. From the Tech Menu, turn the dial to highlight "DHW Setup" and press ENTER.
2. Scroll to the option you wish to select and press ENTER; repeat for subsequent menus as necessary.
3. Scroll to the parameter to be adjusted/viewed and press ENTER.
4. Modify the setting by turning the dial, press ENTER to save the value. Note: pressing ESC exits the screen without saving the new value.
5. Press ESC to return to the previous screen.

| Menu Option   Description (Range)   | Default |
|---|---------|
| <b>DHW MODE (2.2.8)</b>   |         |
| <p>Determines the boiler DHW configuration:</p> <p><b>Combi (0)</b> – reserved for a Combi model with internal brazed plate heat exchanger and flow meter/switch.</p> <p><b>Tanks Sensor (1)</b> – boiler is expecting a temperature sensor reading from an IWH.</p> <p><b>Aquastat (2)</b> – boiler is expecting an on/off switch input from an IWH.</p> <p><b>No DHW (3)</b> – equivalent to Aquastat (2) setting, but also turns on the CH Forced Diverter Position (2.10.8 = 1)</p> | 0/2     |
| <b>DHW SETPOINT (2.0.0)</b>   |         |
| <p><b>Combi Models</b> – establishes the target temperature of the DHW exiting the boiler. (97-140°F)</p> <p><b>Non-Combi Models</b> – establishes the target temperature of the DHW tank (IWH). Setting is only applicable when DHW Mode is set to Tank Sensor. (104-149°F).</p>   | 124°F   |
| <b>ADVANCED SETTINGS</b>  |         |
| <b>TANK ON DIFFERENTIAL (2.10.2)</b>  |         |
| <p>Sets how much the DHW storage tank temperature can drop below target before initiating a DHW demand. Only applicable with a non-Combi boiler using a Tank Sensor. (0-36°F)</p>   | 0 °F    |
| <b>MODULATION SETPOINT (2.10.1)</b>   |         |
| <p>Provides a means to offset (+/-) the calculated reset boiler target temperature up or down. (-25-25)<br/>Note: the setting has no impact if AUTO Function (Outdoor Reset) is disabled, or if Auto Slope Boost = On.</p>  | 0       |
| <b>AUTO SLOPE BOOST (4.7.5)</b>   |         |
| <p>Determines how long a CH or DHW demand can last before the priority is switched. A value of 0 keeps the priority with DHW indefinitely. (0-1440min)</p>  | 45 min. |
| <b>DHW MAX POWER (2.12.1)</b>   |         |
| <p>Establishes the maximum power the burner will operate at for DHW demands. (0-100%)</p>   | 100%    |
| <b>CH FORCED DIVERTER POSITION (2.10.8)</b>   |         |
| <p>When enabled, forces the 3-way valve to remain in the Central Heat position under all operating conditions, i.e., both CH and DHW.</p>   | Off     |

Table 36 - Tech Menu - DHW Setup Menu

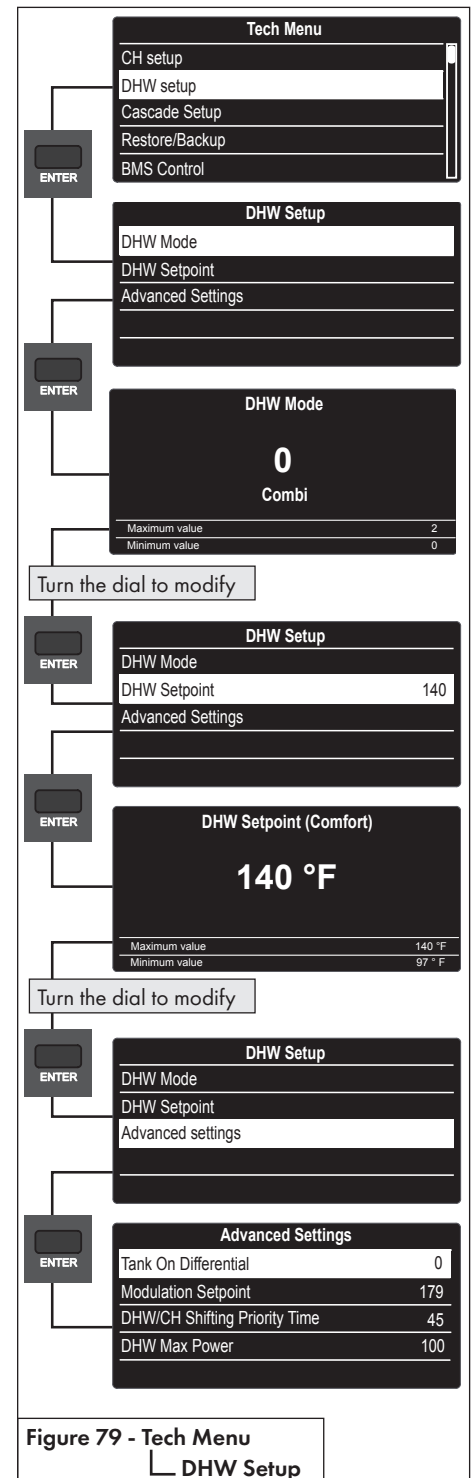


Figure 79 - Tech Menu  
└ DHW Setup

## Part 9 - Controls



### 3. Cascade Setup

To navigate the Restore/Backup menu proceed as follows:

1. From the Tech Menu, turn the dial to highlight "Cascade Setup" and press ENTER.
2. Scroll to the option you wish to select and press ENTER; repeat for subsequent menus as necessary.
3. Modify the setting by turning the dial, press ENTER to save the value. Note: pressing ESC exits the screen without saving the new value.
4. Press ESC to return to the previous screen.

## NOTICE

In the case of cascade installation, read the manual "Cascade System Installation" before accessing the menu.

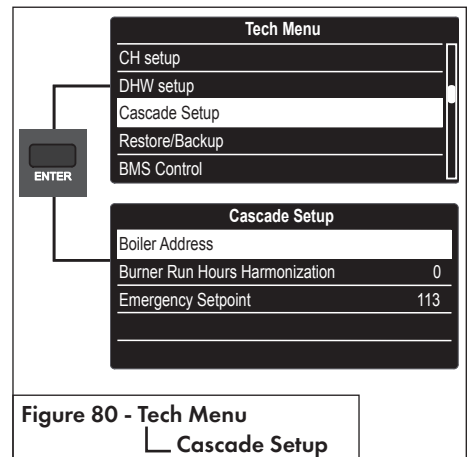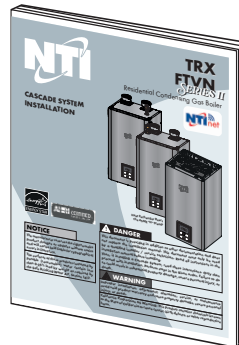


### 4. Restore/Backup

To navigate the Restore/Backup menu proceed as follows:

1. From the Tech Menu, turn the dial to highlight "Restore/Backup" and press ENTER.
2. Press ENTER to select "Reset PCB to Factory Default Settings".
3. Press ENTER to restore the factory settings, or ESC to return to the previous screen without restoring the factory settings."

Resets the PCB setting to the values originally set on the PCB at the factory. Note: if it is a replacement PCB the settings will be reset to the default settings of a replacement PCB."

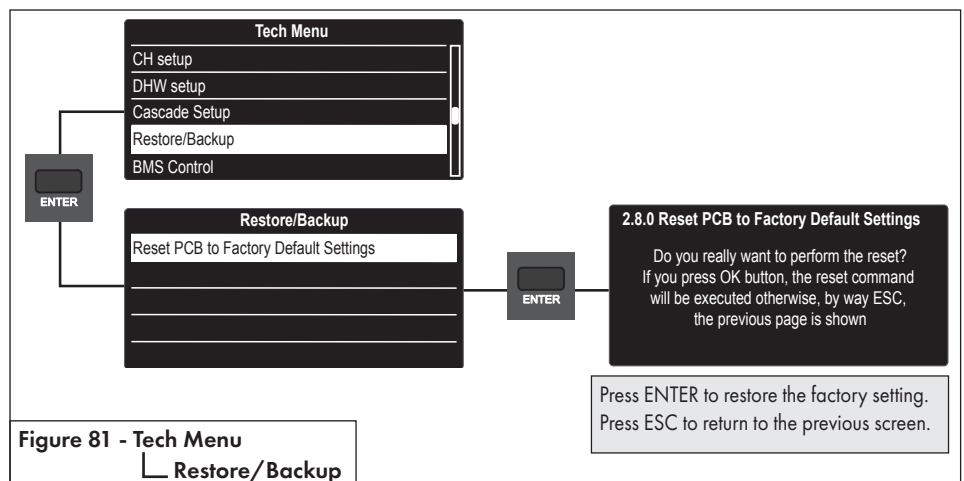

5. BMS Controls

**Building Management System.**  
Only visible with 0-10V / 4-20mA Clip-In Board installed

To navigate the BMS Control menu proceed as follows:

1. From the Tech Menu, turn the dial to highlight “BMS Control” and press ENTER.
2. Scroll to the parameter to be adjusted/viewed and press ENTER.  
**Note:** most parameter options will only be visible after setting Control Mode ≠ 0, and after exiting and reentering the BMS Control menu.
3. Modify the setting by turning the dial, press ENTER to save the value.  
**Note:** pressing ESC exits the screen without saving the new value.
4. Press ESC to return to the previous screen.

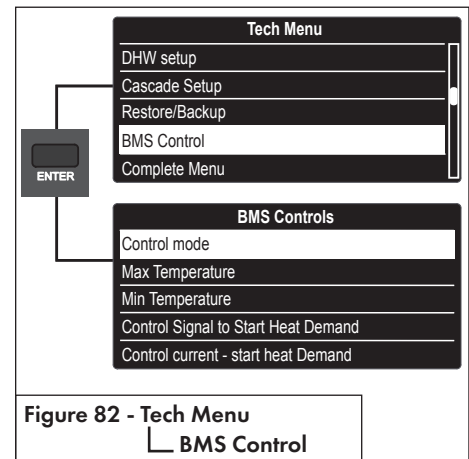


Figure 82 - Tech Menu  
└ BMS Control

| Menu Option   Description (Range)  | Default      |
|--|--------------|
| <b>CONTROL MODE (42.0.0)</b>   |              |
| Disabled (0) – the boiler maintains control of the burner power and setpoint temperature.<br>0-10V (Power or Temp) (1 or 2) – the boiler power level, or setpoint temperature, is modulated proportionally to the 0-10V input signal.<br>Current (Power or Temp) (3 or 4) – the boiler power level, or setpoint temperature, is modulated proportionally to the 4-20mA input signal. | Disabled     |
| <b>MAX TEMPERATURE (42.0.1)</b>  |              |
| Sets the maximum boiler temperature, corresponding to an input signal equal to the Max Control Signal, when Control Mode = 2 or 4. (Range = Min Temperature to 179°F)  | 179°F        |
| <b>MIN TEMPERATURE (42.0.2)</b>  |              |
| Sets the minimum boiler temperature, corresponding to an input signal equal to the Min Control Signal, when Control Mode = 1 or 3. (Range = 68°F to Max Temperature)   | 68°F         |
| <b>CONTROL SIGNAL TO START HEAT DEMAND (42.1.0) / CONTROL CURRENT – START HEAT DEMAND (42.1.4)</b>   |              |
| Sets the minimum input control signal required to start a heat demand. (Range = Control Signal to Stop Heat Demand to Min Control Signal)  | 1.0V / 4mA   |
| <b>CONTROL SIGNAL TO STOP HEAT DEMAND (42.1.1) / CONTROL CURRENT – STOP HEAT DEMAND (42.1.5)</b>   |              |
| Sets the control signal that correlates to the Max Temperature if Control Mode = 2 or 4, or max burner power if Control Mode = 1 or 3. (Range = Min Control Signal to 10.0V/20mA)  | 0.5V / 2mA   |
| <b>MAX CONTROL SIGNAL (42.1.2) /CONTROL CURRENT – MAXIMUM DEMAND (42.1.6)</b>  |              |
| Sets the control signal that correlates to the Max Temperature if Control Mode = 2 or 4, or max burner power if Control Mode = 1 or 3. (Range = Min Control Signal to 10.0V/20mA)  | 10.0V / 20mA |
| <b>MIN CONTROL SIGNAL (42.1.3) /CONTROL CURRENT – MINIMUM DEMAND (42.1.7)</b>  |              |
| Sets the control signal that correlates to the Min Temperature if Control Mode = 2 or 4, or min burner power if Control Mode = 1 or 3. (Range = Control Signal to Start Heat Demand to Max Control Signal)   | 2.0V / 4mA   |

Table 37 - Tech Menu - BMS Controls Menu

## Part 9 - Controls

### 6. Complete Menu

To navigate the Complete Menu proceed as follows:

1. From the Tech Menu, turn the dial to highlight "Complete Menu" and press ENTER.
2. Turn the dial to select the menu level and press ENTER.
3. Turn the dial to select the sub menu level and press ENTER.
4. Turn the dial to select the parameter and press ENTER.
5. Modify the setting by turning the dial, press ENTER to save the value.  
**Note:** pressing ESC exits the screen without saving the new value.
6. Press ESC to return to the previous screen.

| COMPLETE MENU - see table on following pages |   |
|--|---|
| <b>0 NETWORK</b>                             | <b>8 Service Paramters</b>                |
| 0. 2 Bus Network                             | 8. 0 Statistics - 1                       |
| 0. 4 User interface                          | 8. 1 Statistics - 2                       |
| <b>2 Boiler parameters</b>                   | 8. 2 Boiler Current Status                |
| 2. 0 General                                 | 8. 3 Boiler Current Temperatures          |
| 2. 1 Free parameters                         | 8. 4 Storage Current Status               |
| 2. 2 Settings                                | 8. 5 Service                              |
| 2. 3 Boiler CH parameters - 1                | 8. 6 Error History                        |
| 2. 4 Boiler CH parameters - 2                | 8. 7 Free parameters                      |
| 2. 5 DHW parameters                          | <b>19 Connectivity</b>                    |
| 2. 6 Boiler Manual Control                   | 19. 0 WiFi Configuration                  |
| 2. 7 Test & Utilities                        | 19. 1 Connectivity Info                   |
| 2. 8 Reset Factory Settings                  | 19. 2 Reset Menu                          |
| 2. 9 Other parameters 1                      | <b>21 2-Zone Control Module</b>           |
| 2. 10 Other parameters 2                     | 21. 1 2-Zone Control Module Test          |
| <b>4 Zone 1 parameters</b>                   | 21. 4 2-Zone Control Module Diagnostics   |
| 4. 0 Temperature Settings                    | 21. 8 2-Zone Control Module Configuration |
| 4. 1 Automatic Winter Mode                   | <b>42 BMS Control</b>                     |
| 4. 2 Zone 1 settings                         | 42. 0 General                             |
| 4. 3 Diagnostics                             | 42. 1 Analog level settings               |
| 4. 7 Zone 1 regulation parameters            | 42. 2 Diagnostics                         |
| <b>5 Parametri Zona 2</b>                    |   |
| 5. 0 Temperature Settings                    |   |
| 5. 1 Automatic Winter Mode                   |   |
| 5. 2 Zone 2 settings                         |   |
| 5. 3 Diagnostics                             |   |
| 5. 7 Zone 2 regulation parameters            |   |
| <b>6 Parametri Zona 3</b>                    |   |
| 6. 0 Temperature Settings                    |   |
| 6. 1 Automatic Winter Mode                   |   |
| 6. 2 Zone 3 settings                         |   |
| 6. 3 Diagnostics                             |   |
| 6. 7 Zone 3 regulation parameters            |   |
| <b>7 External 3-zone control module</b>      |   |
| 7. 0   |   |
| 7. 1 Manual Mode                             |   |
| 7. 2 General Zone Module                     |   |
| 7. 3 Cooling                                 |   |
| 7. 8 Error History                           |   |
| 7. 9 Reset Menu                              |   |

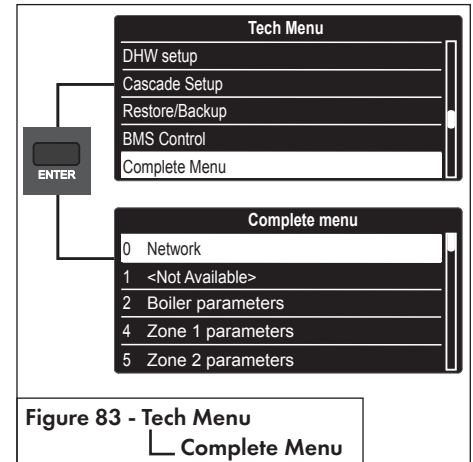


Figure 83 - Tech Menu  
Complete Menu

6.1 Complete Menu Parameters

| Menu | Sub-Menu                 | Parameter                           | Description   | Value  | Default Setting |
|------|--------------------------|-------------------------------------|---|--|-----------------|
|      |                          |                                     | Note  |  |                 |
| 0    | <b>NETWORK</b>           |                                     |   |  |                 |
| 0.   | 2                        | <b>BUS NETWORK</b>                  |   |  |                 |
| 0.   | 2.                       | 0                                   | Network presence  | Boiler<br>Remote Modem<br>Multifunction clip   |                 |
| 0    | 4                        | <b>USER INTERFACE</b>               |   |  |                 |
| 0.   | 4.                       | 1                                   | Backlight timing  | 1 - 10 minutes<br>or 24 hours  | 10              |
| 0.   | 4.                       | 6                                   | Cascade Boiler Configuration<br><br>Solo su Menu Cascade setup  | UNDEF = undefined<br>b-SIN = single boiler<br>b-MAS = master boiler<br>b-FL1 = follower #1 boiler<br>b-FL2 = Follower #2<br>b-FL3 = Follower #3<br>b-FL4 = Follower #4<br>b-FL5 = Follower #5<br>b-FL6 = Follower #6,<br>b-FL7 = Follower #7 | b-SIN           |
|      |                          |                                     | <b>RESERVED FOR CASCADE APPLICATIONS.</b><br>See <i>Cascade Instruction Manual</i> for details.   |  |                 |
| 2    | <b>BOILER PARAMETERS</b> |                                     |   |  |                 |
| 2.   | 0                        | <b>GENERAL</b>                      |   |  |                 |
| 2.   | 0.                       | 0                                   | DHW Setpoint Temperature<br><b>COMPASS COMBI</b>  | 97 - 140°F   | 125             |
|      |                          |                                     | Tank Setpoint (Comfort)<br><b>COMPASS non-COMBI</b>   | 104 - 149°F  | 125             |
| 2.   | 0.                       | 1                                   | <b>DHW Preheating</b>   | 0 = Disabled<br>1 = Enabled  | 1               |
|      |                          |                                     | Enables/disables comfort on/off setting via COMFORT button and parameter 2.5.0.   |  |                 |
| 2.   | 1                        | <b>FREE PARAMETERS (DO NOT USE)</b> |   |  |                 |
| 2.   | 1.                       | 1                                   | DO NOT USE nonn se vede   |  |                 |
| 2.   | 1.                       | 2                                   | 3-way Valve Anti-Noise Function   | 0-10   | 6               |
|      |                          |                                     | Function can be utilized to reduce the stroke of the 3-way valve when transitioning between the CH and DHW positions. Consult NTI Technical Support before utilizing. |  |                 |
| 2.   | 1.                       | 3                                   | DO NOT USE  |  |                 |
| 2.   | 1.                       | 5                                   | DO NOT USE  |  |                 |
| 2.   | 1.                       | 6                                   | DO NOT USE  |  |                 |
| 2.   | 1.                       | 9                                   | Flow Sensor Type  | 0 = Flow Switch<br>1 = Flow Meter  | 1               |
|      |                          |                                     | <b>COMPASS</b> models use a flowmeter.<br>Not applicable for non-COMBI models.  |  |                 |
| 2.   | 2                        | <b>SETTINGS</b>                     |   |  |                 |

| Menu | Sub-Menu | Parameter                       | Description  | Value  | Default Setting |
|------|----------|---------------------------------|--|--|-----------------|
|      |          |                                 | Note   |  |                 |
| 2.   | 2.       | 0                               | Ignition Power   | 25 - 65  |                 |
|      |          |                                 | <b>NC085</b> 40  |  |                 |
|      |          |                                 | <b>NC110</b> 28  |  |                 |
|      |          |                                 | <b>NC110C</b> 28   |  |                 |
|      |          |                                 | <b>NC150</b> 35  |  |                 |
|      |          |                                 | <b>NC150C</b> 35   |  |                 |
|      |          |                                 | <b>NC199</b> 34  |  |                 |
|      |          |                                 | <b>NC199C</b> 34   |  |                 |
|      |          |                                 | <b>RESERVED FOR TECHNICAL ASSISTANCE</b><br>Only if the PCB is replaced.                                       |  |                 |
| 2.   | 2.       | 3                               | Floor or 2nd Room Thermostat   | 0 = Floor<br>1 = Room  | 1               |
| 2.   | 2.       | 4                               | AUTO Function (Outdoor Reset)  | 0 = Disabled<br>1 = Enabled  | 0               |
| 2.   | 2.       | 5                               | CH Start Delay Heating ignition delay (for new demand)   | 0 = ALWAYS OFF ,<br>1 = 10 seconds<br>2 = 90 seconds,<br>3 = 210 seconds | 0               |
| 2.   | 2.       | 8                               | Boiler version - <b>COMPASS Combi</b><br>CANNOT BE MODIFIED  | 0 = Combi  | 0               |
|      |          |                                 | Boiler Version - <b>COMPASS</b><br>Type of DHW control for Indirect Hot Water Heater (Tank Sensor or Aquastat) |  |                 |
|      |          |                                 | 0 = NOT USED<br>1 = Storage with Tank Sensor<br>2 = Storage with Aquastat                                      |  |                 |
| 2.   | 2.       | 9                               | Set boiler heating power   | 0 - 682 kBtu/h   |                 |
|      |          |                                 | Only if the PCB is changed   |  |                 |
| 2.   | 3        | <b>BOILER CH PARAMETERS - 1</b> |  |  |                 |
| 2.   | 3.       | 1                               | Max CH Power percentage  | 0 - 100  | 100             |
|      |          |                                 | Limited by the absolute values defined by parameters 2.3.3 and 2.3.4, i.e., 0 = min power and 100 = max power. |  |                 |
| 2.   | 3.       | 2                               | Max DHW percentage<br>CANNOT BE MODIFIED   | 55 - 100   |                 |
|      |          |                                 | <b>NC085</b> 78  |  |                 |
|      |          |                                 | <b>NC110</b> 100   |  |                 |
|      |          |                                 | <b>NC110C</b> 100  |  |                 |
|      |          |                                 | <b>NC150</b> 91  |  |                 |
|      |          |                                 | <b>NC150C</b> 91   |  |                 |
|      |          |                                 | <b>NC199</b> 91  |  |                 |
|      |          |                                 | <b>NC199C</b> 93   |  |                 |
|      |          |                                 | <b>RESERVED FOR TECHNICAL ASSISTANCE</b><br>Only if the gas or PCB is changed.                                 |  |                 |
| 2.   | 3.       | 3                               | Min percentage<br>CANNOT BE MODIFIED   | 0 - 100  |                 |
|      |          |                                 | <b>NC085</b> 7   |  |                 |
|      |          |                                 | <b>NC110</b> 11  |  |                 |
|      |          |                                 | <b>NC110C</b> 11   |  |                 |
|      |          |                                 | <b>NC150</b> 6   |  |                 |
|      |          |                                 | <b>NC150C</b> 6  |  |                 |
|      |          |                                 | <b>NC199</b> 6   |  |                 |
|      |          |                                 | <b>NC199C</b> 4  |  |                 |
|      |          |                                 | <b>RESERVED FOR TECHNICAL ASSISTANCE</b><br>Only if the gas or PCB is changed.                                 |  |                 |

## Part 9 - Controls

| Menu | Sub-Menu | Parameter                       | Description  | Value   | Default Setting         |
|------|----------|---------------------------------|--|---|-------------------------|
|      |          |                                 | Note   |   |                         |
| 2.   | 3.       | 4                               | Max CH percentage  | 55 - 100  |                         |
|      |          |                                 | CANNOT BE MODIFIED   |   |                         |
|      |          |                                 | <b>NC085</b>   |   | 78                      |
|      |          |                                 | <b>NC110</b>   |   | 100                     |
|      |          |                                 | <b>NC110C</b>  |   | 100                     |
|      |          |                                 | <b>NC150</b>   |   | 91                      |
|      |          |                                 | <b>NC 150C</b>   |   | 91                      |
|      |          |                                 | <b>NC199</b>   |   | 91                      |
|      |          |                                 | <b>NC199C</b>  |   | 93                      |
|      |          |                                 | <b>RESERVED FOR TECHNICAL ASSISTANCE</b>   |   |                         |
|      |          |                                 | Only if the gas or PCB is changed.   |   |                         |
| 2.   | 3.       | 5                               | CH Anti-cycle Time Mode  | 0 = Manual<br>1 = Automatic                           | 1                       |
| 2.   | 3.       | 6                               | CH Anti-cycle Time (when 2.3.5 = 0)  | 0 - 7 (minutes)                                       | 3                       |
| 2.   | 3.       | 7                               | Boiler Pump Overrun (CH)   | 0 - 15 minutes or OC (On Continuously)                | 3                       |
| 2.   | 4.       | <b>BOILER CH PARAMETERS - 2</b> |  |   |                         |
| 2.   | 4.       | 1                               | Warning pressure 1P4   | da 5.8 a 11.6 psi                                     | 8.7                     |
| 2.   | 4.       | 3                               | CH Fan Post-Purge  | 0 = OFF 2 minutes,<br>1 = ON5 minutes                 | 0                       |
| 2.   | 4.       | 4                               | CH Boost Delay Interval  | 0 - 60 (minutes)                                      | 16                      |
|      |          |                                 | Only applicable when the type of temperature control is set to Basic Temp. Control (Parameter 4.2.1 - 5.2.1 - 6.2.1 = 1).  |   |                         |
|      |          |                                 | Sets the time delay between the automatic adjustments of the boiler target temperature in increments of +/- 7°F.   |   |                         |
| 2.   | 4.       | 7                               | CH Pressure Safety   | 1 = Pressure Switch<br>2 = Pressure Sensor            | 2                       |
|      |          |                                 | <b>RESERVED FOR TECHNICAL ASSISTANCE</b>   |   |                         |
|      |          |                                 | Only if the PCB is changed   |   |                         |
| 2.   | 4.       | 9                               | Outdoor Temp Correction  | -5 - +5 (°F)  | 0                       |
|      |          |                                 | Only active with outdoor sensor connected  |   |                         |
| 2.   | 5.       | <b>DHW PARAMETERS</b>           |  |   |                         |
| 2.   | 5.       | 0                               | DHW comfort function   | 0 = Disabled<br>1 = Time Program<br>2 = Always Active | 0 - Combi<br>2 - Boiler |
|      |          |                                 | <b>NC System models set to 2</b>   |   |                         |
|      |          |                                 | <b>Always On</b> = This is not changeable.   |   |                         |
|      |          |                                 | <b>NC Combi models set to 0</b>  |   |                         |
|      |          |                                 | <b>Deactivated</b> = COMFORT function is not active.   |   |                         |
|      |          |                                 | <b>NC Combi models set to 1 or 2</b>   |   |                         |
|      |          |                                 | <b>On</b> (activates conditionally once per Comfort Anti-cycling Time) = Activating the COMFORT function keeps the DHW heat exchanger temperature warm when a DHW demand is not active. This reduces the amount of time it takes for the boiler to meet a hot water demand. COMFORT will display when this function is active. |   |                         |
|      |          |                                 | <b>NOTE:</b> Parameter 251 "Comfort Anti-cycling Time", is defaulted to 0 min, and has a range [0 - 120] min.  |   |                         |
| 2.   | 5.       | 1                               | DHW Comfort Anti-cycling Time  | 0 - 120 (minutes)                                     | 60                      |

| Menu | Sub-Menu | Parameter                    | Description   | Value   | Default Setting |
|------|----------|------------------------------|---|---|-----------------|
|      |          |                              | Note  |   |                 |
| 2.   | 5.       | 2                            | DHW Start Delay   | 5 - 200 (0.5 to 20 seconds)                             | 5               |
|      |          |                              | Anti "water hammering"  |   |                 |
| 2.   | 5.       | 3                            | DHW switch off logic  | 0 = anti-scale (stop at > 144°F)<br>1 = + 7 °F /setting | 0               |
| 2.   | 5.       | 4                            | DHW Post Purge and Pump Cycle   | 0 = OFF<br>1 = ON                                       | 0               |
|      |          |                              | OFF = 3 minutes post-circulation and post-ventilation after DHW draw-off if the boiler temperature requires it.   |   |                 |
|      |          |                              | ON = Always on for 3 minutes post-circulation and post-ventilation after DHW draw-off.  |   |                 |
| 2.   | 5.       | 5                            | CH Start Delay Following DHW  | 0 - 30 (minutes)  | 0               |
| 2.   | 5.       | 7                            | Thermal Cleanse Function  | 0 = OFF<br>1 = ON                                       | 0               |
|      |          |                              | <b>NC System</b> = Activated when the boiler is connected to a tank by an NTC sensor (Parameter 228 = 1).   |   |                 |
|      |          |                              | This function prevents the formation of Legionnaire's disease bacteria which may develop in piping and indirect water heaters (IWH) at temperatures between 68°F and 104°F. When activated, if the IWH temperature stays below 138°F for over 100 hours, the boiler will heat the water in the IWH until it reaches 149°F for 30 minutes. |   |                 |
| 2.   | 5.       | 8                            | Thermal Cleanse Cycle frequency   | 24 - 720 (Hours),<br>or 30 days                         | 30 days         |
|      |          |                              | <b>NC System</b> = Activated when the boiler is connected to a tank by an NTC sensor (Parameter 228 = 1).   |   |                 |
| 2.   | 6.       | <b>BOILER MANUAL CONTROL</b> |   |   |                 |
|      |          |                              | Only to test components   |   |                 |
| 2.   | 6.       | 0                            | Manual Mode Activation  | 0 = OFF<br>1 = ON                                       | 0               |
| 2.   | 6.       | 1                            | Boiler pump control   | 0 = OFF,<br>1 = ON                                      | 0               |
|      |          |                              | Set Parameter 260=1   |   |                 |
| 2.   | 6.       | 2                            | Fan control   | 0 = OFF,<br>1 = ON                                      | 0               |
|      |          |                              | Set Parameter 260=1   |   |                 |
| 2.   | 6.       | 3                            | 3 way valve control   | 0 = DHW,<br>1 = Heating                                 | 0               |
|      |          |                              | Set Parameter 260=1   |   |                 |
| 2.   | 7.       | <b>TEST &amp; UTILITIES</b>  |   |   |                 |
| 2.   | 7.       | 0                            | Test Mode   | 0 = OFF<br>1 = ON                                       |                 |
|      |          |                              | Test Mode deactivates after 30 minutes or by pressing <b>Reset</b> .  |   |                 |
| 2.   | 7.       | 1                            | Air-purge cycle   | 0 = OFF<br>1 = ON                                       |                 |
|      |          |                              | See First Ignition section.   |   |                 |

| Menu | Sub-Menu | Parameter                     | Description  | Value   | Default Setting       |
|------|----------|-------------------------------|--|---|-----------------------|
|      |          |                               | Note   |   |                       |
| 2.   | 7.       | 4                             | Floor drying cycle   | 0 = OFF<br>1 = Functional Heat.<br>2 = Curing Heat.<br>3 = Functional Heat. + Curing Heat.<br>4 = Curing Heat. + Functional Heat.<br>5 = Manual           | 0                     |
| 2.   | 7.       | 5                             | Floor drying Flow Set. Temp.   | 77 - 140°F  | 131                   |
| 2.   | 8        | <b>RESET FACTORY SETTINGS</b> |  |   |                       |
| 2.   | 8.       | 0                             | Reset PCB to Factory Default Settings  | Do you really want to perform the RESET? If you press OK button, the reset command will be executed otherwise, by way of ESC, the previous page is shown. |                       |
|      |          |                               | To Reset all parameter settings, press the OK button.  |   |                       |
|      |          |                               | <b>WARNING:</b> Always check PCB settings if restoring factory default settings on a replacement controller. Replacement controllers have generic settings that may not be specific to the boiler model. |   |                       |
| 2.   | 9        | <b>OTHER PARAMETERS 1</b>     |  |   |                       |
| 2.   | 9.       | 3                             | Flue gas sensor type   | 1 = NTC   | 1                     |
| 2.   | 10       | <b>OTHER PARAMETERS 2</b>     |  |   |                       |
| 2.   | 10.      | 0                             | CH On Differential Temperature   | 0 - 36°F  | 11                    |
|      |          |                               | Determines how much the boiler outlet temperature can drop below target before turning the boiler back on.   |   |                       |
| 2.   | 10.      | 1                             | DHW Modulation Setpoint  | 68 - 179°F  | 179                   |
|      |          |                               | Boiler target temperature during a DHW demand. Not applicable for Combi models.  |   |                       |
| 2.   | 10.      | 2                             | Tank on Differential   | 0 - 36°F  | 0                     |
|      |          |                               | Determines how much the DHW storage tank temperature can drop below target before initiating a DHW demand. Only applicable when 2.2.8 = 1.   |   |                       |
| 2.   | 10.      | 3                             | Emergency Setpoint   | 68 - 179°F  | 113                   |
|      |          |                               | Sets Follower boiler operating temperature when communication with the Master is lost, or when the System Sensor is disconnected. See Cascade Instruction Manual.  |   |                       |
| 2.   | 10.      | 4                             | DHW/CH Shifting priority time  | 0 - 1440 minutes  | 45                    |
|      |          |                               | Determines how long a CH or DHW demand can last before the priority is switched. First priority is with DHW. A value of 0 keeps the priority with DHW indefinitely.                                      |   |                       |
| 2.   | 10.      | 5                             | CH switch-off offset   | 4 - 36°F  | 11                    |
|      |          |                               | Determines how much the boiler outlet temperature can go over target before turning the burner off.  |   |                       |
| 2.   | 10.      | 6                             | CH/DHW anti-water-hammer func.   | 0 = OFF, 1 = ON   | Combi: 0<br>System: 1 |

| Menu | Sub-Menu                 | Parameter                    | Description  | Value   | Default Setting |
|------|--------------------------|------------------------------|--|---|-----------------|
|      |                          |                              | Note   |   |                 |
| 2.   | 10.                      | 7                            | Antifreeze Disable Function                                      | 0 = Disabled<br>1 = Enabled   | 0               |
|      |                          |                              | To disable antifreeze function, set 2.10.7 = 1                   |   |                 |
| 2.   | 10.                      | 8                            | CH forced diverter position                                      | 0 = OFF, 1 = ON   |                 |
| 2.   | 13                       | <b>BOILER SETTINGS 2</b>     |  |   |                 |
| 2.   | 13.                      | 0                            | Flue temperature where power is limited                          | 130 - 199°F   | 190             |
| 2.   | 13.                      | 1                            | Flue temperature limit   | 130 - 199°F   | 199             |
| 4    | <b>ZONE 1 PARAMETERS</b> |                              |  |   |                 |
| 4.   | 0                        | <b>TEMPERATURE SETTINGS</b>  |  |   |                 |
| 4.   | 0.                       | 0                            | Room Setpoint (Comfort)  | 50 - 86 °F  | 66              |
|      |                          |                              | Only applicable when using an NTI room sensor                    |   |                 |
| 4.   | 0.                       | 1                            | Room Setpoint (Reduced)  | 32 - 86 °F  | 61              |
|      |                          |                              | Only applicable when using an NTI room sensor                    |   |                 |
| 4.   | 0.                       | 2                            | Zone 1 Fixed Water Temp  | 68 - 179 °F   | 179             |
| 4.   | 0.                       | 3                            | Room Setpoint (Holiday/Anti-frost)                               | 35 - 75 °F  | 41              |
|      |                          |                              | Only applicable when using an NTI room sensor. Changes all zones |   |                 |
| 4.   | 0.                       | 5                            | CH Target temperature logic                                      | 0 = Max active zone target<br>1 = Z1,Z2,Z3....etc.<br>2 = Min active zone target          | 1               |
| 4.   | 1                        | <b>AUTOMATIC WINTER MODE</b> |  |   |                 |
| 4.   | 1.                       | 0                            | Warm weather shutdown  | 0 = OFF<br>1 = ON   | 0               |
| 4.   | 1.                       | 1                            | WWSD threshold   | 50 - 86 °F  | 68              |
| 4.   | 1.                       | 2                            | WWSD Switchoff delay   | 0 - 300 minutes   | 2               |
| 4.   | 2                        | <b>ZONE 1 SETTINGS</b>       |  |   |                 |
| 4.   | 2.                       | 1                            | AUTO Temperature Control Mode                                    | 0 = Fixed Outlet<br>1 =Basic On/Off<br>2 =Room Temp<br>3 =Outdoor Temp<br>4 =Room&Outdoor | 3               |

## Part 9 - Controls

| Menu | Sub-Menu | Parameter          | Description  | Value  | Default Setting |
|------|----------|--------------------|--|--|-----------------|
|      |          |                    | <b>Note</b>  |  |                 |
| 4.   | 2.       | 2                  | Heating Curve Slope<br>The greater the slope, the quicker the target temperature rises as the outdoor temperature decreases. Applicable when 4.2.1 = 3 or 4.<br>See J. Slope of Outdoor Reset Curve.   | 0.2 - 3.5  | 1.3             |
|      |          |                    |  |  |                 |
| 4.   | 2.       | 3                  | Heating Curve Offset<br>When the Reset Curve results in a boiler target temperature that is too high or too low (i.e., heats the building too quickly or slowly), Parallel Shift can be used to offset the curve up or down to increase or decrease the boiler target temperature.<br><b>NOTE:</b> Adjusting Parallel Shift is only possible when Auto Boost is OFF (4.7.5 = 0). | -25 - +25  | 0               |
| 4.   | 2.       | 4                  | Room Sensor Influence<br>Adjusts the influence of room temperature on target boiler temperature - a higher setting causes a greater increase to the boiler target temperature as the indoor temperature drops below room setpoint.<br><b>Only applicable when using an optional NTI Room Sensor and when 4.2.1 = 2 or 4.</b>   | 0 - 20   | 4               |
| 4.   | 2.       | 5                  | Max Temperature<br>4.2.5 sets the allowable boiler operating temperature range for Zone 1 heating, limiting Automatic Temperature Control and manual adjustments from the User Menu.   | 68 - 179 °F  | 179             |
| 4.   | 2.       | 6                  | Min Temperature<br>4.2.6 sets the allowable boiler operating temperature range for Zone 1 heating, limiting Automatic Temperature Control and manual adjustments from the User Menu.   | 68 - 1179 °F   | 95              |
| 4    | 2.       | 8                  | Quick night setback  | 0 = OFF<br>1 = ON  | 0               |
| 4    | 2.       | 9                  | Heat request mode  | 0 = Standard<br>1 = RT time Programs Exclusion<br>2 = Heat demands forcing | 1               |
| 4.   | 3        | <b>DIAGNOSTICS</b> |  |  |                 |
| 4.   | 3.       | 0                  | Room Temperature   | Read only  |                 |
|      |          |                    | Only applicable when using an NTI room sensor  |  |                 |

| Menu | Sub-Menu                 | Parameter                         | Description   | Value   | Default Setting |
|------|--------------------------|-----------------------------------|---|---|-----------------|
|      |                          |                                   | <b>Note</b>   |   |                 |
| 4.   | 3.                       | 1                                 | Room Temperature Setpoint   | Read only   |                 |
|      |                          |                                   | Only applicable when using an NTI room sensor   |   |                 |
| 4.   | 3.                       | 4                                 | Zone 1 Heat Call  | 0 = OFF<br>1 = ON (Read only)   |                 |
| 4.   | 3.                       | 8                                 | Zone flow temperature setpoint  | Read only   |                 |
| 4.   | 7                        | <b>ZONE REGULATION PARAMETERS</b> |   |   |                 |
| 4.   | 7.                       | 5                                 | Auto Slope Boost  | 0 = OFF<br>1 = ON   | 0               |
|      |                          |                                   | See L. Auto Boost.  |   |                 |
| 5    | <b>ZONE 2 PARAMETERS</b> |                                   |   |   |                 |
| 5.   | 0                        | <b>TEMPERATURE SETTINGS</b>       |   |   |                 |
| 5.   | 0.                       | 0                                 | Room Setpoint (Comfort)   | 50 - 86 °F  | 66              |
|      |                          |                                   | Only applicable when using an NTI room sensor   |   |                 |
| 5.   | 0.                       | 1                                 | Room Setpoint (Reduced)   | 32 - 86 °F  | 61              |
|      |                          |                                   | Only applicable when using an NTI room sensor   |   |                 |
| 5.   | 0.                       | 2                                 | Zone 2 Fixed Water Temp   | 68 - 179 °F   | 179             |
| 5.   | 0.                       | 3                                 | Room Setpoint (Holiday/ Anti-frost)   | 36 - 75 °F  | 41              |
|      |                          |                                   | Only applicable when using an NTI room sensor<br>Changes all zones  |   |                 |
| 5.   | 0.                       | 5                                 | CH Target temperature logic   | 0 = Max active zone target<br>1 = Z1,Z2,Z3....etc.<br>2 = Min active zone target          | 1               |
| 5.   | 1                        | <b>AUTOMATIC WINTER MODE</b>      |   |   |                 |
| 5.   | 1.                       | 0                                 | Warm weather shutdown   | 0 = OFF<br>1 = ON   | 0               |
| 5.   | 1.                       | 1                                 | WWSD threshold  | 50 - 86 °F  | 68              |
| 5.   | 1.                       | 2                                 | WWSD Switchoff delay  | 0 - 300 minutes   | 2               |
| 5.   | 2                        | <b>ZONE 2 SETTINGS</b>            |   |   |                 |
| 5.   | 2.                       | 1                                 | Auto Temperature control mode   | 0 = Fixed Outlet<br>1 =Basic On/Off<br>2 =Room Temp<br>3 =Outdoor Temp<br>4 =Room&Outdoor | 3               |
| 5.   | 2.                       | 2                                 | Heating Curve Slope   | 0.2 - 3.5   | 1.3             |
|      |                          |                                   | See graph and description of Parameter 422.   |   |                 |
| 5.   | 2.                       | 3                                 | Heating Curve Offset  | -25 - +25   | 0               |
|      |                          |                                   | See description of Parameter 4.2.3  |   |                 |
| 5.   | 2.                       | 4                                 | Room Sensor Influence   | 0 - 20  | 4               |
|      |                          |                                   | Adjusts the influence of room temperature on target boiler temperature - a higher setting causes a greater increase to the boiler target temperature as the indoor temperature drops below room setpoint.<br><b>Only applicable when using an optional NTI Room Sensor and when 5.2.1 = 2 or 4.</b> |   |                 |



| Menu | Sub-Menu | Parameter                           | Description   | Value  | Default Setting |
|------|----------|-------------------------------------|---|--|-----------------|
|      |          |                                     | Note  |  |                 |
| 5.   | 2.       | 5                                   | Max Temperature   | 68 - 179 °F  | 179             |
|      |          |                                     | 5.2.5 sets the allowable boiler operating temperature range for Zone 2 heating, limiting Automatic Temperature Control and manual adjustments from the User Menu. |  |                 |
| 5.   | 2.       | 6                                   | Min Temperature   | 68 - 179 °F  | 95              |
|      |          |                                     | 5.2.6 sets the allowable boiler operating temperature range for Zone 2 heating, limiting Automatic Temperature Control and manual adjustments from the User Menu. |  |                 |
| 5.   | 2.       | 8                                   | Quick night setback   | 0 = OFF<br>1 = ON  | 0               |
| 5.   | 2.       | 9                                   | Heat request mode   | 0 = Standard<br>1 = RT time Programs<br>Exclusion<br>2 = Heat demands forcing    | 1               |
| 5.   | 3.       | <b>DIAGNOSTICS</b>                  |   |  |                 |
| 5.   | 3.       | 0                                   | Room Temperature  | Read only  |                 |
|      |          |                                     | Only applicable when using an NTI room sensor   |  |                 |
| 5.   | 3.       | 1                                   | Room Temperature setpoint   | Read only  |                 |
|      |          |                                     | Only applicable when using an NTI room sensor   |  |                 |
| 5.   | 3.       | 4                                   | Zone 2 Heat Call  | 0 = OFF<br>1 = ON (Read only)  |                 |
| 5.   | 3.       | 8                                   | Zone flow temperature setpoint  | Read only  |                 |
| 5.   | 7.       | <b>ZONE 2 REGULATION PARAMETERS</b> |   |  |                 |
| 5.   | 7.       | 5                                   | Auto Slope Boost  | 0 = OFF, 1 = ON  | 0               |
|      |          |                                     | See description of Parameter 475.   |  |                 |
| 6.   | 0.       | <b>TEMPERATURE SETTINGS</b>         |   |  |                 |
| 6.   | 0.       | 0                                   | Room Setpoint (Comfort)   | 50 - 86 °F   | 66              |
|      |          |                                     | Only applicable when using an NTI room sensor   |  |                 |
| 6.   | 0.       | 1                                   | Room Setpoint (Reduced)   | 32 - 86 °F   | 61              |
|      |          |                                     | Only applicable when using an NTI room sensor   |  |                 |
| 6.   | 0.       | 2                                   | Zone 3 Fixed Water Temp   | 68 - 179 °F  | 179             |
| 6.   | 0.       | 3                                   | Room Setpoint (Holiday/Anti-frost)  | 36 - 75 °F   | 41              |
|      |          |                                     | Only applicable when using an NTI room sensor - Changes all zones   |  |                 |
| 6.   | 0.       | 5                                   | CH Target temperature logic   | 0 = Max active zone target<br>1 = Z1,Z2,Z3....etc.<br>2 = Min active zone target | 1               |
| 6.   | 1.       | <b>AUTOMATIC WINTER MODE</b>        |   |  |                 |
| 6.   | 1.       | 0                                   | Warm weather shutdown   | 0 = OFF<br>1 = ON  | 0               |
| 6.   | 1.       | 1                                   | WWSD threshold  | 50 - 86 °F   | 68              |
| 6.   | 1.       | 2                                   | WWSD Switchoff delay  | 0 - 300 minutes  | 2               |
| 6.   | 2.       | <b>ZONE 3 SETTINGS</b>              |   |  |                 |

| Menu   | Sub-Menu | Parameter                             | Description   | Value   | Default Setting |
|--|----------|---------------------------------------|---|---|-----------------|
|  |          |                                       | Note  |   |                 |
| 6.   | 2.       | 1                                     | AUTO Temperature control MODE   | 0 = Fixed Outlet<br>1 =Basic On/Off<br>2 =Room Temp<br>3 =Outdoor Temp<br>4 =Room&Outdoor | 3               |
| 6.   | 2.       | 2                                     | Heating Curve Slope   | 0.2 - 3.5   | 1.3             |
|  |          |                                       | See graph and description of Parameter 422.   |   |                 |
| 6.   | 2.       | 3                                     | Heating Curve Offset  | -25 - +25   | 0               |
|  |          |                                       | See description of Parameter 423.   |   |                 |
| 6.   | 2.       | 4                                     | Room Sensor Influence   | 0 - 20  | 4               |
|  |          |                                       | Adjusts the influence of room temperature on target boiler temperature - a higher setting causes a greater increase to the boiler target temperature as the indoor temperature drops below room setpoint.<br><b>Only applicable when using an optional NTI Room Sensor and when 6.2.1 = 2 or 4.</b> |   |                 |
| 6.   | 2.       | 5                                     | Max Temperature   | 68 95 - 179 °F  | 179             |
|  |          |                                       | 6.2.5 sets the allowable boiler operating temperature range for Zone 3 heating, limiting Automatic Temperature Control and manual adjustments from the User Menu.   |   |                 |
| 6.   | 2.       | 6                                     | Min Temperature   | 68 - 179 °F   | 95              |
|  |          |                                       | 6.2.6 sets the allowable boiler operating temperature range for Zone 3 heating, limiting Automatic Temperature Control and manual adjustments from the User Menu.   |   |                 |
| 6.   | 2.       | 8                                     | Quick night setback   | 0 = OFF<br>1 = ON   | 0               |
| 6.   | 2.       | 9                                     | Heat request mode   | 0 = Standard<br>1 = RT time Programs<br>Exclusion<br>2 = Heat demands forcing             | 1               |
| 6.   | 3.       | <b>DIAGNOSTICS</b>                    |   |   |                 |
| 6.   | 3.       | 0                                     | Room Temperature  | Read only   |                 |
|  |          |                                       | Only applicable when using an NTI room sensor   |   |                 |
| 6.   | 3.       | 1                                     | Room Temperature setpoint   | 50 - 86 °F Read only  |                 |
|  |          |                                       | Only applicable when using an NTI room sensor   |   |                 |
| 6.   | 3.       | 4                                     | Zone 3 Heat Call  | 0 = OFF<br>1 = ON (Read only)   |                 |
| 5.   | 3.       | 8                                     | Zone flow temperature setpoint  | Read only   |                 |
| 6.   | 7.       | <b>ZONE 3 REGULATION PARAMETERS</b>   |   |   |                 |
| 6.   | 7.       | 5                                     | Auto Slope Boost  | 0 = OFF, 1 = ON   | 0               |
|  |          |                                       | See description of Parameter 475.   |   |                 |
| 7.   | 0.       | <b>EXTERNAL 3-ZONE CONTROL MODULE</b> |   |   |                 |
| <b>ONLY APPLICABLE WHEN USING THE NTI N-LINK 3-ZONE CONTROL MODULE (3260184)</b> |          |                                       |   |   |                 |
| 7.   | 0.       | 0                                     | Heating setpoint offset logics  |   |                 |
| 7.   | 0.       | 1                                     | Cooling setpoint offset logics  |   |                 |
| 7.   | 0.       | 2                                     | Zone pumps in DHW cycle   |   |                 |
| 7.   | 1.       | <b>MANUAL MODE</b>                    |   |   |                 |
| 7.   | 1.       | 0                                     | ZM Manual mode activation   |   |                 |
| 7.   | 1.       | 1                                     | Zone 1 Output   |   |                 |

## Part 9 - Controls

| Menu | Sub-Menu | Parameter                  | Description                     | Value  | Default Setting |
|------|----------|----------------------------|---------------------------------|--|-----------------|
|      |          |                            | Note                            |  |                 |
| 7.   | 1.       | 2                          | Zone 2 Output                   |  |                 |
| 7.   | 1.       | 3                          | Zone 3 Output                   |  |                 |
| 7.   | 1.       | 4                          | Z2 Mix Valve Control            |  |                 |
| 7.   | 1.       | 5                          | Z3 Mix Valve Control            |  |                 |
| 7.   | 1.       | 6                          | Z1 Mix Valve Control            |  |                 |
| 7.   | 2.       | <b>GENERAL ZONE MODULE</b> |                                 |  |                 |
| 7.   | 2.       | 0                          | Hydraulic scheme definition     | MCD<br>MGM II<br>MGM III<br>MGZ I<br>MGZ II<br>MGZ III<br>mix<br>2 direct<br>direct + mix<br>2 mix<br>3 direct zones<br>2 direct + mix<br>direct + 2 mix<br>3 mix  |                 |
| 7.   | 2.       | 1                          | FlowT Offset                    |  |                 |
| 7.   | 2.       | 2                          | Auxiliary output setting        | Heat/Cool request (local zones)<br>External pump (local zones)<br>Alarm<br>Only heat request (local zones)<br>Only cool request (local zones)<br>Heat/Cool request (any zones)<br>External pump (any zones)<br>Only heat request (any zones)<br>Only cool request (any zones)<br>Cooling mode active |                 |
| 7.   | 2.       | 3                          | External temperature correction |  |                 |
| 7.   | 2.       | 4                          | Valves overrun time             |  |                 |
| 7.   | 2.       | 5                          | Valve Control T Delta           |  |                 |
| 7.   | 2.       | 6                          | Valves Kp Heating               |  |                 |
| 7.   | 2.       | 7                          | Mixing zones switch mode        |  |                 |
| 7.   | 2.       | 8                          | Zone Outputs Overrun            |  |                 |
| 7.   | 2.       | 9                          | Zone Outputs Overrun w/DHW      |  |                 |
| 7.   | 3.       | <b>COOLING</b>             |                                 |  |                 |
| 7.   | 3.       | 0                          | FlowT Offset Cooling            |  |                 |
| 7.   | 3.       | 1                          | Free parameter                  |  |                 |
| 7.   | 3.       | 2                          | Free parameter                  |  |                 |
| 7.   | 3.       | 3                          | Valves Kp Cooling               |  |                 |
| 7.   | 8.       | <b>ERROR HISTORY</b>       |                                 |  |                 |
| 7.   | 8.       | 0                          | Last 10 errors                  |  |                 |
| 7.   | 8.       | 1                          | Reset error list                | Reset ?<br>OK=Yes,esc=No   |                 |

| Menu | Sub-Menu                  | Parameter                                     | Description                           | Value   | Default Setting |
|------|---------------------------|---|---------------------------------------|---|-----------------|
|      |                           |   | Note                                  |   |                 |
| 7.   | 8.                        | 2   | Last 10 errors 2                      |   |                 |
| 7.   | 8.                        | 3   | Reset error list 2                    | Reset ?<br>OK=Yes,esc=No  |                 |
| 7.   | 9.                        | <b>RESET MENU</b>                             |                                       |   |                 |
| 7.   | 9.                        | 0   | Reset PCB to Factory Default Settings | Reset ?<br>OK=Yes,esc=No  |                 |
| 7.   | 9.                        | 1   | Reset factory settings 2              | Reset ?<br>OK=Yes,esc=No  |                 |
| 8.   | <b>SERVICE PARAMETERS</b> |   |                                       |   |                 |
| 8.   | 0.                        | <b>BOILER STATISTICS-1 - Read Only</b>        |                                       |   |                 |
| 8.   | 0.                        | 0   | DHW pump cycles (n/10)                |   |                 |
| 8.   | 0.                        | 1   | Boiler pump on time (h/10)            |   |                 |
| 8.   | 0.                        | 2   | Boiler pump cycles (n/10)             |   |                 |
| 8.   | 0.                        | 3   | Boiler power on time (h/10)           |   |                 |
| 8.   | 0.                        | 4   | Fan on time (h/10)                    |   |                 |
| 8.   | 0.                        | 5   | Fan cycles (n/10)                     |   |                 |
| 8.   | 0.                        | 6   | CH flame detection No. (n /10)        |   |                 |
| 8.   | 0.                        | 7   | DHW flame detection No. (n /10)       |   |                 |
| 8.   | 1.                        | <b>BOILER STATISTICS-2 - Read Only</b>        |                                       |   |                 |
| 8.   | 1.                        | 0   | CH burner on time (h/10)              |   |                 |
| 8.   | 1.                        | 1   | DHW burner on time (h/10)             |   |                 |
| 8.   | 1.                        | 2   | Flame faults (n/10)                   |   |                 |
| 8.   | 1.                        | 3   | Ignition cycles (n/10)                |   |                 |
| 8.   | 1.                        | 4   | Average CH cycle time                 |   |                 |
| 8.   | 1.                        | 6   | CH/DHW priority switches              | Number of times the Priority Timer (2.10.4) has elapsed, switching priority from DHW to CH (or vice versa). |                 |
| 8.   | 2.                        | <b>BOILER CURRENT STATUS - Read Only</b>      |                                       |   |                 |
| 8.   | 2.                        | 1   | Fan Status                            | 0 = OFF<br>1 = ON   |                 |
| 8.   | 2.                        | 2   | Fan speed RPM                         |   |                 |
| 8.   | 2.                        | 3   | Pump speed                            | 0 = Low Speed<br>1 = High Speed   |                 |
| 8.   | 2.                        | 4   | 3 Way Valve Position                  | 0 = Hot water<br>1 = Central Heating  |                 |
| 8.   | 2.                        | 5   | DHW Flow Rate                         | Applicable for Combi models   |                 |
| 8.   | 2.                        | 6   | APS Status                            | 0 = Open<br>1 = Closed  |                 |
| 8.   | 2.                        | 8   | Gas Power (kW)                        |   |                 |
| 8.   | 2.                        | 9   | Heating circuit pressure              |   |                 |
| 8.   | 3.                        | <b>BOILER CURRENT TEMPERATURES- Read Only</b> |                                       |   |                 |
| 8.   | 3.                        | 0   | CH Supply Setpoint (in °F)            |   |                 |
| 8.   | 3.                        | 1   | CH Supply Temperature (in °F)         |   |                 |
| 8.   | 3.                        | 2   | CH Return Temperature (in °F)         |   |                 |
| 8.   | 3.                        | 3   | DHW Outlet Temperature (in °F)        | Applicable for Combi models.  |                 |
| 8.   | 3.                        | 4   | Exhaust Flue Temperature (in °F)      |   |                 |

| Menu | Sub-Menu | Parameter  | Description   | Value   | Default Setting |
|------|----------|--|---|---|-----------------|
|      |          |  | Note  |   |                 |
| 8.   | 3.       | 5  | Outdoor Temperature (in °F)   |   |                 |
|      |          |  | Only with outdoor sensor connected  |   |                 |
| 8.   | 4        | <b>STORAGE CURRENT STATUS (ONLY ACTIVE WITH CONNECTED NTC TANK SENSOR) - Read Only</b> |   |   |                 |
| 8.   | 4.       | 0  | STORAGE TANK TEMPERATURE (in °F)  |   |                 |
|      |          |  | Only with NTC tank sensor connected   |   |                 |
| 8.   | 5        | <b>SERVICE</b>   |   |   |                 |
| 8.   | 5.       | 0  | Months to Next Maintenance  | 0 - 60 (months)   | 12              |
|      |          |  | If enabled (8.5.1 = 1), a notification is made on the display (and via the Tele-diagnostic Service, if applicable), warning that it is time for maintenance   |   |                 |
| 8.   | 5.       | 1  | Enable Maintenance Warning  | 0 = OFF,<br>1 = ON  | 0               |
| 8.   | 5.       | 2  | Maintenance Warning Reset   | Do you really want to perform the RESET? If you press OK button, the reset command will be executed otherwise, by way of ESC, the previous page is shown. |                 |
|      |          |  | Resets Maintenance Advice and clears the Warning.   |   |                 |
| 8.   | 5.       | 4  | Software Version- Display Interface   |   |                 |
| 8.   | 5.       | 5  | Software Version - Main Controller  |   |                 |
| 8.   | 5.       | 7  | Floor Drying total rem days   |   |                 |
| 8.   | 6        | <b>ERROR HISTORY</b>   |   |   |                 |
| 8.   | 6.       | 0  | Last 10 Errors  | from Fault 0 to Fault 9   |                 |
|      |          |  | This parameter displays the last 10 boiler errors, indicating the error code, day, month and year of occurrence. When the parameter is accessed, the errors are listed from FAULT 0 to FAULT 9. Description, code, date |   |                 |
| 8.   | 6.       | 1  | Error list reset - Clears Error History   | Do you really want to perform the RESET? If you press OK button, the reset command will be executed otherwise, by way of ESC, the previous page is shown. |                 |
| 8.   | 7        | <b>FREE PARAMETERS - Read Only</b>   |   |   |                 |
| 8.   | 7.       | 0  | NOT USED  |   |                 |
| 8.   | 7.       | 1  | NOT USED  |   |                 |
| 8.   | 7.       | 2  | NOT USED  |   |                 |
| 8.   | 7.       | 3  | NOT USED  |   |                 |
| 8.   | 7.       | 4  | Boiler flow switch  | 0= Open<br>1=   |                 |
| 8.   | 7.       | 6  | Safety flame sensor   | 0= OFF<br>1= ON   |                 |

| Menu | Sub-Menu                                  | Parameter                           | Description   | Value  | Default Setting |
|------|---|-------------------------------------|---|--|-----------------|
|      |   |                                     | Note  |  |                 |
| 8.   | 7.  | 8                                   | Boiler Power Level(%)   | 0 - 100<br>(0 = minimum power,<br>100 = maximum power)   |                 |
| 8.   | 7.  | 9                                   | Ionization current  |  |                 |
|      |   |                                     | The flame signal must exceed 18 to initially detect the presence of flame. Flame loss is detected if the signal drops below 15. |  |                 |
| 19   | <b>WI - FI (only for ALTEAS ONE+ NET)</b> |                                     |   |  |                 |
| 19.  | 0   | <b>WI-FI CONFIGURATION</b>          |   |  |                 |
| 19.  | 0.  | 0                                   | Wi-Fi activation  | 0 = OFF<br>1 = ON  |                 |
| 19.  | 0.  | 1                                   | Network configuration   | 0 = OFF<br>1 = ON  |                 |
| 19.  | 0.  | 2                                   | <Not Available>   |  |                 |
| 19.  | 0.  | 3                                   | Internet time   | 0 = OFF<br>1 = ON  |                 |
| 19.  | 0.  | 4                                   | Internet heater   | 0 = OFF<br>1 = ON  |                 |
| 19.  | 0.  | 5                                   | On line outdoor temperature corr.   |  |                 |
| 19.  | 1   | <b>CONNECTIVITY INFO</b>            |   |  |                 |
| 19.  | 1.  | 0                                   | Connectivity status   | OFF<br>Initialization<br>Idle<br>Access Point initializing<br>Access Point mode on<br>Station Mode - Connecting<br>Station Mode - Connected<br>Station Mode - Provisioning<br>Station Mode - Server<br>Connected<br>Wifi error |                 |
| 19.  | 1.  | 1                                   | Signal level  |  |                 |
| 19.  | 1.  | 2                                   | Active Status   | Not provisioned<br>Provisioned - Not active<br>Active  |                 |
| 19.  | 1.  | 3                                   | Serial Number   |  |                 |
| 19.  | 1.  | 4                                   | SW Upgrade Status   | Initialization<br>Waiting for Update<br>Updating Micro 1<br>Updating Micro 2   |                 |
| 19.  | 1.  | 5                                   | On line outdoor temperature   |  |                 |
| 19.  | 1.  | 6                                   | On line weather data  |  |                 |
| 19.  | 2   | <b>RESET MENU</b>                   |   |  |                 |
| 19.  | 2.  | 0                                   | Factory Reset (soft reset)  | Do you really want to perform the reset? if you press OK button, the reset command will be executed otherwise, by way of ESC, the previous page is shown.  |                 |
| 21   | <b>2-ZONE CONTROL MODULE</b>              |                                     |   |  |                 |
| 21.  | 1   | <b>2-ZONE CONTROL MODULE - TEST</b> |   |  |                 |

## Part 9 - Controls

| Menu | Sub-Menu   | Parameter                                    | Description  | Value  | Default Setting |  |
|------|------------|--|--|--|-----------------|--|
|      |            |  | Note   |  |                 |  |
| 21.  | 1.         | 0  | Manual mode activation                             | 0 = OFF<br>1 = ON  |                 |  |
| 21.  | 1.         | 1  | OUT1 Control                                       | 0 = OFF<br>1 = ON  |                 |  |
| 21.  | 1.         | 2  | OUT2Control  | 0 = OFF<br>1 = ON  |                 |  |
| 21.  | 4          | <b>2-ZONE CONTROL MODULE DIAGNOSTICS</b>     |  |  |                 |  |
| 21.  | 4.         | 0  | Output 1 Status                                    | 0 = OFF<br>1 = ON  |                 |  |
| 21.  | 4.         | 1  | Output 2 Status                                    | 0 = OFF<br>1 = ON  |                 |  |
| 21.  | 9          | <b>2-ZONE CONTROL MODULE - CONFIGURATION</b> |  |  |                 |  |
| 21.  | 9.         | 0  | Zone outputs overrun                               | 60 - 600 seconds   |                 |  |
| 21.  | 9.         | 1  | Zone outputs overrun DHW                           |  |                 |  |
| 42   | <b>BMS</b> |  |  |  |                 |  |
| 42.  | 0          | <b>GENERAL</b>                               |  |  |                 |  |
| 42.  | 0.         | 0  | BMS Control Mode                                   | Disabled<br>Voltage Power<br>Voltage Temp<br>Current Power<br>Current Temp<br>External Controller Power<br>External Controller Temp  |                 |  |
| 42.  | 0.         | 1  | BMS Max Temp                                       |  |                 |  |
| 42.  | 0.         | 2  | BMS Min Temp                                       |  |                 |  |
| 42.  | 0.         | 3  | Gateway modbus address                             |  |                 |  |
| 42.  | 1          | <b>ANALOG LEVEL SETTINGS</b>                 |  |  |                 |  |
| 42.  | 1.         | 0  | BMS Analog Control Voltage to Start Heat Demand    |  |                 |  |
| 42.  | 1.         | 1  | BMS Analog Control Voltage to Stop Heat Demand     |  |                 |  |
| 42.  | 1.         | 2  | BMS Analog Control Voltage for Maximum Heat Demand |  |                 |  |
| 42.  | 1.         | 3  | BMS Analog Control Voltage for Minimum Heat Demand |  |                 |  |
| 42.  | 1.         | 4  | BMS Analog Control Current to Start Heat Demand    |  |                 |  |
| 42.  | 1.         | 5  | BMS Analog Control Current to Stop Heat Demand     |  |                 |  |
| 42.  | 1.         | 6  | BMS Analog Control Current for Maximum Heat Demand |  |                 |  |
| 42.  | 1.         | 7  | BMS Analog Control Current for Minimum Heat Demand |  |                 |  |
| 42.  | 2          | <b>DIAGNOSTICS</b>                           |  |  |                 |  |
| 42.  | 2.         | 0  | Status   | Absent<br>Disabled<br>OFF<br>Standby<br>Heat Request<br>Config Error<br>Voltage input configuration error<br>Current input configuration error<br>External input configuration error |                 |  |
| 42.  | 2.         | 1  | BMS Level  |  |                 |  |
| 42.  | 2.         | 2  | BMS SetPoint                                       |  |                 |  |
| 42.  | 2.         | 3  | BMS Input Voltage                                  |  |                 |  |
| 42.  | 2.         | 4  | BMS Input Current                                  |  |                 |  |

Table 40 - Complete Parameters List

## 7. PCB Replacement

To navigate the PCB Replacement Menu proceed as follows:

1. From the Tech Menu, turn the dial to highlight "PCB Replacement" and press ENTER.
2. Turn the dial to select the parameters and press ENTER.
4. Modify the setting by turning the dial, press ENTER to save the value.  
**Note:** pressing ESC exits the screen without saving the new value.
5. Press ESC to return to the previous screen.

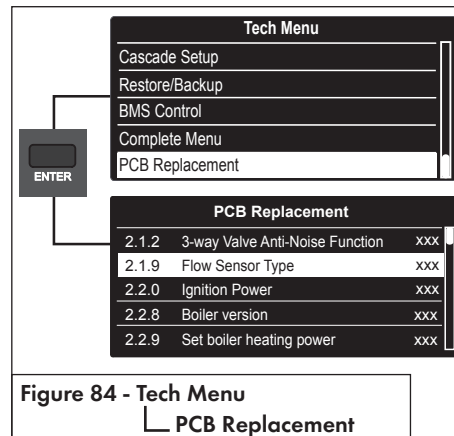


Figure 84 - Tech Menu  
PCB Replacement

| Parameter | Description                     |
|-----------|---------------------------------|
| 2.1.2     | 3-way Valve Anti-Noise Function |
| 2.1.9     | Flow Sensor Type                |
| 2.2.0     | Ignition Power                  |
| 2.2.8     | Boiler version                  |
| 2.2.9     | Set boiler heating power        |
| 2.3.2     | Max DHW percentage              |
| 2.3.3     | Min percentage                  |
| 2.3.4     | Max CH percentage               |
| 2.4.3     | CH Fan Post-Purge               |
| 2.5.4     | DHW Post Purge and Pump Cycle   |

Table 39 - Tech Menu - PCB Replacement Parameters List

## ! WARNING

Modify the parameters as indicated in the instruction sheet of the Main board replacement Kit.

## I. TEST MODE

Navigate the Test Mode menu as follows:

1. From the Main Menu, turn the dial to highlight "Test Mode" and press ENTER.
2. If prompted, insert the access code; turn the dial to adjust the value to 234 and press ENTER.
3. Turn the dial to highlight the option you wish to access then press ENTER.
4. Press ESC to return to the previous screen.

### 1. Burner Test

Navigate as follows:

1. From the Test Mode menu, turn the dial to highlight "Burner Test" and press ENTER.
2. Turn the dial to highlight "Max Power" or "Min Power" and press ENTER to start the test.
3. To switch between Max Power and Min Power, turn the dial to the other setting and press ENTER.
4. Press ESC to stop the test and return to the previous screen.

**NOTE:** When calibrating combustion it is necessary to calibrate Max Power prior to calibrating Min Power - See section 11A.

### 2. Output Test

Navigate as follows:

1. From the Test Mode menu, turn the dial to highlight "Output Test" and press ENTER.
2. Turn the dial to highlight the function you wish to test and press ENTER, then turn the dial to select "ON" and press ENTER. Repeat for each function you want to test.
3. To start the test, turn the dial to highlight "Manual Mode Activation" and press ENTER, then turn the dial to highlight "ON" and press ENTER. To stop the test, turn the dial to highlight "OFF" and press ENTER.

**NOTE:** Manual Mode remains active when the Output Test menu is exited; to disable it, set Manual Mode Activation = "OFF".


**NOTE:** Burner operation is inhibited when Manual Mode Activation = ON.

### 3. Air Purge Function

From the Test Mode menu, turn the dial to highlight "Air Purge Function" and press ENTER. The boiler starts the Air Purge Function which lasts about 7-minutes.

To exit before the function ends, press ESC.

**NOTE:** Burner operation is inhibited while the Air Purge Function is active.

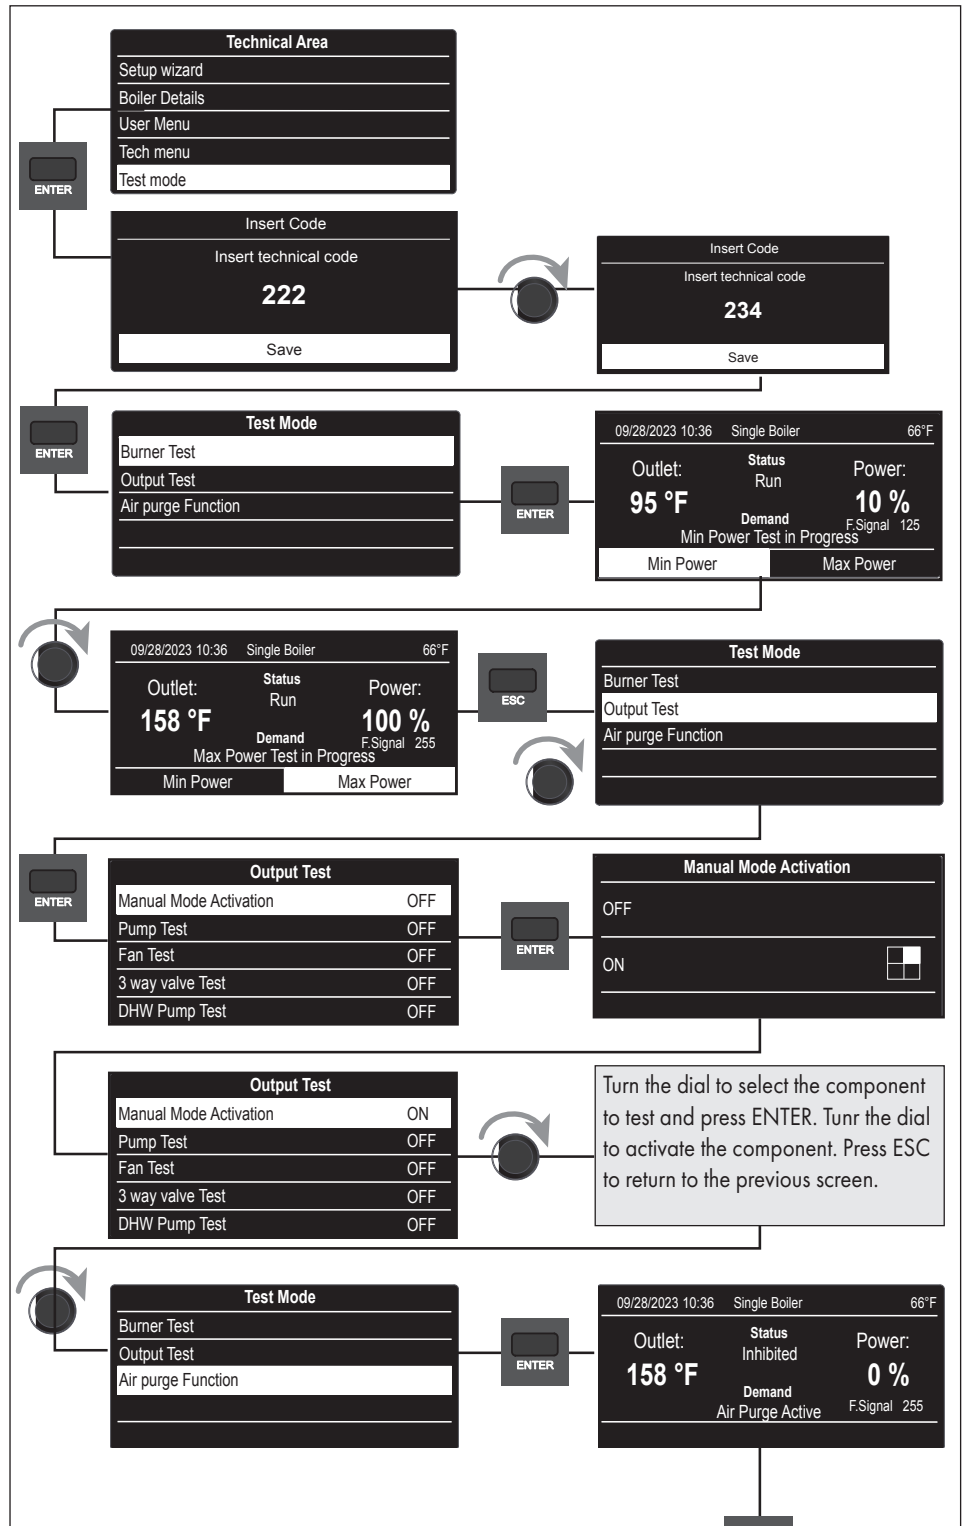

### Air Purge Function.

This seven (7) minute cycle removes excess air from the CH and DHW systems.

- a. During the cycle open the manual air vent within the boiler (if applicable). Close the air vent when clear water free of air is visible (after purging).
- b. As air is purged boiler pressure may drop. The boiler needs to maintain at least 12-15 psi for proper purging.

**NOTE:** The water pressure switch safety is set at 8 psi to protect the boiler. Error 108 will occur if boiler pressure drops too low. After pressure is restored Error 108 will clear and the boiler will return to the purge function for another 7 minutes.

- c. After the cycle has ended ensure the system is completely purged of air and verify that system pressure is at least 12 psi on the pressure gauge. If not, repeat the procedure.
- d. The purge function can be accessed at any time by pressing ESC.

**NOTE:** It is recommended to run through the full initial purge cycle at install. Do not cut the purge cycle short.

The display reverts to showing the previous screen.

Figure 85 - Test Mode Menu

## Part 9 - Controls

### J. Connectivity

Navigate the Connectivity menu as follows:

1. From the Main Menu, turn the dial to highlight "Connectivity" and press ENTER.
2. Turn the dial to highlight the option you wish to access then press ENTER.
3. Press ESC to return to the previous screen.

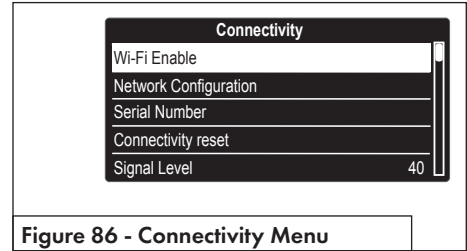



Figure 86 - Connectivity Menu

| Menu Option   Description (Range)   | Default |
|---|---------|
| <b>WIFI ENABLE (19.0.0)</b>   |         |
| On – connection to WiFi is possible<br>Off – disconnects boiler from WiFi   | 0       |
| <b>NETWORK CONFIGURATION (NA)</b>   |         |
| Select Enter to commence the process of connecting the boiler to a local WiFi network using the "NTI net" mobile App  | NA      |
| <b>SERIAL NUMBER (19.1.3)</b>   |         |
| Serial number of the boiler's WiFi gateway. Serial number is required when registering the boiler on the "NTI net" connectivity platform.   | NA      |
| <b>CONNECTIVITY RESET (19.2.0)</b>  |         |
| Select if you need to reconfigure the WiFi connection, i.e., if you need to select a different WiFi network. To re-establish WiFi connection, enter the Network Configuration.  | NA      |
| <b>SIGNAL LEVEL (19.1.1)</b>  |         |
| Displays the WiFi router signal strength.   | NA      |
| <b>INTERNET TIME (19.0.3)</b>   |         |
| Set to "On" to have the time automatically set via the internet connection based on the boiler's entered address.<br>Note: the address is entered when registering the boiler to an "NTI net" End User or Service Center.               | OFF     |
| <b>INTERNET WEATHER (19.0.4)</b>  |         |
| Set to "On" to have the outdoor temperature reading acquired via the internet connection based on the boiler's entered address.<br>Note: the address is entered when registering the boiler to an "NTI net" End User or Service Center. | OFF     |

**Table 41 - Main Menu - Connectivity menu**

## NOTICE

Read the ComfortLink Quick Start Guide to connect the boiler.

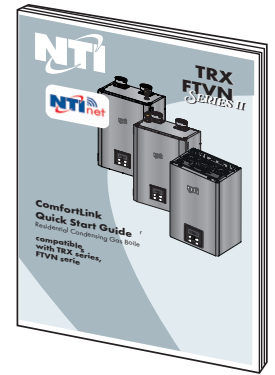

## K. Diagnostic

Navigate the Diagnostics menu as follows:

1. From the Main Menu, turn the dial to highlight "Diagnostics" and press ENTER.
2. Turn the dial to highlight the option you wish to access then press ENTER.
3. Press ESC to return to the previous screen.

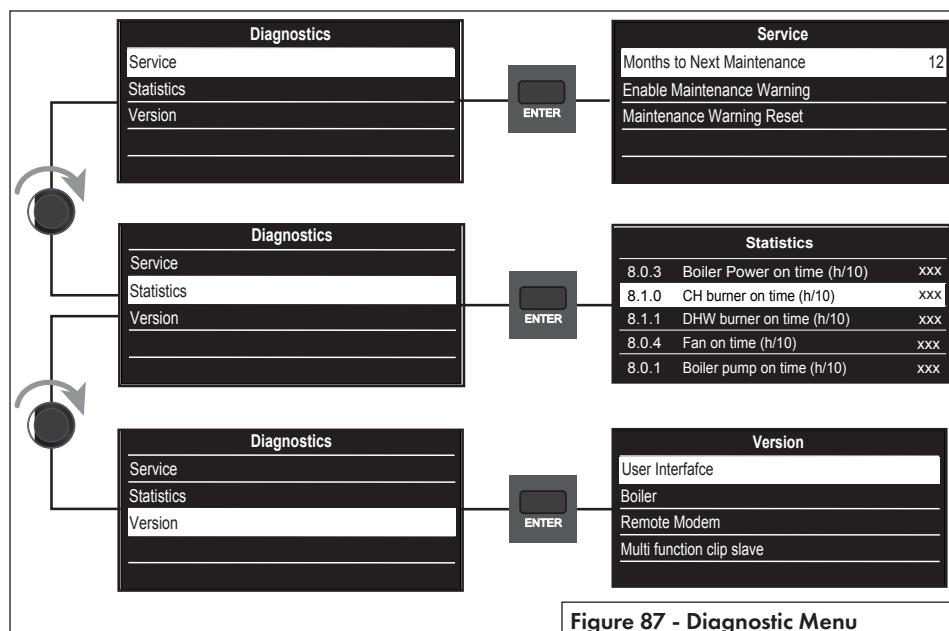


Figure 87 - Diagnostic Menu

| Menu Option   Description (Range)  |                                | Default |
|--|--------------------------------|---------|
| <b>SERVICE</b>   |                                |         |
| <b>Months to Next Maintenance (8.5.0)</b>  |                                |         |
| Sets the number of months until a Maintenance Warning is triggered; number counts down over time. Only applicable when Enable Maintenance Warning is set to On. Range = 0-24 months. |                                | 12      |
| <b>Enable Maintenance Warning (8.5.1)</b>  |                                |         |
| When set to On, a Maintenance Warning will occur at a frequency set by Months to Next Maintenance.   |                                | OFF     |
| <b>Maintenance Warning Reset (8.5.2)</b>   |                                |         |
| Press to reset the Months to Next Maintenance counter, i.e., after completing the scheduled maintenance of the appliance.  |                                | NA      |
| <b>STATISTICS</b>  |                                |         |
| 8.0.3  | Boiler Power on time (h/10)    |         |
| 8.1.0  | CH burner on time (h/10)       |         |
| 8.1.1  | DHW burner on time (h/10)      |         |
| 8.0.4  | Fan on time (h/10)             |         |
| 8.0.1  | Boiler pump on time (h/10)     |         |
| 8.1.4  | Average CH cycle time          |         |
| 8.1.6  | CH/DHW priority switches       |         |
| 8.0.2  | Boiler pump cycles (n/10)      |         |
| 8.0.0  | DHW pump cycles (n/10)         |         |
| 8.0.5  | Fan cycles (n/10)              |         |
| 8.1.3  | Ignition cycles (n/10)         |         |
| 8.1.2  | Flame Faults (n/10)            |         |
| 8.0.6  | CH flame detection No. (n/10)  |         |
| 8.0.7  | DHW flame detection No. (n/10) |         |
| <b>VERSION</b>   |                                |         |
| User Interface   |                                | NA      |
| Boiler   |                                | NA      |
| Remote Modem   |                                | NA      |
| Multi function clip slave  |                                | NA      |

Table 42 - Main Menu - Diagnostic Menu

### **WARNING**

Thoroughly clean and flush any system that has used glycol before installing the boiler. Provide the customer with a material safety data sheet (MSDS) on the fluid used.

#### **A. Check / Control Water Chemistry**

### **CAUTION**

Chemical imbalance of the water supply may affect efficiency and cause severe damage to the appliance and associated equipment. It is important that the water chemistry on both the domestic hot water and central heating sides are checked before installing the appliance. Water quality must be professionally analyzed to determine whether it is necessary to treat the water. Various solutions are available to adjust water quality. Adverse water quality will affect the reliability of the system. In addition, operating temperatures above 135°F will accelerate the build-up of lime scale and possibly shorten appliance service life. Failure of an appliance due to lime scale build-up, low pH, or other chemical imbalance IS NOT covered by the warranty.

To ensure extended service life, it is recommended to test water quality prior to installation. Listed below are some guidelines.

### **CAUTION**

Do not use petroleum-based cleaning or sealing compounds in the boiler system. Damage to elastomer seals and gaskets in the system could occur, resulting in substantial property damage.

The water must be potable, free of corrosive chemicals, sand, dirt, and other contaminants. It is up to the installer to ensure the water does not contain corrosive chemicals or elements that can damage the heat exchanger. Potable water is defined as drinkable water supplied from utility or well water in compliance with EPA secondary maximum contaminant levels (40 CFR Part 143.3). If the water contains contaminants higher than outlined by the EPA, water treatment is recommended and additional, more frequent maintenance may be required. See Table 1.

If you suspect that your water is contaminated in any way, discontinue use of the appliance and contact an authorized technician or licensed professional.

#### **Clean system to remove sediment\***

1. You must thoroughly flush the system (without boiler connected) to remove sediment. The high-efficiency heat exchanger can be damaged by buildup or corrosion due to sediment.
2. For zoned systems, flush each zone separately through a purge valve. (If purge valves and isolation valves are not already installed, install them to properly clean the system.)
3. Check the return Y strainer (if installed). Remove and clean sediment and debris if necessary.
4. Flush system until water runs clean and you are sure piping is free of sediment.

**\*NOTE: Boiler failure due to improper water chemistry is not covered by warranty.**

**NOTE: Combi Models:** It is recommended to clean the DHW side of the heat exchanger at least once a year to prevent lime scale buildup. Follow the maintenance procedure to clean the heat exchanger in the Maintenance Section of this manual.

#### **B. Check for Gas Leaks**

### **WARNING**

Before starting the boiler, and during initial operation, smell near the floor and around the boiler for gas odorant or any unusual odor. Remove boiler front door and smell interior of boiler enclosure. Do not proceed with startup if there is any indication of a gas leak. Repair any leaks at once.

**PROPANE BOILERS ONLY** – The propane supplier mixes an odorant with the propane to make its presence detectable. In some instances the odorant can fade, and the gas may no longer have an odor. Before startup (and periodically thereafter), have the propane supplier verify the correct odorant level in the gas.

If you discover any evidence of a gas leak shut down the boiler at once. Find the leak source with a bubble test and repair immediately. Do not start the appliance again until the leak is repaired. Failure to comply could result in substantial property damage, severe personal injury, or death.

#### **C. Freeze Protection (When Used)**

### **WARNING**

NEVER use automotive or standard glycol antifreeze. Do not use ethylene glycol made for hydronic systems. Use only freeze-protection fluids certified by fluid manufacturer as suitable for use with stainless steel boilers, verified in the fluid manufacturer's literature. Thoroughly clean and flush any system that has used glycol before installing the new boiler. Provide the boiler owner with a material safety data sheet (MSDS) on the fluid used.

#### **NOTE: Loops Serving Indirect Water Heaters (IWHs)**

Glycol used in IWH loops should be food grade propylene glycol, FDA rated as "generally recognized as safe" (GRAS). If using a glycol / potable water mix, the water chemistry must meet the requirements in this manual. The glycol content of the liquid must not exceed 50%, unless the manufacturer specifies a different ratio. Glycol should be checked periodically to prevent it from becoming acidic. Please refer to guidelines provided by the glycol manufacturer regarding glycol maintenance.

**NOTE:** Glycol not recognized as GRAS may only be used in closed loop CH applications.

1. Determine the freeze protection fluid quantity using total system water content following the fluid manufacturer's instructions. Remember to include expansion tank water content.
2. Local codes may require back flow preventer or actual disconnect from city water supply.
3. When using freeze protection fluid with automatic fill, install a water meter to monitor water makeup. Freeze protection fluid may leak before the water begins to leak, causing concentration to drop, reducing the freeze protection level.
4. Glycol in hydronic applications should include inhibitors that prevent the glycol from attacking metallic system components. Make certain that the system fluid is checked for the correct glycol concentration and inhibitor level.
5. The glycol solution should be tested at least once a year or as recommended by the glycol manufacturer.



6. Anti-freeze solutions expand more than water. For example: A 50% by volume solution expands 4.8% in volume for a temperature increase from 32 - 80°F, while water expands 3% over the same temperature rise. Allowances must be made in system design for expansion.
7. A 30% mixture of glycol will result in a BTU output loss of 15% with a 5% increase in head against the system circulator.
8. A 50% mixture of glycol will result in a BTU output loss of 30% with a 50% increase in head against the system circulator.

**NOTE:** BTU losses apply to both CH and DHW.

## CAUTION

It is highly recommended to carefully follow the glycol manufacturer's recommended concentrations, expansion requirements, and maintenance recommendations (pH additive breakdown, inhibitor reduction, etc.) You must carefully calculate the additional friction loss in the system as well as the reduction in heat transfer coefficients.

### D. System Water Fill, Purge, and Test

## ! WARNING

Ensure the boiler is full of water before firing the burner. Failure to do so will damage the boiler. Such damage IS NOT covered by warranty, and could result in property damage, severe personal injury, or death.

## CAUTION

Connect the condensate discharge pipe before filling and purging the heating circuit.

It is important to purge the system of air to avoid damage to the boiler.

The boiler and heating system must be thoroughly purged of air during the initial installation or system maintenance. Proceed as follows to purge the boiler and heating system:

1. Open the air purge valve inside the boiler. The valve is already connected to a discharge hose routed to the condensate trap.
2. Gradually open the main water valve until water flows. Do not open fully.
3. Thoroughly purge each zone starting with the lowest point and close them only when clear water free of air is visible.
4. Close the air purge valve when clear water free of air is visible.
5. Continue filling the system until at least 12 psi registers on the pressure gauge.

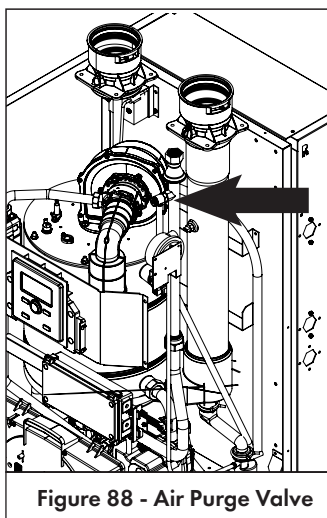


Figure 88 - Air Purge Valve

## ! WARNING

Eliminate all system leaks. Continual fresh make-up water will reduce boiler life. Minerals can build up in the heat exchanger, reducing heat transfer, overheating the heat exchanger and causing heat exchanger failure.

### E. Purge Air from DHW System

1. Make sure the CH and DHW lines are open and full of water. Turn on all electric power to boiler.

## ! WARNING

Ensure the boiler is full of water before firing the burner. Failure to do so will damage the boiler. Such damage IS NOT covered by warranty, and could result in property damage, severe personal injury, or death.

2. Open hot water faucets in the DHW system. Start with the faucets nearest the boiler.
3. Keep faucets open until water runs freely and all air is purged. Then move on to faucets further away from the boiler in the system.
4. When water flows freely from all hot water faucets, DHW purging is complete.

### F. Check Thermostat Circuit(s)

1. Disconnect the two external wires connected to the boiler thermostat terminals TT1/TT2 (low voltage terminal strip).
2. Connect a voltmeter across these two incoming wires with power supplied to the thermostat circuits. Close each thermostat, zone valve and relay in the external circuit one at a time and check the voltmeter reading across the incoming wires.
3. There should NEVER be a voltage reading.
4. If a voltage reading does occur under any condition, check and correct the external wiring. (This is a common problem when using 3-wire zone valves.)
5. Once the external thermostat circuit wiring is checked and corrected if necessary, reconnect the external thermostat circuit wires to the boiler low voltage terminal strip. Allow the boiler to cycle.

### G. Condensate Removal

1. The boiler is a high efficiency condensing appliance. Therefore, the unit has a condensate drain. Condensate fluid is nothing more than water vapor, derived from combustion products, similar to that produced by an automobile when it is initially started. Condensation is slightly acidic (typically with a pH of 3 to 5) and must be piped with the correct materials. Never pipe the condensate using steel, copper, brass or other materials that will be subject to corrosion. Plastic PVC or CPVC pipe are the only approved materials. A condensate neutralizer, if required by local authorities, can be made up of lime crystals, marble or phosphate chips that will neutralize the condensate.
2. The boiler is equipped with a barbed outlet fitting, to which the supplied hose must be installed and routed to a local drain. It is very important that the condensate line is sloped downward away from the boiler to a suitable indoor drain. If the condensate outlet on the boiler is lower than the drain, you must use a condensate removal pump. This pump is equipped with two leads that can be connected to an alarm or another type of warning device to alert the user of a condensate overflow, which, if not corrected, could cause property damage.

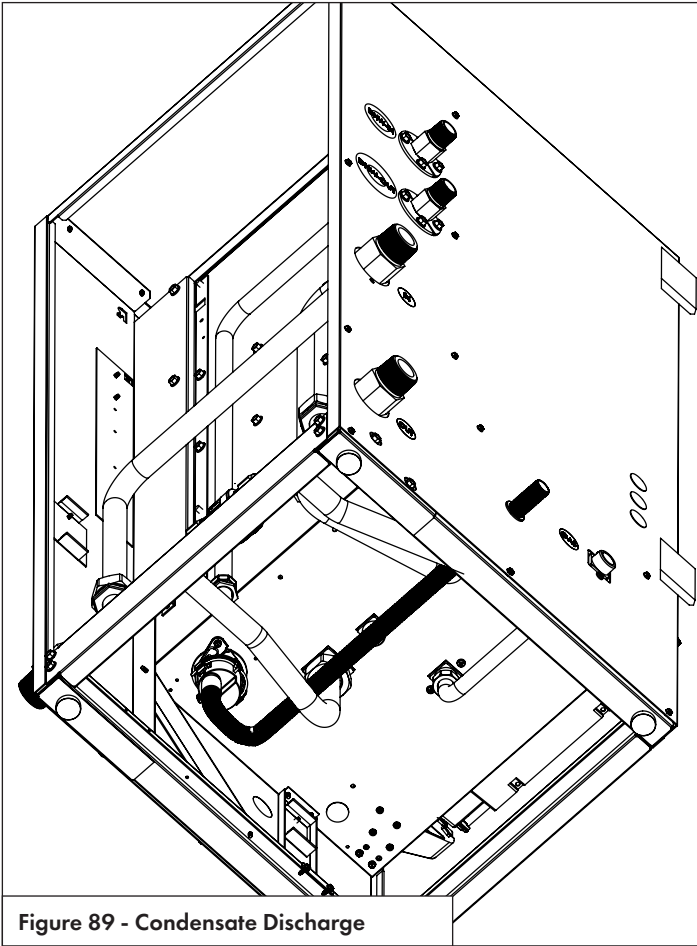


Figure 89 - Condensate Discharge

3. If a long horizontal run is used, it may be necessary to create a vent in the horizontal run to prevent a vacuum lock in the condensate line.
4. Do not expose the condensate to freezing temperatures.
5. It is very important you support the condensation line to assure proper drainage.

### **! WARNING**

#### **FOR YOUR OWN SAFETY READ BEFORE OPERATING**

1. This boiler does not have a pilot. It is equipped with an ignition device which automatically lights the burner. Do not try to light the burner by hand.
2. **BEFORE OPERATING:** Smell all around the boiler area for gas. Be sure to smell next to the floor because some gas is heavier than air and will settle on the floor.
3. **WHAT TO DO IF YOU SMELL GAS**  
Do not try to light any boiler.  
Do not touch any electric switch, do not use any phone in your building.  
Immediately call your gas supplier from a neighbor's phone. Follow the gas suppliers' instructions.  
If you cannot reach your gas supplier, call the fire department.  
Turn off the gas shutoff valve (located outside the boiler) so that the handle is crosswise to the gas pipe. If the handle will not turn by hand, don't try to force or repair it, call a qualified service technician. Force or attempted repair may result in a fire or explosion.
4. **Do not use** this boiler if any part has been under water. Immediately call a qualified service technician to inspect the boiler and to replace any part of the control system and any gas control that has been damaged.
5. The boiler shall be installed so the gas ignition system components are protected from water (dripping, spraying, rain, etc.) during boiler operation and service (circulator replacement, condensate trap, control replacement, etc.)

**Failure to follow these instructions could result in property damage, serious personal injury, or death.**

If you discover any evidence of a gas leak, shut down the boiler at once. Find the leak source with a bubble test and repair immediately. Do not start the boiler again until the leak is repaired. Failure to comply could result in substantial property damage, severe personal injury, or death.

**A. First Ignition**

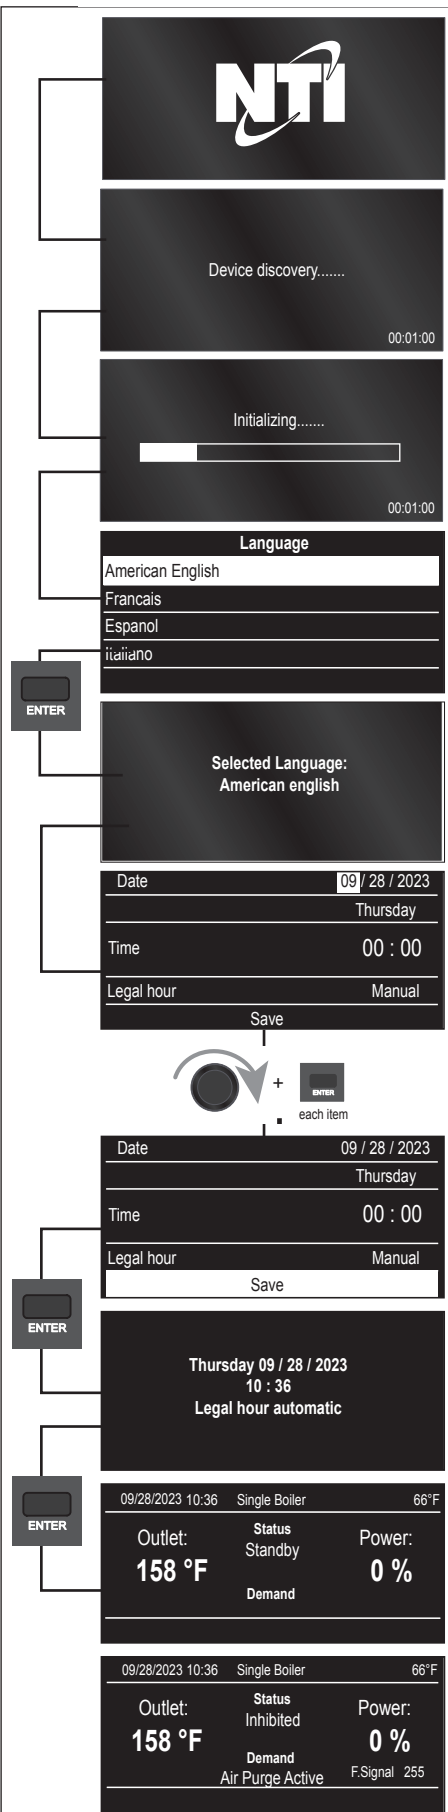


Figure 90 - Initialization procedure

1. Make sure that the gas supply is valved off and the boiler is properly connected to a 120VAC power supply with sufficient earth ground.
2. Unscrew the cap on any automatic air vents located in the system piping.
3. Ensure that the system pressure is at least 12 psi on the tridicator and no hot water or heating requests will be made.
4. Turn the power supply to the boiler on. The display lights up and activates the initialization procedure:
5. The boiler require to select/insert language and Time &Date.
6. **The air purge function starts automatically.**
6. During the air purge cycle open the manual air vent on the primary heat exchanger. Close the air vent when clear water free of air is visible.
8. Ensure the system is completely purged of air after the purging cycle has ended. If not, repeat the procedure.
- SEE NOTE "AIR PURGE FUNCTION"**
- NOTE:** It is recommended to run through the full initial purge cycle at install. Do not cut the purge cycle short.
9. Purge air from the CH and DHW systems. After CH system purging is complete, verify that system pressure is at least 12 psi on the pressure gauge. **NOTE:** The water pressure switch safety is set at 8 psi to protect the boiler.
10. The exhaust vent piping for combustion products should be suitable and free from any obstructions.
11. Any necessary ventilation inlets in the room should be open (power vent installation).
12. Verify that the condensate drain hose is connected to the outlet of the boiler condensate trap, and that the condensate trap is fully intact.
13. Set the room thermostat to the highest setting to start the boiler and test Lockout Error 501. **NOTE:** The boiler will display a Lockout Error 501 after the 3rd consecutive failed ignition attempt.
  - The combustion fan will pre-purge for a short time before activating the igniter.
  - Ensure the combustion fan post-purges for at least 5 seconds before reactivating the igniter.
  - After the boiler displays Error 501, set the room thermostat to the normal setting to start the boiler.
14. Open the gas supply to the boiler and check all joints for leaks. Repair any leaks before proceeding.
15. Press the RESET button to clear Error 501. The display will show OK.
16. Start the boiler by applying a central heating and/or DHW demand.

**NOTE: AIR PURGE FUNCTION**

To activate the Air purge Function access to the Test Mode Menu. Press the MENU button. Turn the dial to select Test Mode and press ENTER. Insert the code 234 and press ENTER.

| Technical Area |
|----------------|
| Setup wizard   |
| Boiler Details |
| User Menu      |
| Tech menu      |
| Test mode      |

Turn the dial to select Air Purge Function and Press ENTER.

| Test Mode          |
|--------------------|
| Burner Test        |
| Output Test        |
| Air purge Function |

The boiler starts a Air Purge cycle.

| 09/28/2023 10:36 | Single Boiler           | 66°F         |
|------------------|-------------------------|--------------|
| Outlet:          | Status Inhibited        | Power:       |
| <b>158 °F</b>    | Demand Air Purge Active | <b>0 %</b>   |
|                  |                         | F.Signal 255 |

17. **THE BOILER WILL OPERATE AT A MAXIMUM POWER LEVEL OF 50% FOR THE FIRST 5 MINUTES FOLLOWING INITIAL COMBUSTION. THIS IS TO ENSURE THAT THE BALL INSIDE THE CONDENSATE TRAP HAS AN OPPORTUNITY TO FLOAT WHILE THE TRAP INITIALLY FILLS WITH CONDENSATE.**
18. **PROCEED WITH THE "COMBUSTION CHECKING PROCEDURE."**

## Part 11 - Start-Up

### B. Combustion Checking Procedure

The order of operations for this procedure must always be respected.

#### OPERATION 1 GAS INLET PRESSURE CHECK

Loosen screw 1 (Torx 10 - Line Pressure Test Port) and connect a manometer to the port using applicable tubing.

Ensure the boiler is powered on.

Enable **Burner Test** - access the Main Menu by pressing the Menu button.

Turn the dial to select Test Mode and press ENTER. Press ENTER to activate Burner Test. Turn the dial to select MAX Power and press ENTER.

The boiler turns on at maximum power.

The gas line pressure must remain within the range provided in Table 43 for the gas type during all operating conditions.

Upon completion of the combustion analysis and adjustment (Operations 2 through 5), remove the pressure gauge and tighten screw 1.

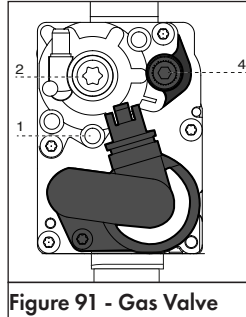


Figure 91 - Gas Valve

#### VERIFY AND REPAIR ANY GAS LEAKS.

#### OPERATION 2 COMBUSTION ANALYSIS

Remove the combustion test port plug as illustrated, and insert a calibrated combustion analyzer.

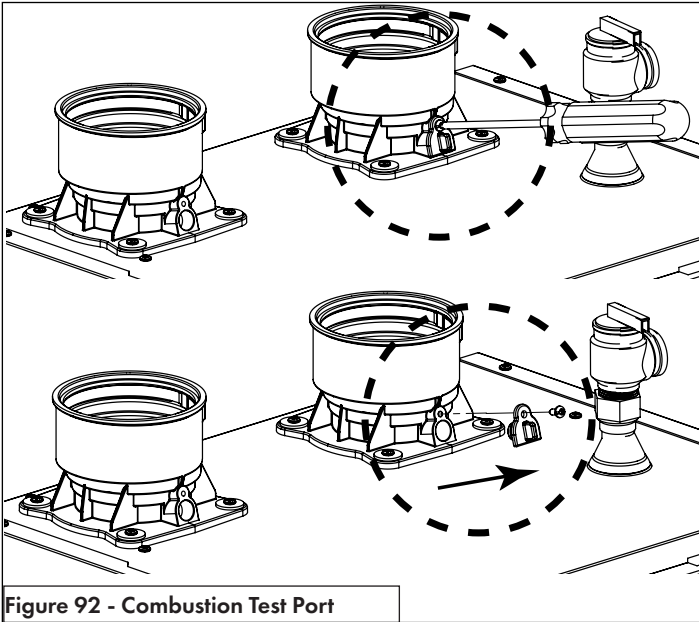


Figure 92 - Combustion Test Port

### ! WARNING

Make sure the calibrated combustion analyzer is set to the appropriate gas type. Failure to do so could result in serious personal injury or death.

It is required to use a calibrated combustion analyzer to verify final adjustment according to the combustion chart (Table 43). Failure to do so could result in serious personal injury or death.

### ! WARNING

It is very important that the combustion system be set within the recommended CO measurements listed in Table 43. Visually looking at the burner does not determine combustion quality. Failure to measure combustion with a calibrated combustion analyzer and set the throttle within the recommended CO measurements could result in property damage, severe personal injury, or death.

#### OPERATION 3 CHECKING THE CO<sub>2</sub> AT MAX POWER (100%)

Set the thermostat at the highest possible setting or draw off the domestic hot water at the maximum water flow rate to create a demand for heat.

Enable **Burner Test**, access the Main Menu by pressing the Menu button.

Turn the dial to select Test Mode and press ENTER. Press ENTER to activate Burner Test. Turn the dial to select **MAX Power** and press ENTER.

The boiler turns on and ramps to Max Power (100%).

|                  |                            |           |
|------------------|----------------------------|-----------|
| 09/28/2023 10:36 | Single Boiler              | 66°F      |
| Outlet:          | Status<br>Run              | Power:    |
| 158 °F           | Demand                     | 100 %     |
|                  | Max Power Test in Progress |           |
| Min Power        |                            | Max Power |

(see Note BURNER TEST)

### ! WARNING

WARNING! When the Burner Test Function is activated the temperature of the water coming out of the boiler may exceed 179°F.

Wait 1 minute for the boiler to stabilize before carrying out the combustion analyses. Read the CO<sub>2</sub> value (%) and compare it with the values given in the table below:

#### ATTENTION!!

OBTAIN ALL VALUES WITH THE FRONT COVER INSTALLED.

| Power               | Natural Gas      |                 | LP Gas           |                 |
|---------------------|------------------|-----------------|------------------|-----------------|
|                     | Max Power (100%) | Min Power (10%) | Max Power (100%) | Min Power (10%) |
| CO (ppm)            | ≤175             |                 | ≤175             |                 |
| CO <sub>2</sub> (%) | 8.7-10.0         | 8.5-9.8         | 9.7-11.0         | 9.5-10.8        |
| Gas Pressure        | 3.5 - 10.5" w.c. |                 | 8 - 13" w.c.     |                 |

**NOTICE:** The CO<sub>2</sub> at Min Power **must** be set lower than the CO<sub>2</sub> at Max Power by 0.2-1.0%

**Example (NG):** If CO<sub>2</sub> at Max Power = 9.2%, then CO<sub>2</sub> at Min Power must = 8.5-9.0%

**Example (LP):** If CO<sub>2</sub> at Max Power = 10.2%, then CO<sub>2</sub> at Min Power must = 9.5-10.0%

Table 43 - Combustion Settings

If the CO<sub>2</sub> (%) reading differs from the values given in the table, adjust the gas valve following the instructions below. Otherwise move directly to OPERATION 4.

**! WARNING**

It is very important that the combustion settings are within the ranges listed in Table 43. Visually looking at the burner does not determine combustion quality. Failure to measure combustion with a calibrated combustion analyzer and set the throttle within the recommended combustion measurements could result in property damage, severe personal injury, or death.


Make sure the calibrated combustion analyzer is set to the appropriate gas type. Failure to do so could result in serious personal injury or death.

It is required to use a calibrated combustion analyzer to verify final adjustment according to the combustion chart (Table 43). Failure to do so could result in serious personal injury or death.


**Note: BURNER TEST**

To activate the BURNER TEST access to the Test Mode Menu. Press the MENU button.


Turn the dial to select Test Mode and press ENTER. Turn the dial to select Burner Test and press ENTER.

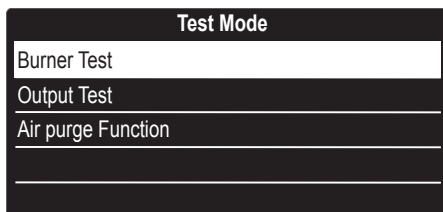

Turn the dial to select MAX Power and press ENTER. The boiler turns on and ramps to Max Power (100%). Set combustion according to Table 43.

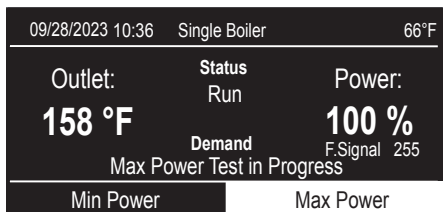

Turn the dial to select MIN Power and press ENTER. The boiler modulates to Min Power (10%). Set combustion according to Table 43. Press ESC to stop the test.

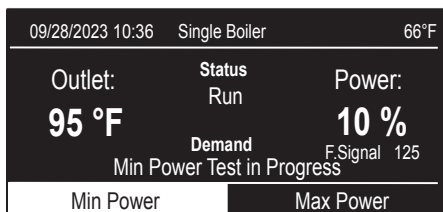

**! WARNING**

**Breathing Hazard - Carbon Monoxide Gas**




- Do not operate heater if flood damaged.
- Install vent system in accordance with local codes and manufacturers installation instructions.
- Do not obstruct heater air intake or exhaust. Support all vent piping per manufacturers installation instructions.
- Do not place chemical vapor emitting products near unit.
- According to NFPA 720, carbon monoxide detectors should be installed outside each sleeping area.
- Never operate the heater unless it is vented to the outdoors.
- Analyze the entire vent system to make sure that condensate will not become trapped in a section of vent pipe and therefore reduce the open cross sectional area of the vent.

**Breathing carbon monoxide can cause brain damage or death. Always read and understand instruction manual.**

**Adjusting the Gas Valve at Max Power (100%)**

Adjust the gas valve by turning setting screw **4** clockwise to increase the CO<sub>2</sub> level; counterclockwise to reduce the CO<sub>2</sub> level (1 turn adjusts the CO<sub>2</sub> level by approximately 0.3%). Wait 1 minute after each change in setting for the CO<sub>2</sub> value to stabilize.

If the value measured corresponds to the value given in the Table 43, max adjustment is complete. Otherwise continue the setting procedure.

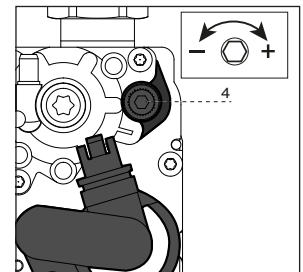

**Figure 93 - Max Power CO<sub>2</sub> Adjustment**

**ATTENTION!!** The Test Function will automatically deactivate after 30 minutes, or Test Function can be turned off manually by pressing the RESET button.


## Part 11 - Start-Up

### OPERATION 4

#### CHECKING THE CO<sub>2</sub> AT MIN POWER (10%)

From the Burner Test screen, turn the dial to select **MIN POWER** and press ENTER to operate the boiler at minimum power.

Wait 1 minute for the boiler to stabilize before carrying out the combustion analyses. If the CO<sub>2</sub> (%) reading at Min Power is outside the range indicated in Table 43, adjust the gas valve following the instructions below.

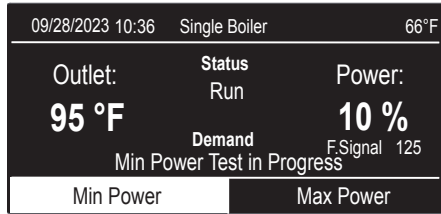

Otherwise proceed directly to OPERATION 5.

**NOTE:** Min Power calibration must be performed after Max Power calibration.

**NOTE:** The CO<sub>2</sub> reading at Min Power must be set lower than the CO<sub>2</sub> reading at Max Power by 0.2-1.0%.


#### Adjusting the Gas Valve at Min Power (10%)

Remove cap and adjust screw **2** by turning counter-clockwise to reduce the CO<sub>2</sub> level; clockwise to increase the CO<sub>2</sub> level.

**Note:** total adjustment should not exceed ¼ of a turn.

Wait 1 minute after each adjustment for the CO<sub>2</sub> value to stabilize.

**WARNING! MIN POWER ADJUSTMENT IS VERY SENSITIVE**  
(total adjustment should not exceed ¼ of a turn)

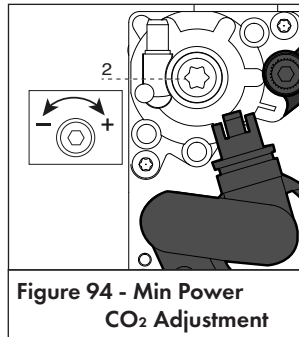


If the value measured corresponds to the value given in Table 43 adjustment is complete. Otherwise, continue the setting procedure.

**ATTENTION!! IF THE VALUE OF THE CO<sub>2</sub> AT MIN POWER HAS BEEN CHANGED, IT IS NECESSARY REPEAT THE ADJUSTMENT AT MAX POWER.**

### OPERATION 5

#### ENDING ADJUSTMENT

1. Exit Burner Test by pressing ESC.
2. Turn down the thermostat and / or stop the DHW draw-off.
3. Check for and repair any leaks of gas.
4. Reinstall the front cover.
5. Reinstall the combustion test port - see Figure 92.

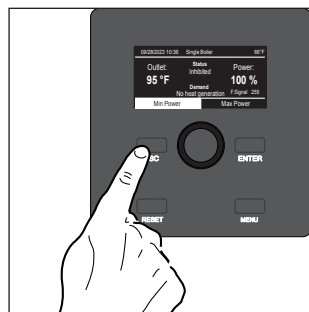

### C. Converting the Appliance from Natural Gas to Propane Operation

NTI boilers are factory set to operate on Natural Gas. **BEFORE OPERATING ON PROPANE** the boiler must be converted to Propane using the included conversion kit specific to the boiler model.


#### **! WARNING**

These instructions CANNOT be used to convert NTI appliance models not referenced within these instructions. Contact NTI for the availability of conversion kits and instructions for other models.

Failure to apply these instructions properly may result in dangerous Carbon Monoxide levels, fire, or explosion, leading to property damage, serious personal injury, or death.

#### **! WARNING**

##### Breathing Hazard - Carbon Monoxide Gas

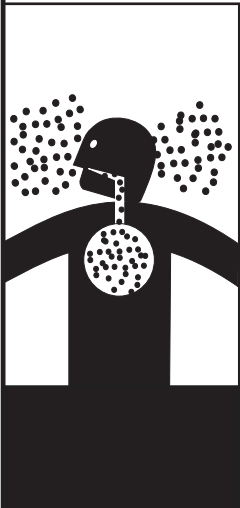

- Do not operate heater if flood damaged.
- Install vent system in accordance with local codes and manufacturers installation instructions.
- Do not obstruct heater air intake or exhaust. Support all vent piping per manufacturers installation instructions.
- Do not place chemical vapor emitting products near unit.
- According to NFPA 720, carbon monoxide detectors should be installed outside each sleeping area.
- Never operate the heater unless it is vented to the outdoors.
- Analyze the entire vent system to make sure that condensate will not become trapped in a section of vent pipe and therefore reduce the open cross sectional area of the vent.

**Breathing carbon monoxide can cause brain damage or death. Always read and understand instruction manual.**

**ATTENTION:**  
**LIQUEFIED PETROLEUM (LP) PROPANE**  
 Liquefied Petroleum (LP) propane gas is heavier than air; therefore, it is imperative that your boiler is not installed in a pit or similar location that will permit heavier than air gas to collect.  
 Local Codes may require appliances fueled with LP gas be provided with an alarm or an approved means of removing unburned gases from the room. Check your local codes for this requirement.

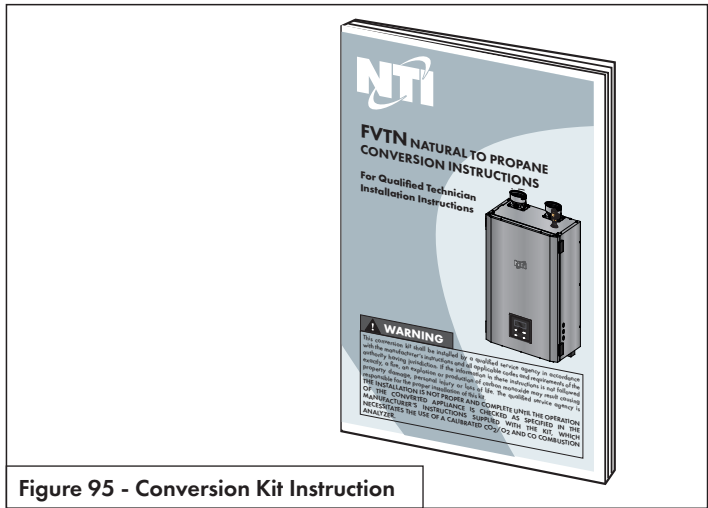


Figure 95 - Conversion Kit Instruction

## Part 12 - Installation Checklist

| Before Installing   | Yes | Note |
|---|-----|------|
| Is there enough space to ensure proper installation?  |     |      |
| Does installation location allow for proper service clearances?   |     |      |
| Are water and gas lines properly sized and set at proper pressures for the installation?  |     |      |
| Is boiler location as near the exhaust vent / intake pipe terminations as possible?   |     |      |
| Have combustibles materials been cleared from the installation location?  |     |      |
| Is there a drain close to the boiler?   |     |      |
| Water Piping  | Yes | Note |
| Does boiler loop piping meet the minimum sizing requirements listed?<br><b>NOTE:</b> Smaller piping will cause performance problems.  |     |      |
| Does the system have an adequate air removal / CH Air separator?  |     |      |
| Has water chemistry been checked?   |     |      |
| Does water chemistry meet requirements?   |     |      |
| If water chemistry does not meet requirements, have treatment measures been put in place?   |     |      |
| Has the system been cleaned and flushed?  |     |      |
| Install Exhaust Vent and Intake Piping  | Yes | Note |
| Has the boiler been vented with the approved materials listed in this manual or to meet local codes?  |     |      |
| Is air supply sufficient for proper boiler operation?   |     |      |
| Is total vent piping length within the maximum vent length restriction listed in this manual?   |     |      |
| Have venting lengths been minimized?  |     |      |
| Are terminations properly spaced from windows, doors, and other intake vents?   |     |      |
| Have all vent terminations been installed at least one foot above exterior grade and one foot above maximum snow accumulation level?  |     |      |
| Is vent piping properly supported?  |     |      |
| Has vent piping been checked for leaks?   |     |      |
| Has the exhaust vent line been pitched back to the boiler at a rate of 1/4" per foot?   |     |      |
| Have the exhaust vent and intake pipes been properly installed to the boiler?   |     |      |
| Is the condensate drain supported so as to not place strain on the boiler's condensate outlet fitting?  |     |      |
| Install Condensate Piping / Tubing and Components   | Yes | Note |
| Have all condensate components included with the boiler been installed?   |     |      |
| Is the condensate line piped with the approved materials listed in this manual?   |     |      |
| Has the condensate line been routed to a laundry tub or other drain?  |     |      |
| Install Gas Piping  | Yes | Note |
| If operating on Propane, has the appropriate LP Conversion Kit been installed and the LP Conversion Instructions been followed?   |     |      |
| Is the gas supply line a minimum of 3/4" in diameter?   |     |      |
| Is the gas supply line length and diameter adequate to deliver the required BTUs?   |     |      |
| When operating at maximum and minimum gas input rates, does the gas line pressure remain between 3.5 and 14" WC for Natural Gas, or between 8 and 13" WC for Propane?                 |     |      |
| Does the gas type match the type indicated on the boiler rating plate? If converted to Propane, has the LP Conversion Label been affixed adjacent to the boiler's rating plate label? |     |      |
| Has a union and shut-off valve been installed?  |     |      |
| Relief Valve  | Yes | Note |
| Is the CH Pressure Relief Valve rated to 30 psi properly installed and the at least 3/4" discharge line run to an open drain and protected from freezing?                             |     |      |
| Is the DHW Pressure Relief Valve rated to 150 psi properly installed and the at least 3/4" discharge line run to an open drain and protected from freezing?                           |     |      |



| <b>Wiring</b>  | <b>Yes</b>  | <b>Note</b> |
|--|-------------|-------------|
| Has the power and control been wired per boiler wiring diagram, this manual?   |             |             |
| Is the main electrical connection polarity within boiler requirements?   |             |             |
| Does the power supply voltage agree with the boiler rating plate? 120V AC?   |             |             |
| <b>Start-Up, Adjust, and Test</b>  | <b>Yes</b>  | <b>Note</b> |
| Has the boiler been started?   |             |             |
| If necessary, has the boiler gas valve been adjusted?  |             |             |
| Has the installation been customized per installation location requirements?   |             |             |
| Have all customized system parameters been tested?   |             |             |
| Has proper boiler operation been confirmed?  |             |             |
| <b>Burner Flame</b>  | <b>Yes</b>  | <b>Note</b> |
| Has the burner flame been checked?   |             |             |
| Have combustion values been verified with a calibrated combustion analyzer?  |             |             |
| If the flame does not appear normal, it may need to be cleaned by a qualified service technician. See flame sight glass window location. |             |             |
| <b>Final Installation Approvals</b>  |             |             |
| <b>Signed by Technician</b>  | <b>Date</b> |             |
|  |             |             |
| <b>Table 44 - Installation Checklist</b>   |             |             |


### A. Boiler Protection Devices

The boiler is protected from malfunctioning by means of internal checks performed by the electronic microprocessor PCB, which stops the boiler from operating if necessary. In the event of the boiler being shut off in this manner, a code appears on the display which refers to the type of shut-off and the reason behind it.

There are two types of shut-off:

#### 1. Blocking Error


A blocking error means the boiler will restart automatically as soon as the problem which caused the error clears or is removed; the error is indicated on the display.

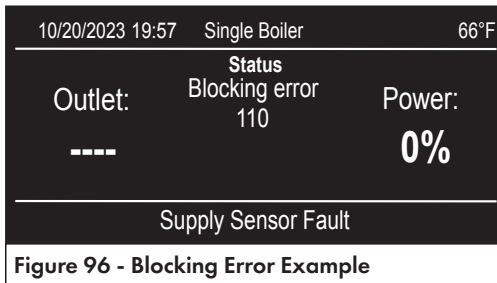

For example, if the boiler indicates a 110 error code, the error will clear automatically when the CH temperature decreases. The boiler will restart and operate normally.

**NOTE:** Contact a qualified service technician if the error continues to occur.

In the event of **Error 108 - Shut-off due to insufficient water pressure inside the heating circuit**

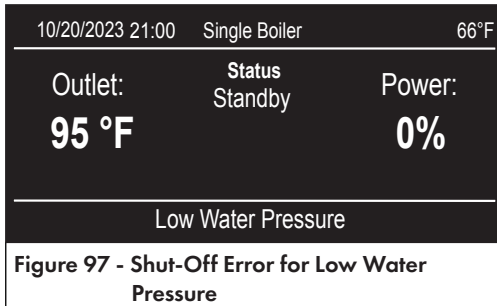


Pressure can be increased by filling the heating circuit. See filling and purging procedures, this manual.

If Error 108 occurs frequently and system needs repeated refilling, turn the boiler off. Turn the external electric power to the OFF position. Shut off the main gas valve. Contact a qualified service technician to check for any leaks of water.

#### 2. Lockout Error

A lockout error means the boiler does not return to operation after the error condition goes away.

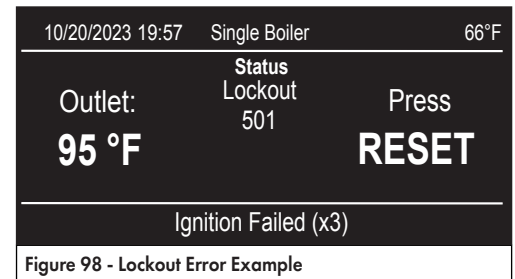

The RESET button must be pressed on the control panel to restore boiler operation.

If the error condition occurs often contact a qualified service technician.


### ! WARNING

#### Important

Contact a qualified service technician for assistance if a Lockout Error occurs frequently. For safety reasons, the boiler will permit a maximum of five (5) resets in 15 minutes (five [5] presses of the RESET button). A sixth (6th) attempt within this 15 minute period will lock out the boiler. The boiler will only operate again after the electrical supply has been disconnected and reconnected. Repeated Lockout Error conditions could indicate a serious error with the boiler or installation. Failure to contact a qualified service technician to troubleshoot the error could result in substantial property damage, serious personal injury, or death.

#### 3. Malfunction Warning

This warning is shown by the display in the following format:

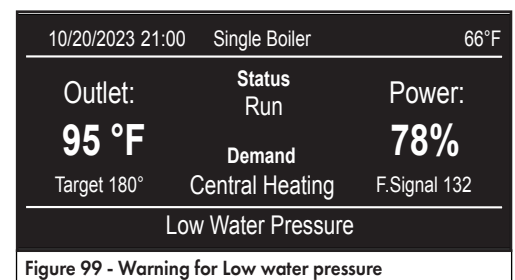

The figure shows the Warning **1 P4 = LOW WATER PRESSURE**.

The first part of the error code (e.g. 1 01) indicates the affected operational assembly.

- 1 - Primary Circuit
- 2 - Domestic Hot Water Circuit
- 3 - Internal Electronic Part
- 4 - External Electronic Part
- 5 - Ignition and Detection
- 6 - Air inlet - flue gas outlet
- 7 - Multi-zone Heating

**B. Boiler Error Codes**

| Display Error code | Error Description  | Possible cause based on priority                                     | Possible Remedies   | Error Type              |
|--------------------|--|--|---|-------------------------|
| <b>CH Circuit</b>  |  |  |   |                         |
| <b>1 01*</b>       | 101<br>Outlet temperature exceeded 210F  |  | Reset the error by tapping the reset button   | Blocking (Manual Reset) |
|                    |  | Air in the system  | Ensure boiler is free of air and pressurized to at least 20PSI  |                         |
|                    |  | Return filter plugged  | Ensure return filter in the boiler (if equipped) is clear   |                         |
|                    |  | Failed internal circulator/<br>internal circulator not powered       | Verify that the internal pump is operating properly (blue light on solid). Verify the pump has 120VAC when the heating or hot water call is active  |                         |
|                    |  | Plugged plate heat exchanger(combi only)/<br>indirect hot water tank | If problem occurs during hot water demands only, check the plate exchanger, combi boilers, or indirect hot water tank and plumbing for blockages.   |                         |
|                    |  | Improper piping or boiler commissioning                              | If not using the DHW connection ensure the diverting valve is moving freely and is locked in the heating position (upper position). See diverting valve stuck ensure the piping matches the instructions in the installation manual for that specific model.                          |                         |
|                    |  | Damaged/ Malfunctioning temperature sensor                           | Swap the inlet and outlet sensors and verify that the sensors read correctly in both positions. If the sensors differ by more than 5F, replace the sensors, check for water damage or corrosion on sensors. Compare the resistance of the sensor to the temperature resistance chart. |                         |
| <b>1 03*</b>       | 103<br>Supply temperature rising faster than 12.6 degrees per second three times in a row. |  | Reset the error by tapping the reset button   | Blocking (Manual Reset) |
|                    |  | Air in the system  | Ensure boiler is free of air and pressurized to at least 20PSI  |                         |
|                    |  | Failed internal circulator/<br>internal circulator not powered       | If the problem occurs during heating and hot water demands, ensure return filter in the boiler (if equipped) is clear, and the internal pump is operating properly (blue light on solid). Verify the pump has 120VAC with the heating or hot water call is active.                    |                         |
|                    |  | Plugged plate heat exchanger(combi only)/<br>indirect hot water tank | If problem occurs during hot water demands only, check the plate exchanger (combi boilers only) or indirect hot water tank and plumbing for a blockage.   |                         |
|                    |  | Improper piping or boiler commissioning                              | If not using the DHW connection ensure the diverting valve is moving freely and is locked in the heating position (upper position) See diverting valve stuck, ensure the piping matches the instructions in the installation manual for that specific model.                          |                         |
|                    |  | Damaged/ Malfunctioning temperature sensor                           | Swap the inlet and outlet sensors and verify that the sensors read correctly in both positions. If the sensors differ by more than 5F, replace the sensors, check for water damage or corrosion on sensors. Compare the resistance of the sensor to the temperature resistance chart. |                         |

## Part 13 - Troubleshooting

| Display Error code | Error Description  | Possible cause based on priority                                     | Possible Remedies   | Error Type                |
|--------------------|--|--|---|---------------------------|
| 104*               | 104<br>Supply temperature rose faster than 27 degrees per second                             |  | Reset the error by tapping the reset button.  | "Blocking (Manual Reset)" |
|                    |  | Air in the system  | Ensure boiler is free of air and pressurized to at least 20PSI.   |                           |
|                    |  | Failed internal circulator/<br>internal circulator not powered       | If the problem occurs during heating and hot water demands, ensure return filter is clear, and the internal pump is operating properly (blue light on solid)<br>Verify the pump has 120VAC with the heating or hot water call is active.  |                           |
|                    |  | Plugged plate heat exchanger(combi only)/<br>indirect hot water tank | If problem occurs during hot water demands only, check the plate exchanger (combi boilers only) or indirect hot water tank and plumbing for a blockage.   |                           |
|                    |  | Improper piping or boiler commissioning                              | If not using the DHW connection ensure the diverting valve is moving freely and is in the heating position (upper position) See diverting valve stuck, ensure the piping matches the instructions in the installation manual for that specific model.                                 |                           |
|                    |  | Damaged/ Malfunctioning temperature sensor                           | Swap the inlet and outlet sensors and verify that the sensors read correctly in both positions. If the sensors differ by more than 5F, replace the sensors, check for water damage or corrosion on sensors.   |                           |
| 105*               | 105<br>Supply temperature exceeded return temperature by more than 99F three times in a row. |  | Reset the error by tapping the reset button   | Blocking (Manual Reset)   |
|                    |  | Air in the system  | Ensure boiler is free of air and pressurized to at least 20PSI  |                           |
|                    |  | Failed internal circulator/<br>internal circulator not powered       | If the problem occurs during heating and hot water demands, ensure return filter is clear, and the internal pump is operating properly (blue light on solid) Verify the pump has 120VAC with the heating or hot water call is active  |                           |
|                    |  | Plugged plate heat exchanger(combi only)/<br>indirect hot water tank | If problem occurs during hot water demands only, check the plate exchanger (combi boilers only) or indirect hot water tank and plumbing for a blockage.   |                           |
|                    |  | Improper piping or boiler commissioning                              | If not using the DHW connection ensure the diverting valve is moving freely and is in the heating position (upper position) See diverting valve stuck, ensure the piping matches the instructions in the installation manual for that specific model.                                 |                           |
|                    |  | Damaged/ Malfunctioning temperature sensor                           | Swap the inlet and outlet sensors and verify that the sensors read correctly in both positions. If the sensors differ by more than 5F, replace the sensors, check for water damage or corrosion on sensors. Compare the resistance of the sensor to the temperature resistance chart. |                           |
|                    |  | PCB failure  | Check menu 8.5.5. if the software version is 00.44.03 or 00.44.01 replace the PCB.  |                           |

| Display Error code | Error Description  | Possible cause based on priority                                     | Possible Remedies   | Error Type                 |
|--------------------|--|--|---|----------------------------|
| <b>1 06*</b>       | 106<br>Return temperature is hotter than the supply temperature by 18F |  | Reset the error by tapping the reset button   | Blocking<br>(Manual Reset) |
|                    |  | Air in the system  | Ensure boiler is free of air and pressurized to at least 20PSI  |                            |
|                    |  | Failed internal circulator/<br>internal circulator not powered       | If the problem occurs during heating and hot water demands, ensure return filter is clear, and the internal pump is operating properly (blue light on solid) Verify the pump has 120VAC with the heating or hot water call is active                  |                            |
|                    |  | Plugged plate heat exchanger(combi only)/<br>indirect hot water tank | If problem occurs during hot water demands only, check the plate exchanger (combi boilers only) or indirect hot water tank and plumbing for a blockage.   |                            |
|                    |  | Improper piping or boiler commissioning                              | If not using the DHW connection ensure the diverting valve is moving freely and is in the heating position (upper position) See diverting valve stuck, ensure the piping matches the instructions in the installation manual for that specific model. |                            |
|                    |  | Damaged/ Malfunctioning temperature sensor                           | Swap the inlet and outlet sensors and verify that the sensors read correctly in both positions. If the sensors differ by more than 5F, replace the sensors, check for water damage or corrosion on sensors.   |                            |
| <b>1 07</b>        | Controller Software problem  | Control versions prior to 00.85.00                                   | Reset the error by tapping the reset button. Check menu 8.5.5. if the software version is 00.44.03 or 00.44.01 replace the PCB.   | Blocking<br>(Manual Reset) |
| <b>1 08</b>        | Water pressure too low.  | Water Pressure too low   | Raise the system pressure, with the boiler and heating circulators off, to a minimum of 20PSI.  | Blocking<br>(Auto Reset)   |
|                    |  | Air in the system / lack of water pressure                           | Ensure boiler is free of air and pressurized to at least 20PSI  |                            |
|                    |  | Improper boiler piping   | Ensure there are no pumps or check valves in the hot water or heating system piping unless they are shown in the installation manual.   |                            |
|                    |  | Improper expansion tank location                                     | Ensure the expansion tank is in the correct location according to the piping diagram in the manual.   |                            |
|                    |  | Malfunctioning pressure switch or bad wire harness                   | If the system is filled to at least 20 PSI and the problem persists test the pressure switch wires for continuity and good connections, replace the pressure switch.  |                            |
|                    |  | Blocked plate exchanger or return filter                             | Check for proper flow during heating an hot water demands, when the piping is clear the boiler can maintain a delta of 40F or lower at full fire. A higher delta T indicates a lack of water flow.  |                            |
| <b>1 10</b>        | Supply sensor short circuit or open circuit                            | Temperature sensor disconnected                                      | Ensure the supply sensor (near the top of the heat exchanger) is connected to the two red wires and it securely clipped on the outlet pipe.   | Blocking<br>(Auto Reset)   |
|                    |  | Faulty Temperature Sensor  | Check the supply sensor for water damage, try swapping the supply and return temperature sensors. Check sensor resistance see temperature/ resistance chart.  |                            |
|                    |  | Damaged sensor wiring  | Inspect the wiring between the supply sensor and PCB, check for continuity, corrosion and water damage, ensure connectors are plugged in properly   |                            |

## Part 13 - Troubleshooting

| Display Error code | Error Description                                   | Possible cause based on priority       | Possible Remedies  | Error Type            |
|--------------------|---|--|--|-----------------------|
| 1 12               | CH Return temp. sensor circuit open / short circuit | Temperature sensor disconnected        | Ensure the return sensor (near the bottom of the heat exchanger) is connected to the two blue wires and it securely clipped on the outlet pipe.  | Blocking (Auto Reset) |
|                    |   | Faulty Temperature Sensor              | Check the return sensor for water damage, try swapping the supply and return temperature sensors. Check sensor resistance see temperature/ resistance chart.                               |                       |
|                    |   | Damaged sensor wiring                  | Inspect the wiring between the return sensor and PCB, check for continuity, corrosion and water damage, ensure connectors are plugged in properly  |                       |
| 1 14               | Outdoor sensor not connected                        | Outdoor reset turned on (but not used) | If not using outdoor reset, ensure Menu 4.2.1, 5.2.1 and 6.2.1 are set to 0.   | Blocking (Auto Reset) |
|                    |   | WIFI disconnected                      | If using Wi-Fi the boiler gets the outdoor temperature from the web. The website may be down or the WIFI has become disconnected   |                       |
| 115                | System sensor Disconnected                          | System sensor disconnected             | In a cascade the system sensor must be connected to the master boiler, connect the system sensor to the master boiler using the SYS plug connection.                                       |                       |
|                    |   | Menu 0.46 improperly set               | If the boiler is set to work in a cascade the system sensor must be connected to the master boiler. If not running in a cascade set parameter 0.4.6 to b-Sin.                              |                       |
|                    |   | Faulty Temperature Sensor or wiring    | Check the system sensor for water damage and disconnected wiring . Check sensor resistance see temperature/ resistance chart. Ensure the system sensor is connected to the master boiler.  |                       |
| 1 16               | Floor Thermostat contact open                       | Incorrect setting                      | If not using a floor sensor set parameter 223 is set to 0. If parameter 223 is set to 1 and a floor safety thermostat is present reduce the CH set-point.                                  | Blocking (AUTO Reset) |
|                    |   | 3-way valve stuck                      | Verify that the 3 way valve operates freely between central heat and DHW. See diverting valve stuck.   |                       |
|                    |   | Floor sensor open circuit              | Floor sensor set too low, adjust setting correctly. If the floor sensor is set correctly verify proper system operation.   |                       |
|                    |   | Damaged sensor wiring                  | Inspect the wiring between the supply sensor and PCB, check for continuity, corrosion and water damage, ensure connectors are plugged in properly.   |                       |
| 150                | System Sensor Overheat                              | Faulty Temperature Sensor              | Check the system sensor for water damage, Check sensor resistance see temperature/ resistance chart.   | Warning (Auto reset)  |
|                    |   | Damaged sensor wiring                  | Inspect the wiring between the supply sensor and PCB, check for continuity, corrosion and water damage, ensure connectors are plugged in properly.   |                       |
| 1 P1               | Boiler temperature rose faster than 12.6F / second  | Normal operation                       | In systems with high and low temperature zones this error may be displayed for serval minutes as zones turn on and off. If the error goes away on its own, the system it working properly. | Warning               |
|                    |   | Potential Plumbing problem             | If there is insufficient circulation a lockout error will result , follow directions for that lockout.   |                       |
| 1 P2               | Supply temperate exceeded return by 99F or more     | Normal operation                       | In systems with high and low temperature zones this error may be displayed for serval minutes as zones turn on and off. If the error goes away on its own, the system it working properly. | Warning               |
|                    |   | Potential Plumbing problem             | If there is insufficient circulation a lockout error will result , follow directions for that lockout.   |                       |

| Display Error code | Error Description   | Possible cause based on priority                  | Possible Remedies   | Error Type            |
|--------------------|---|---|---|-----------------------|
| <b>1 P3</b>        | The return temperature exceeded the supply temperature by 18 F or more. | Normal operation                                  | In systems with high and low temperature zones this error may be displayed for several minutes as zones turn on and off. The warning will clear on its own.   | Warning               |
|                    |   | Potential Plumbing problem                        | If there is insufficient circulation a lockout error will result, follow directions for that lockout.   |                       |
| <b>DHW Circuit</b> |   |   |   |                       |
| <b>201</b>         | Damaged or shorted DHW temperature probe                                | DHW Sensor disconnected                           | Check the connection to the DHW temperature sensor  | Warning               |
|                    |   | Failed Temperature Sensor                         | Check the DHW sensor for water damage, Check sensor resistance see temperature/ resistance chart.   |                       |
|                    |   | Not using a DHW sensor                            | Check the DHW parameter 2.2.8 has the right setting.  |                       |
|                    |   | Damaged sensor wiring                             | Inspect the wiring between the DHW sensor and PCB, check for continuity, corrosion and water damage, ensure connectors are plugged in properly.   |                       |
| <b>203</b>         | Storage temp. probe circuit open / short circuit                        | Incorrect setting                                 | If using an aquastat or zone control for DHW demand, ensure setting 2.2.8 is set to 2. If the boiler is a combi model set 2.2.8 to 0.   | Blocking (Auto Reset) |
|                    |   | Tank sensor disconnected<br>Sensor wiring damaged | Check the tanks sensor and wiring for corrosion, loose connections or damage. If setting 2.2.8 is set to 1, connect tank sensor to the TNK plug on PCB.   |                       |
|                    |   | Faulty tank sensor                                | Check the temperature resistance chart and compare to the sensor reading. If the sensor shows a resistance greater than 150,000 Ohms or less than 100 ohms replace the sensor.  |                       |
|                    |   | Incorrect cascade settings                        | If the boiler is part of a cascade ensure that any boiler that is set to use a tank sensor has the sensor connected. When the Master boiler is used for an upstream tank set 2.2.8 To 2 for aquastat or 1 tank sensor. For slave boilers Set 34.2.8 to 2 on all slave boilers that are not using a tank sensor.   |                       |
| <b>205</b>         | DHW In probe open circuit   |   | Perform a factory reset using menu 2.8.0.   | Blocking (Auto Reset) |
| <b>209</b>         | Storage overheating<br>Tank temperature greater than 175F"              | Tank sensor wiring damaged                        | Inspect wiring from the tank sensor to the boiler for water damage shorts or physical damage.   | Blocking (Auto Reset) |
|                    |   | Tank sensor improperly installed                  | Ensure the tank sensor is fully inserted into the well of the tank in the proper location.  |                       |
|                    |   | Failed tank sensor                                | If the tank is cool, check the sensor resistance against the temperature resistance chart. Replace the sensor.  |                       |
|                    |   | Diverting valve failure                           | If the boiler DHW connection has been used, ensure there are no check valves or pumps other than what is indicated in the plumbing diagram corresponding to you application. Improper piping may prevent the valve from operating correctly. Turn the power off and back on and observe the diverting valve, the shaft should extend and retract ~3/8" several times while the boiler boots up. |                       |
|                    |   | Plumbing problem                                  | When the indirect is not piped using the DHW connection on the boiler, ensure that the zone control is turning off the hot water zone when the demand is satisfied. Ensure there is no water flow in the DHW plumbing while central heat is in operation.   |                       |

## Part 13 - Troubleshooting

| Display Error code    | Error Description   | Possible cause based on priority  | Possible Remedies  | Error Type                |
|-----------------------|---|---|--|---------------------------|
| 2 P2                  | Anti - Legionella function not completely finished                          |   | Switch the boiler OFF and ON at the main electrical power supply.  | Warning                   |
|                       |   | Improper settings   | Check Menu 2.5.7 0 = OFF , 1 = ON. Setting 2.10.1 must be set to 179 when 2.5.7 = 1.   |                           |
|                       |   | Tank sensor improperly installed  | Ensure the tank sensor is fully inserted into the well of the tank in the proper location.   |                           |
|                       |   | Faulty wiring   | Check the wiring to the tank sensor for water or corrosion   |                           |
|                       |   | Faulty tank sensor  | Check the sensor resistance against the temperature resistance chart. Replace the sensor.  |                           |
|                       | Diverting valve failure   | If the boiler DHW connection has been used, ensure there are no check valves or pumps other than what is indicated in the plumbing diagram corresponding to you application. Improper piping may prevent the valve from operating correctly. Turn the power off and back on and observe the diverting valve, the shaft should extend and retract ~3/8" several times while the boiler boots up. |  |                           |
| <b>Internal PCB's</b> |   |   |  |                           |
| 3 01                  | Display error Eeprom  | Power problem / defective PCB   | Test for proper voltage and grounding on the PCB and at the electrical supply to the boiler. Switch the boiler OFF and ON at the main electrical power supply. If the problem persists replace the main PCB. | Blocking (Auto Reset)     |
| 3 02                  | Communication error GP - GIU  | Wiring Between PCB and Display damaged/disconnected   | Test for proper voltage and grounding on the PCB and at the electrical supply to the boiler. Switch the boiler OFF and ON at the main electrical power supply. If the problem persists replace the main PCB. | Blocking (Auto Reset)     |
|                       |   | Power problem / defective PCB   | Check the wire connection between the PCB and the display for damage, corrosion or other problems.   |                           |
| 3 03                  | PCB internal error  |   | Reset the error by tapping the Reset button.   | Blocking (Auto Reset)     |
|                       |   |   | Remove and inspect the screen for water damage or debris contacting the screen pcb.  |                           |
|                       |   | Water pressure sensor wiring damaged or shorted   | Check the water pressure switch wiring for damage or shorts. Test for proper voltage and grounding. Switch the boiler OFF and ON at the main electrical power supply.  |                           |
|                       | Power problem / defective PCB   | Test for proper voltage and grounding. Switch the boiler OFF and ON at the main electrical power supply. If the problem persists replace the main PCB.  |  |                           |
| 3 04                  | Too many (> 5) resets in 15 minutes<br>(1) Turn Off the Power to the Boiler | Normal operation Reset button pushed more that 5 times in 15 minutes.   | Turn the power off and on then tap the reset button reset the error.   | Blocking (Auto Reset) (1) |
|                       |   | Power problem / defective PCB   | Check the reset button for sticking. If the boiler is online ensure a remote user is not resetting the lockout, Replace the PCB.   |                           |
| 3 05                  | PCB internal error  |   | Reset the error by tapping the Reset button.   | Blocking (Manual Reset)   |
|                       |   | Power problem / defective PCB   | Test for proper voltage and grounding. Switch the boiler OFF and ON at the main electrical power supply. If the problem persists replace the main PCB.   |                           |



| Display Error code       | Error Description                                | Possible cause based on priority         | Possible Remedies   | Error Type              |
|--------------------------|--|--|---|-------------------------|
| 3 06                     | PCB internal error                               |  | Reset the error by tapping the Reset button.  | Blocking (Manual Reset) |
|                          |  | Incorrect outdoor sensor wiring          | Disconnect the Outdoor sensor from the PCB and reset the error.   |                         |
|                          |  | Power problem / defective PCB            | Test for proper voltage and grounding. Switch the boiler OFF and ON at the main electrical power supply. If the problem persists replace the main PCB.  |                         |
| 3 07                     | PCB internal error                               |  | Reset the error by tapping the Reset button.  | Blocking (Manual Reset) |
|                          |  | Power problem / defective PCB            | Test for proper voltage and grounding. Switch the boiler OFF and ON at the main electrical power supply. If the problem persists replace the main PCB.  |                         |
| 3 09                     | Flame detection while burner is off              | Damaged flame probe or flame probe wire. | Check flame sensor and flame probe wire for damage, replace flame sensor  | Blocking (Manual Reset) |
|                          |  | Water damage                             | Inspect the flame sensor and Main PCB for water damage or corrosion   |                         |
|                          |  | Flooded combustion chamber               | If the condensate drain was blocked and the chamber flooded, dry the chamber and flame sensor   |                         |
|                          |  | PCB internal fault                       | If the Flame probe wire is good and the flame sensor has been replaced, replace the PCB   |                         |
| 3 11                     | Temperature sensor safety test failed            | Inlet/outlet sensor fault                | Swap the inlet and outlet sensors and verify that the sensors read correctly in both positions. If the sensors differ by more than 5F, replace the sensors. Compare the resistance of the sensor to the temperature resistance chart. |                         |
| 3 P9                     | Sched. Maintenance-Call for Service              | Normal operation                         | The service reminder has been set and the time expired, service the boiler and reset the timer. Menu 8.5.2  | Warning                 |
| <b>External P.C.B.'s</b> |  |  |   |                         |
| 4 11                     | Room sensor circuit open or short circuit Zone 1 | Room sensor not present                  | If using a room sensor reconnect it. If not using a room sensor set menu 4.2.1/5.2.1/6.2.1 = 0 or 1 or 3  | Blocking (AUTO Reset)   |
|                          |  | Bus wiring damaged                       | Inspect wiring on the BUS connection for shorts or damage. PCB connector CN24 pin 11-12   |                         |
|                          |  | Zone control wiring problem              | Ensure the zone control is correctly wired and the wires are in good condition. Check the wiring to each room sensor  |                         |
|                          |  | Damaged PCB                              | If nothing is wired to the BUS connections, replace the PCB.  |                         |
| 4 12                     | Room sensor circuit open or short circuit Zone 2 | Room sensor not present                  | If using a room sensor reconnect it. If not using a room sensor set menu 4.2.1/5.2.1/6.2.1 = 0 or 1 or 3  | Blocking (AUTO Reset)   |
|                          |  | Bus wiring damaged                       | Inspect wiring on the BUS connection for shorts or damage. PCB connector CN24 pin 11-12   |                         |
|                          |  | Zone control wiring problem              | Ensure the zone control is correctly wired and the wires are in good condition. Check the wiring to each room sensor  |                         |
|                          |  | Damaged PCB                              | If nothing is wired to the BUS connections, replace the PCB.  |                         |
| 4 13                     | Room sensor circuit open or short circuit Zone 3 | Room sensor not present                  | If using a room sensor reconnect it. If not using a room sensor set menu 4.2.1/5.2.1/6.2.1 = 0 or 1 or 3  | Blocking (AUTO Reset)   |
|                          |  | Bus wiring damaged                       | Inspect wiring on the BUS connection for shorts or damage. PCB connector CN24 pin 11-12   |                         |
|                          |  | Zone control wiring problem              | Ensure the zone control is correctly wired and the wires are in good condition. Check the wiring to each room sensor  |                         |
|                          |  | Damaged PCB                              | If nothing is wired to the BUS connections, replace the PCB.  |                         |

## Part 13 - Troubleshooting

| Display Error code            | Error Description   | Possible cause based on priority         | Possible Remedies   | Error Type              |
|-------------------------------|---|--|---|-------------------------|
| 4 30                          | Detected accessory wired to BUS connection  |  | Restore the factory default menu 2.8.0. If the error persist replace the PCB.   | Warning                 |
| 4 31                          | Detected accessory wired to BUS connection  |  | Restore the factory default menu 2.8.0. If the error persist replace the PCB.   | Warning                 |
| 440                           | Manager boiler missing from Bus   | Single boiler configured as a follower   | If this is a stand alone boiler turn 0.46 to B-SIN.   | Warning (Manual Reset)  |
|                               |   | Manager boiler miswired                  | Inspect EBUS wiring for damage or shorts, EBUS wiring is polarity sensitive. CN24 pin 11 and 12.  |                         |
|                               |   | Manager boiler turned off                | Ensure power is on for all boilers in cascade   |                         |
|                               |   | Manager boiler not configured correctly  | For Cascade manager set 0.46 to B-Mas, only one boiler in the cascade may be set to B-Mas (see cascade manual set-up).  |                         |
| 4 41                          | Follower Boiler Missing from BUS Connection   | Single boiler configured as a Master     | If this is a stand alone boiler turn 0.46 to B-SIN.   | Warning (Manual Reset)  |
|                               |   | Follower boiler miswired                 | Inspect EBUS wiring for damage or shorts, EBUS wiring is polarity sensitive. CN24 pin 11 and 12   |                         |
|                               |   | Follower boiler turned off               | Ensure power is on for all boilers in cascade   |                         |
|                               |   | Follower boiler not configured correctly | For follower boilers set 0.4.6 to FL-1 up to FL-7 (see cascade manual set-up)   |                         |
| <b>Ignition and Detection</b> |   |  |   |                         |
| 5 01                          | No flame detected (3 times)<br>No visible flame   | Improper Gas pressure                    | Test the Static gas pressure is must be 3.5-10.5" for natural gas and 8-13 for Propane. With the manometer connected test the gas pressure During ignition. If the pressure drops below 3.5" for natural gas or 8" for LP gas, there is a gas supply problem, check the gas line and gas regulator.   | Blocking (Manual Reset) |
|                               |   | Improper light off rate setting          | Set 2.2.0 in accordance with "Table Summarizig Power" in Manual. This setting may be adjusted from 20-65 to achieve smooth ignition   |                         |
|                               |   | Blocked intake                           | Remove front cover and inspect the venturi and boiler air inlet silencer for debris. Reset the error and try again.   |                         |
|                               |   | Blocked Exhaust                          | Inspect exhaust for proper slope to boiler and possible restrictions or blockages   |                         |
|                               |   | Blocked condensate Drain                 | Inspect condensate drain, if the drain was clogged water may have entered the gas valve. If the valve was wet it must be replaced.  |                         |
|                               |   | Improper LP conversion                   | Check conversion instructions, increase the gas flow by adjusting the input screw. **A combustion test must be performed if the gas valve is adjusted.  |                         |
|                               |   | No Spark                                 | Turn off boiler and the gas and remove the igniter, inspect it for cracks or warping the igniter gap is 3/16"-1/4". With the gas off and the igniter removed observe the spark during the trial for ignition ensure it sparks for 3-5 seconds. If there is no spark check that the spark transformer receives 120VAC during the ignition trial. |                         |
|                               |   | Improper combustion settings             | Warning: the following must be performed by a qualified technician with a combustion analyzer. Use the gas valve input screw to increase the gas flow. Once the boiler remains lit perform combustion test.   |                         |
| Faulty flame sensor           | If the boiler lights well and has a strong flame, replace the flame sensor and inspect the flame sensor harness for shorts or damage. |  |   |                         |

| Display Error code                     | Error Description  | Possible cause based on priority    | Possible Remedies   | Error Type              |
|--|--|-------------------------------------|---|-------------------------|
| 5 02                                   | Flame detected out of sequence   | Faulty flame sensor                 | Check the flame sensor and wiring for damage,water or other possible shorts to ground (replace flame sensor)  | Blocking (Auto Reset)   |
|  |  | Faulty PCB                          | If problem persists replace the PCB.  |                         |
| 5 04                                   | Flame lost ten times during run  | Improper gas pressure               | Verify the gas pressure to the appliance while in operation. Ensure pressure is between 3.5 and 10.5" WC (Natural Gas), or between 8 and 13"WC for boilers converted to Propane (LP) operation. | Blocking (Manual Reset) |
|  |  | Improper combustion settings        | Test combustion at high and low fire and set it to the high end of the recommended range for the fuel type used.  |                         |
|  |  | Restricted Air inlet or Exhaust     | Check the inlet and exhaust for restriction   |                         |
|  |  | Dirty combustion chamber or burner  | Clean the combustion chamber and burner   |                         |
|  |  | Dirty /Faulty flame sensor          | Clean the flame sensor with a mild abrasive or replace the flame sensor.  |                         |
|  |  | Blocked condensate drain            | Ensure the condensate drain is clear and drains freely  |                         |
|  |  | Damaged flame probe cable           | Inspect flame probe wire for loose connections, shorts to ground or damage.   |                         |
| 5 P1                                   | 1st Ignition Failed  | Normal operation                    | 5P1 may be displayed momentarily if there is a problem the boiler will lock out. Follow the directions for the lockout  | Warning                 |
| 5 P2                                   | 2nd ignition attempt failed  |                                     | See lockout 501   |                         |
| 5 P6                                   | 3rd ignition attempt failed  |                                     | See lockout 501   |                         |
| 5 P3                                   | Detection of Flame loss during run   | Wind                                | In some circumstances the flame will lift during run due to wind.   | Warning                 |
|  |  | Blocked venting                     | Ensure nothing is obstructing the venting   |                         |
|  |  | Combustion settings or Gas pressure | If the problem is persistent a lockout will result, follow the trouble shooting for the lockout. If the flame loss is bothersome and does not result in a lockout, see error 504.               |                         |
| <b>Air Intake / Exhaust Gas Outlet</b> |  |                                     |   |                         |
| 6 02                                   | Exhaust Temperature exceeded 204F (the error can only be cleared when the flue temperature drops below 149F) | Inadequate water flow               | Ensure the boiler is free of air and pressurized to a minimum of 18PSI and check that the blue light on the internal pump is on during the heating or hot water demand                          | Blocking (Manual Reset) |
|  |  | Dirty Combustion chamber            | Ensure the combustion chamber is cleaned regularly so that flue gas can pass easily   |                         |
|  |  | Water scaling                       | If the error is accompanied by popping or hissing, the boiler may have scale build up preventing proper heat transfer. Descale the heat exchanger if needed.                                    |                         |
|  |  | Faulty wiring                       | Check the wiring to the Flue sensor for water or corrosion  |                         |
|  |  | Faulty sensor                       | Check for proper readings from the Flue sensor. Compare it to the reading on parameter 834. If the parameter 834 reading is significantly higher ,replace the Flue sensor                       |                         |
|  |  | Missing/ Damaged refractory         | Inspect the combustion chamber for damaged or missing refractory replace any damaged or missing components  |                         |
|  |  | clogged condensate drain            | Clean the condensate trap ensure its draining freely.   |                         |

## Part 13 - Troubleshooting

| Display Error code | Error Description   | Possible cause based on priority            | Possible Remedies  | Error Type   |
|--------------------|---|---|--|--|
| 6 03               | Blocked condensate switch open  | Blocked Condensate                          | Ensure the condensate is draining freely and the tubing to the switch is clear   | Blocking (Manual Reset)                            |
|                    |   | Blocked vent                                | If the problem only occurs when the front cover is on, there is too much restriction in the intake vent. Check the exhaust and air-intake venting for blockages  |  |
|                    |   | Wiring problem                              | Inspect the wires from the air switch to the boiler control. Disconnect and reconnect each connection  |  |
|                    |   | Air switch failure                          | Replace the air switch   |  |
| 6 05               | "Exhaust Temperature sensor circuit open or short circuit"  | Faulty wiring                               | Inspect the wires from the exhaust sensor to the boiler control. Disconnect and reconnect each connection. Dry or clean any wet or corroded wires.   | Blocking (Auto Reset)                              |
|                    |   | Faulty sensor                               | Test the flue temperature sensor using a multimeter, compare with the temperature resistance chart. Replace the sensor.  |  |
| 6 12*              | Blower did not achieve the proper RPM speed   | Faulty wiring between control and blower.   | Check the 4 wire harness between the fan and PCB for damage and check it for continuity (Blue-Brown-Black-Red). On the 3-wire harness, verify 120Vac between black and white.  | Blocking (Manual Reset)                            |
|                    |   | Faulty Blower                               | Remove the 4-wire harness from the blower, if it does not run at high speed replace the blower.  |  |
|                    |   | Improper PWM Signal                         | If the wiring and blower are ok, the main PCB is not sending the correct PWM signal. Replace the PCB.  |  |
| 6 19               | Power Limiting Mode   | Normal operation on new start up.           | Allow the boiler to operate the burner in heating or hot water mode for 5 minutes without interruption. The boiler will return to normal operation on its own.   |  |
| NOAVL              | There is a problem with the boiler address settings or EBUS wiring.   | EBUS wiring (orange connector)              | Check the EBUS connection and wires for damage or shorts. EBUS wiring is polarity sensitive and cannot be connected to other manufacturers clip in module, control or room sensor or another EBUS connection on another boiler. EBUS connector CN24 pin 11-12.   | After the issue is corrected the error will clear. |
|                    |   | Incorrect setting                           | Select menu 0.4.6 set the boiler address. Slave boilers must be set to B-FL1 up to B-FL7, the master boiler must be set to B-MAS. If not using a cascade set to B-SIN, for stand alone boiler. Only 1 boiler can be set to B-MAS and each slave boiler must have a unique address B-FL1 between and B-FL7. |  |
| EMERG              | Cascade boiler lost communication<br>NOTE: When in Emergency Mode the boiler operates in CH mode with a target boiler temperature=Emergency Setpoint (2.10.3 for Master boiler, 34-40.10.3 for Follower boilers). | EBUS wiring (orange connector) disconnected | Check the EBUS connection and wires for damage or shorts. EBUS wiring is polarity sensitive and can only be connected to NTI room sensors, or zone controls, 0-10VDC clip in module or another EBUS connection on different boiler. EBUS connector CN24 pin 11-12.   |  |
|                    |   | Incorrect settings                          | Select menu 0.4.6 set the boiler address. Slave boilers must be set to B-FL1 up to B-FL7, the master boiler must be set to B-MAS. If not using a cascade set to B-SIN, for stand alone boiler. Only 1 boiler can be set to B-MAS and each slave boiler must have a unique address B-FL1 between and B-FL7. |  |
|                    |   | Master boiler in Cascade turned off         | The master boiler must be powered at all times when in a cascade. If you wish to prevent burner operation use the power button on the boiler display.  |  |
|                    |   | Incorrect wiring                            | The Bus wiring is polarity sensitive ensure wiring is connected such that the T connection on each cascade boiler is connected to every other T and B is connected to B.   |  |

| Display Error code | Error Description                      | Possible cause based on priority | Possible Remedies  | Error Type |
|--------------------|--|----------------------------------|--|------------|
| <b>CONFL</b>       | Cascade boilers share a common address | incorrect settings               | Two or more boilers in the cascade have the same address. Check menu 0.4.6 and ensure each boiler has a unique address.  |            |
|                    |  | BUS connection shorted           | The control has sensed a short circuit on the BUS connection. Disconnect the field wiring from the BUS connection and confirm wiring.                                    |            |
|                    |  | Incorrect Bus wiring             | The Bus wiring is polarity sensitive ensure wiring is connected such that the T connection on each cascade boiler is connected to every other T and B is connected to B. |            |
|                    |  |                                  | If problem persists replace the main control.  |            |

| General symptoms | Symptoms | Possible cause based on priority | Possible Remedies |
|------------------|----------|----------------------------------|-------------------|
|------------------|----------|----------------------------------|-------------------|

|   |                             |                                  |  |
|---|-----------------------------|----------------------------------|--|
| <b>Noisy ignition / rough or noisy burner operation</b> |                             | Improper Gas pressure            | The gas pressure is excessively high or low. Test the static gas pressure it must be between 4" <sup>mm</sup> -9" <sup>mm</sup> for natural gas and 8" <sup>mm</sup> -12" <sup>mm</sup> for propane.<br>Test the gas pressure during burner operation. If the pressure dips below the minimum or goes above the maximum check the gas regulator. |
|   |                             | Poor combustion settings         | Set the CO <sub>2</sub> in high AND low fire within the specifications for the boiler. CO <sub>2</sub> must be tested and adjusted at HIGH and LOW fire.   |
|   |                             | Restricted venting               | The intake or exhaust of the boiler is restricted preventing proper air flow.  |
|   |                             | Dirty combustion chamber/ burner | The combustion chamber and burner require regular service. Wash the burner and clean the combustion chamber.   |
|   |                             | Improper igniter gap             | The gap between the electrodes must be between 3-6MM 3/16 - 1/4". Adjust the gap or replace the electrode.   |
|   |                             | Damaged burner                   | Check the burner for wear and damage. Clean the burner.  |
|   |                             | Damaged refractory               | The refractory in the combustion chamber must sit snugly against the burner door and have a small gap around the flame sensor and igniter. If the refractory is damaged or deformed replace it.  |
|   |                             |                                  | If problem persists see lockout 504 and 501  |
| <b>Blank Display</b>                                    | Screen does not light up    | Boiler not powered               | Ensure the boiler has a steady 120VAC supply   |
|   |                             | Short on the back of the screen  | Remove and inspect the back of the screen for water damage or foreign debris.  |
|   |                             | Plug disconnected                | The green plug in the junction box or on the PCB has come loose, secure the plugs properly.  |
|   |                             | Blown fuse                       | Check the Main PCB fuse  |
| <b>DHW goes hot and cold</b>                            | DHW temperature is unstable | Incorrect Setting                | Check Menu 2.1.9 FOR FTVN / COMPASS combi models set =1, TRX199C set = 1, TRX150C and TRX110C set = 0.<br>See No Heat/No DHW.  |
|   |                             |                                  |  |
| <b>Boiler control re-sets continuously</b>              |                             | WiFi Board problem               | Remove the Wire connection to the WiFi board. If the problem goes away, replace the WiFi board or leave it disconnected  |
|   |                             | EBUS connection problem          | If the boiler has a device connected to the EBUS plug, disconnect the EBUS inspect the external device for proper wiring and compatibility   |
| <b>Heating: Installation not heated uniformly</b>       |                             | Loose power connection           | Ensure the boiler has a steady 120VAC supply, inspect the green plug in the junction box and on the PCB  |
|   |                             | PCB Failure                      | Replace the PCB  |
| <b>Outdoor sensor icon blinking</b>                     | Normal operation            | Outdoor sensor Disconnected      | See Error 114  |

## Part 13 - Troubleshooting

| General symptoms              | Symptoms                       | Possible cause based on priority                       | Possible Remedies   |
|-------------------------------|--------------------------------|--|---|
| <b>No Heat /No DHW</b>        | Insufficient heat or hot water | No thermostat demand                                   | Verify that the boiler call for heat is enabled, and indicated on the screen of the boiler, the call for heat should be connected to TT1, and or TT2 on the low voltage terminal strip  |
|                               |                                | Error/ lockout   | Boiler is in error or lockout, see troubleshooting for the specific error.  |
|                               |                                | Incorrect temperature setting Central heat             | Verify the set point temperature in menu 4.2.5/4.0.2 , 5.2.5 / 5.0.5 and 6.2.5/6.0.2 is adequate. If Using the outdoor sensor try enabling the boost feature 4.7.5, 5.7.5, 6.7.5. Increase the slope setting 4.2.2. 5.2.2. and 6.2.2.   |
|                               |                                | Incorrect temperature setting DHW                      | Verify the set point temperature in menu 2.0.0  |
|                               |                                | Boiler up to temperature circulation pumps not working | If the boiler is at the setpoint verify that the zone valves and system circulators are working properly.   |
|                               |                                | Setting problem  | Use menu 2.8.0 to do a factory reset and set the boiler per Table summarizing Powers and choose your desired settings. Always check PCB settings if restoring factory default settings on a replacement controller. Replacement controllers have generic settings that may not be specific to the boiler model.   |
|                               |                                | Mixing valve not set correctly (DHW)                   | New mixing valves are often set to a very low temperature, set the mixing valve prior to use  |
|                               |                                | Mixing valve malfunction (DHW)                         | If the boiler Hot pipe into the mixing valve is hot but the Mixed out is cool, adjust or replace the mixing valve   |
|                               |                                | Hot and cold water lines connected in reverse (DHW)    | Verify the piping, the DHW cold inlet is on the right side when looking at the boiler.  |
|                               |                                | Control setting problem                                | Check Menu 2.1.9 FOR FTVN / COMPASS combi models set =1, TRX199C set = 1 , TRX150C and TRX110C set = 0.   |
|                               |                                | Boiler does not register the DHW demand                | If the DHW demand is not present when the tap is running, verify that the water flow rate is in excess of 1 GPM, if using a mixing valve try increasing the set temperature.  |
|                               |                                | Water flow rate exceeds boiler capacity                | The maximum flow rate that can be heated by the combi will change as the cold water temperature changes. @77F rise in temperature 43F to 120F the 110C can provide 2.7GPM, the 150C will provide 3.7GPM, the 199C will provide 4.5 GPM.   |
| <b>No Heat /No DHW</b>        | Insufficient heat or hot water | Scale in plate heat exchanger                          | In areas with hard water the plate heat exchanger will collect hard water scale, reducing the DHW output. In areas with hard water de scaling may be required on a regular basis if the water is not softened.  |
|                               |                                | Diverting valve malfunction                            | Observe the diverting valve after a power cycle, the valve stem should extend and retract while the boiler boots up and move approximately 3/8". If the valve does not move at all and makes no noise the motor may be damaged. If the valve makes noise but does not move improper expansion tank location or another plumbing problem may prevent proper operation. |
|                               |                                | Flow switch or sensor not activating                   | A minimum of 0.5 GPM through the boiler is required to activate the flow meter or sensor if the boiler does not register a demand when the flow exceeds 0.5 PGM the flow switch or sensor may be dirty or defective. Clean or replace.  |
| <b>Lockout will not Reset</b> |                                | Holding reset button                                   | Do not hold the reset button, briefly press and release (TAP) the button to reset a lockout.  |
|                               |                                | Reset button not working                               | Remove and reinstall the PCB from the display housing, ensure the PCB is held by the clips.   |

| General symptoms                              | Symptoms   | Possible cause based on priority        | Possible Remedies   |
|---|--|---|---|
| <b>3Way valve Stuck</b>                       |  | Improper piping or boiler commissioning | <p>If the 3 way valve becomes stuck, verify the piping per the diagram in the installation manual. Remove any pumps or check valves not shown in the diagram.</p> <p>To unstick the valve: Lower the boiler pressure to 5PSI or less, then unplug the boiler and plug it back in and observe that the valve moves up and down 3/8" WHILE THE BOILER STARTS UP. If not using the DHW connection, remove the diverting valve plug once the valve reaches the top of its stroke.</p> |
| <b>Water hammer noise</b>                     | A harsh bang in the water piping when changing from heating to hot water | Anti water hammer feature turned off    | Set Menu 2.10.6 = 1 . If menu 2.10.16 is not available replace the PCB and the Screen.  |
|   |  | Old software                            | Check menu 8.5.5 if the software version is: 00.44.03 or 00.44.01, 00.85.00, 00.98.00, 01.01.00 replace the PCB for system boiler<br>Check menu 8.5.5 if the software version is: 00.44.03 or 00.44.01, 00.85.00 replace the PCB for combi boiler   |
| <b>3Way Valve noise</b>                       | The 3 way valve seats at the end of each cycle                           | Change setting 2.1.2                    | Set parameter 2.1.2 = 4.<br>Check menu 8.5.5 if the software version is: 00.44.03 or 00.44.01, 00.85.00, 00.98.00 replace the PCB.  |
| <b>Heating: Boiler starts without request</b> |  | Incorect wiring                         | Remove wiring from TT1, and TT2, If problem perists perform a factory reset with Menu 2.8.0   |

**Table 45 - Boiler Error Codes**

**Important**

Contact a qualified service technician for assistance if a Lockout Error occurs frequently. For safety reasons, the boiler will permit a maximum of five (5) resets in 15 minutes (five [5] presses of the RESET button). A sixth (6th) attempt within this 15 minute period will lock out the boiler permanently. The boiler will only operate again after the electrical supply has been disconnected and reconnected.

Repeated Lockout Error conditions could indicate a serious error with the boiler or installation. Failure to contact a qualified service technician to troubleshoot the error could result in substantial property damage, serious personal injury, or death.

\* Error is resettable remotely via NTI Tele-Diagnostic Service, NTI Remote Contractor.

### **DANGER**

The boiler must be inspected and serviced annually, preferably at the start of the heating season, by a qualified service technician. In addition, the maintenance and care of the boiler as outlined in this manual must be performed by the user/owner to assure maximum efficiency and reliability. Follow the maintenance procedures given throughout this manual. Failure to perform the service and maintenance or follow the directions in this manual could damage the boiler or system components, resulting in substantial property damage, severe personal injury, or death.

#### **A. Procedures**

Periodic maintenance should be performed once a year by a qualified service technician to ensure that all the equipment is operating safely and efficiently. The owner should make necessary arrangements with a qualified heating contractor for periodic maintenance of the boiler. The installer must also inform the owner that a lack of proper care and maintenance of the boiler may result in a hazardous condition.

#### **B. Maintenance That May be Performed by the User**

##### **Check the Surrounding Area**

### **DANGER**

To prevent the potential of substantial property damage, severe personal injury, or death, eliminate all the materials listed in Table 6 from the area surrounding the boiler and the vicinity of the combustion air intake. If contaminants are found:

Remove products immediately from area.

If contaminants have been there for an extended period, call a qualified service technician to inspect the boiler for possible damage from acid corrosion.

If products cannot be removed, immediately call a qualified service technician to re-pipe the combustion air intake piping away from the contaminated areas.

##### **Ensure the Cabinet is Closed When the Boiler is Operating**

The boiler cabinet must be closed when the boiler is operating.

##### **Combustible/Flammable Materials**

Do not store combustible materials, gasoline, or other flammable vapors or liquids near the boiler. If found, remove these materials immediately.

##### **Air Contaminants**

If allowed to contaminate combustion air, products containing chlorine or fluorine will produce acidic condensate that will cause significant damage to the boiler. Read the list of potential contaminants and areas likely to have these contaminants in Table 6. If any of these contaminants are in the room where the boiler is located, or combustion air is taken from one of the areas listed, the contaminants must be removed immediately or the intake pipe must be relocated to another area.

##### **Check the Power Source**

Make sure the power cord and the main power line are properly connected to the manual switch box inside the boiler.

##### **Check the Status of the Control Panel**

Observe the Control Panel to ensure the boiler is powered on and to check for any error codes. Clear any debris from the panel.

##### **Check CH Pressure Gauge**

Ensure the pressure reading on the CH gauge does not exceed 30 psig. Higher pressure readings may indicate a problem with the expansion

tank. Immediately contact a qualified service technician to inspect the boiler and system.

##### **Check Exhaust Vent and Intake Pipe Terminations**

Verify that the boiler exhaust vent and intake pipe terminations are clean and free of obstructions. Remove any debris from the exhaust vent or intake pipe openings. If removing the debris does not allow the boiler to operate correctly, contact your qualified service technician to inspect the boiler and the vent system.

##### **Check Exhaust Vent and Intake Piping**

Visually inspect the exhaust vent for any signs of blockage, leakage, or deterioration of the piping. Inspect the exhaust vent bracing. Ensure bracing is undamaged and in good condition. Notify a qualified service technician immediately if any problems are found.

### **WARNING**

Failure to inspect the venting system and have it repaired by a qualified service technician can result in vent system failure, causing severe personal injury or death.

##### **Check Pressure Relief Valve**

1. Visually inspect the primary pressure relief valve and discharge pipe for signs of weeping or leakage.
2. If the pressure relief valve often weeps, the expansion tank may not be operating properly. Immediately contact a qualified service technician to inspect the boiler and system.

##### **Operate Pressure Relief Valve**

1. Before proceeding, verify that the relief valve outlet has been piped to a safe place of discharge, avoiding any possibility of scalding from hot water.
2. Shut power off to the boiler. To avoid scalding, wait for boiler to cool before operating the relief valve.

### **WARNING**

To avoid water damage or scalding due to relief valve operation, a discharge line must be connected to the valve outlet and directed to a safe place of disposal. This discharge line must be installed by a qualified service technician in accordance with the boiler installation manual. The discharge line must be terminated so as to eliminate possibility of severe burns or property damage should the valve discharge.

3. Lift the relief valve lever. If water flows freely, release the lever and allow the valve to seat. Watch the end of the relief valve discharge pipe to ensure that the valve does not weep after the line has had time to drain. If the valve weeps, lift the lever again to attempt to clean the valve seat. If the valve does not properly seat and continues to weep, contact a qualified service technician to inspect the valve and system.
4. If water does not flow from the valve when you completely lift the lever, the valve or discharge line may be blocked. Immediately shut the boiler down per instructions on page 2 and call a qualified service technician to inspect the valve and system.
5. If relief valve seats properly, restore power to the boiler. Observe operation for five minutes and ensure it operates properly.

##### **Check the Condensate Drain System**

1. While the boiler is running, check the discharge end of the condensate drain tubing. Ensure no flue gas is leaking from the condensate drain tubing by holding your fingers near the opening.
2. If you notice flue gas leaking from the opening, this indicates a dry condensate drain trap. If problem persists, contact a qualified service technician to inspect the boiler and condensate line and condensate trap.
3. If applicable, check the condensate neutralizer and ensure it is full of condensate neutralizing marble chips.



**C. Maintenance Only to be Performed by a Qualified Service Technician**

**Removing the Cabinet Cover and Inspecting the Boiler**

Before carrying out any work on the boiler, switch off the power supply at the external power switch and circuit breaker. Close the external gas shutoff.

**! DANGER**

Ensure power and gas to the appliance are shut off before performing the following operations. Failure to do so will result in substantial property damage, severe personal injury, or death.

See Figure 100 to access the interior of the boiler:

1. Release the four (4) latches from the front cover (two [2] each side). Lift and remove the front cover from the cabinet (a).
2. Remove the screw securing the control panel to the cross-member.
3. Push in the tabs and pull the control panel housing forward (b).

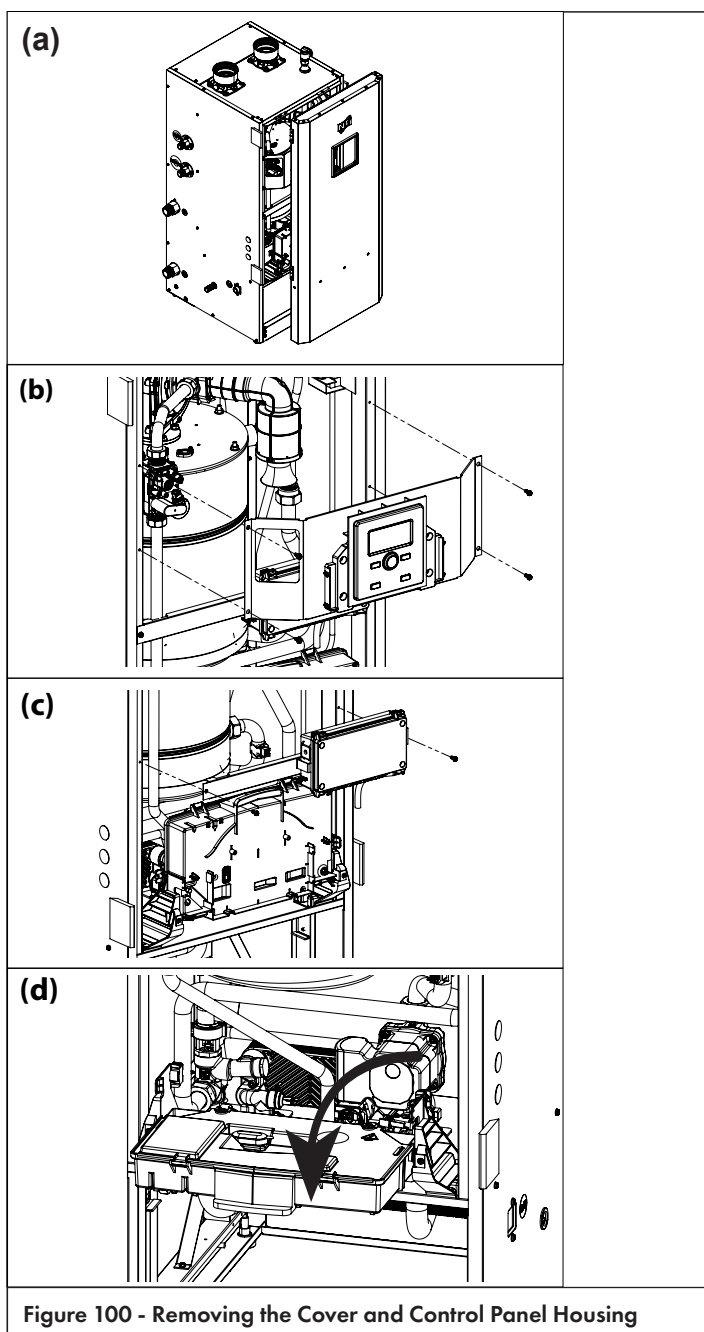


Figure 100 - Removing the Cover and Control Panel Housing

**Check Water and Gas Piping**

1. Remove the boiler cover and perform a gas leak inspection following Operating Instructions on page 2 of this manual. If gas odor or leak is detected, follow procedures on page 2. Call a qualified service technician.
2. Visually inspect for leaks around the boiler water connections and around the heat exchanger. Visually inspect the external system piping, circulators, and system components and fittings. Immediately call a qualified service technician to repair any leaks.

**! WARNING**

Have leaks fixed at once by a qualified service technician. Failure to comply could result in substantial property damage, severe personal injury, or death.

**Before Starting Maintenance:**

1. Ensure the power and gas remain off.
2. Close the valves of heating and hot water circuit.
3. Remove the front panel as shown in Figure 100.
4. If necessary, empty the appliance on the water side.

**Draining Procedure**

To drain the heating system:

1. Ensure the boiler power and gas remain off.
2. Open the manual purge valve.
3. Open the system drain valve and collect the escaping water in a container.
4. Drain the water from the lowest points of the system (where applicable).

If the system is to be inactive in areas where the room temperature may fall below 0°C during winter, it is recommended that anti-freeze liquid be added to the heating system in order to avoid the need for repeated draining. Ensure the antifreeze used is compatible with the stainless steel boiler heat exchanger.

**! WARNING**

NEVER use any toxic chemical, including automotive, standard glycol antifreeze, or ethylene glycol made for hydronic (non-potable) systems. These chemicals can attack gaskets and seals in water systems, are poisonous if consumed, and can cause personal injury or death.

It is recommended to use antifreeze which contains PROPYLENE GLYCOLS as these inhibit corrosion. Use the quantities and formulation suggested by the antifreeze manufacturer to protect against freezing in your region and prevent scaling and corrosion. Regularly check the pH level of the water/anti-freeze mix in the boiler circuit and replace it when the value measured is lower than the limit prescribed by the manufacturer.

**DO NOT MIX DIFFERENT TYPES OF ANTI-FREEZE.**

The manufacturer will not be held liable for any damage caused by the appliance or the system due to the use of inappropriate antifreeze substances or additives.

**Draining the DHW System and Indirect Water Heater**

Every time there is a danger of freezing, the domestic hot water system must be drained as follows:

1. Shut off the main water inlet valve.
2. Open all the hot and cold water taps.
3. Drain the water from the lowest points of the system.

**! WARNING**

Water drained from the boiler could be scalding hot. Wait for the boiler to cool before draining water, and take precautions when draining water. Failure to do so could result in property damage, personal injury, or death.

Allowing the boiler to operate with a dirty combustion chamber will hurt operation. Failure to clean the heat exchanger as needed by the installation location could result in boiler failure, property damage, personal injury, or death. Such product failures ARE NOT covered under warranty.

The combustion chamber insulation in this product contains ceramic fiber material. Ceramic fibers can be converted to cristobalite in very high temperature applications. The International Agency for Research on Cancer (IARC) has concluded, "Crystalline silica inhaled in the form of quartz or cristobalite from occupational sources is carcinogenic to humans (Group 1)."

Avoid breathing dust and contact with skin and eyes. Use a NIOSH certified dust respirator (N95). This type of respirator is based on the OSHA requirements for cristobalite at the time this document was written. Other types of respirators may be needed depending on job site conditions. Current NIOSH recommendations can be found on the NIOSH website: <http://www.cdc.gov/niosh/homepage.html>.

NIOSH approved respirators, manufacturers, and phone numbers are also listed on this website.

Wear long-sleeved, loose fitting clothing, gloves, and eye protection.

Apply enough water to the combustion chamber lining to prevent dust.

Wash potentially contaminated clothes separately from other clothing. Rinse clothes washer thoroughly.

NIOSH stated First Aid.

Eye: Irrigate immediately.

Breathing: Fresh air.

**Cleaning the Heat Exchanger Combustion Chamber**

\*Before beginning this procedure, have on hand the following items:

- a nylon or other non-metallic brush
- an FDA approved liquid lime scale remover in a spray bottle
- gloves and eye protection

1. Remove the silencer.

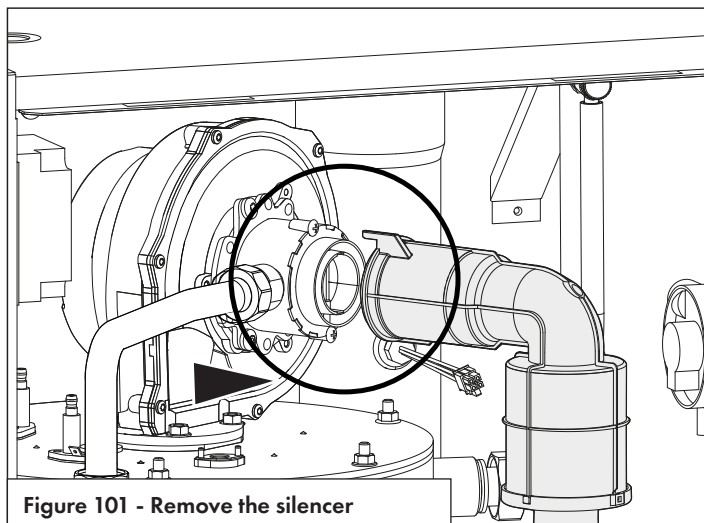


Figure 101 - Remove the silencer

2. Unscrew the two nuts and remove the gas pipe.

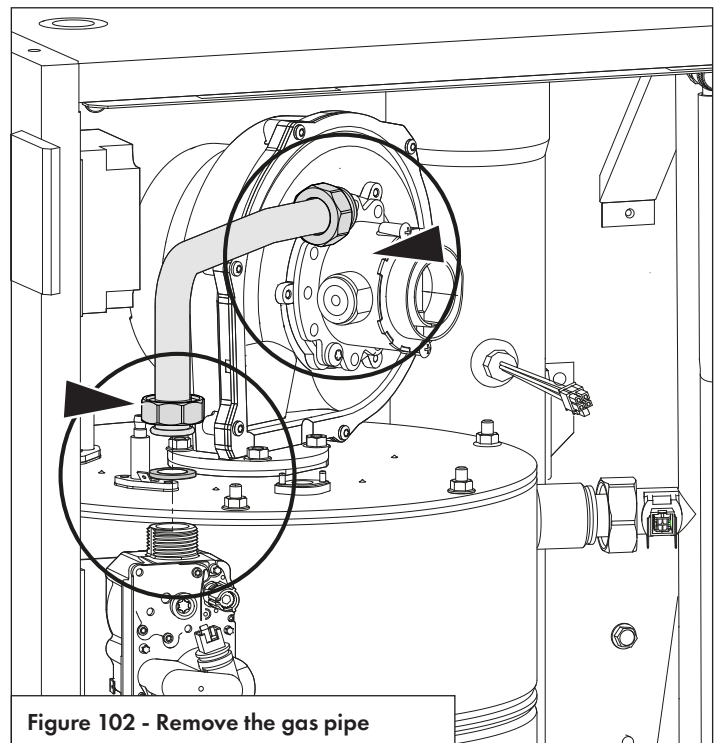


Figure 102 - Remove the gas pipe

3. Remove the gas diaphragm (if present).

4. Disconnect the electrical connections from the electrodes, igniter, and blower.

5. Depending on the boiler model, unscrew the three (3) or four (4) nuts on the blower and four (4) screws on the electrodes. Remove the blower and electrodes.


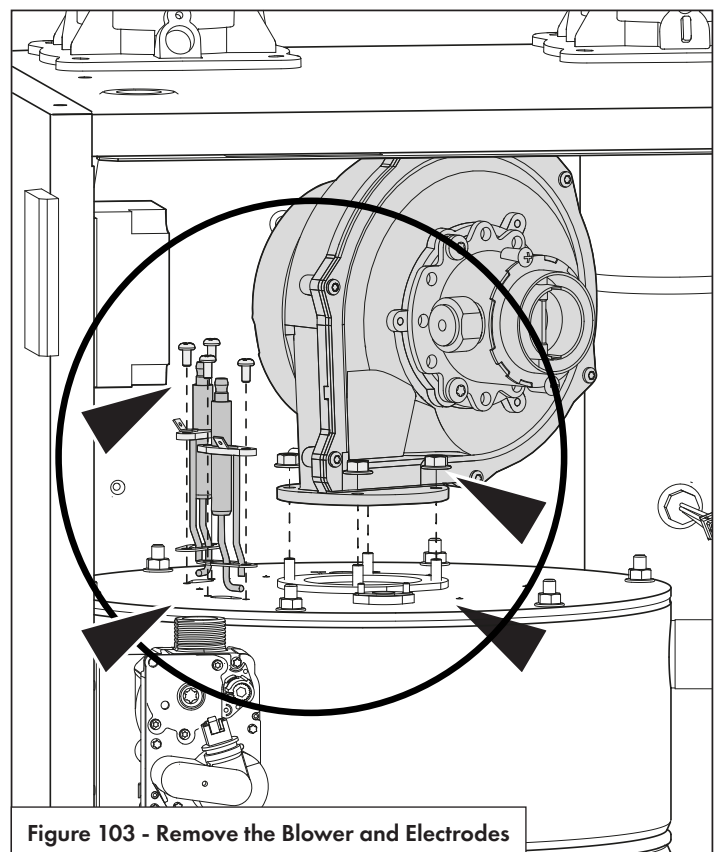


Figure 103 - Remove the Blower and Electrodes

- Remove the six (6) lock nuts securing the top plate to the heat exchanger. Remove the top plate and burner.

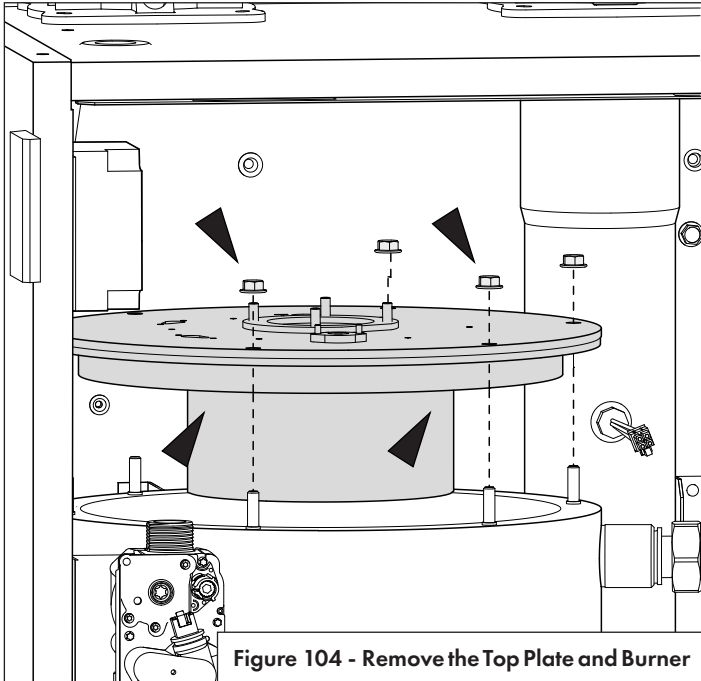

**Figure 104 - Remove the Top Plate and Burner**

- Disconnect the condensate hose and siphon cap from the boiler.

**! WARNING**

Protect the top plate insulation from water before performing any cleaning. Failure to do so could result in damage to the insulation, improper boiler operation, personal injury, or death.

Do not use solvents to clean any of the boiler components. The components could be damaged, resulting in unreliable or unsafe boiler operation, substantial property damage, severe personal injury, or death.

- Clean the combustion chamber by spraying water or solution into the combustion assembly and monitor the flow through the combustion system. Liquid should flow freely through each tube. If there is an obstruction, increase the flow on the tube to force the blockage out.

**Checking the Burner**

While the combustion assembly is removed from the heat exchanger, inspect the burner assembly. Proceed as follows:

- Observe the burner assembly (burner, associated gaskets, and combustion assembly sealing ring). Replace any components that are damaged or showing signs of deterioration.

**! DANGER**


Failure to replace a damaged sealing ring will result in exhaust gas leaks, substantial property damage, severe personal injury, or death.

**NOTE:** Whenever assembling the burner to the top plate, ALWAYS replace the burner gasket.

- Reassemble the burner assembly. Ensure the components are installed as described in Figure 105.
- After all maintenance is complete, reinstall the combustion assembly following the reverse order of steps 7 - 2 of Cleaning the Heat Exchanger Combustion Chamber. Ensure all gaskets are installed and all components are tightened properly.

- Restore power and gas to the boiler. Restart the boiler. Check for leaks in the combustion system. Observe operation for 5 to 10 minutes.

If boiler is operating properly, condensate is flowing normally, and no gas leaks are detected, combustion coil cleaning is complete.

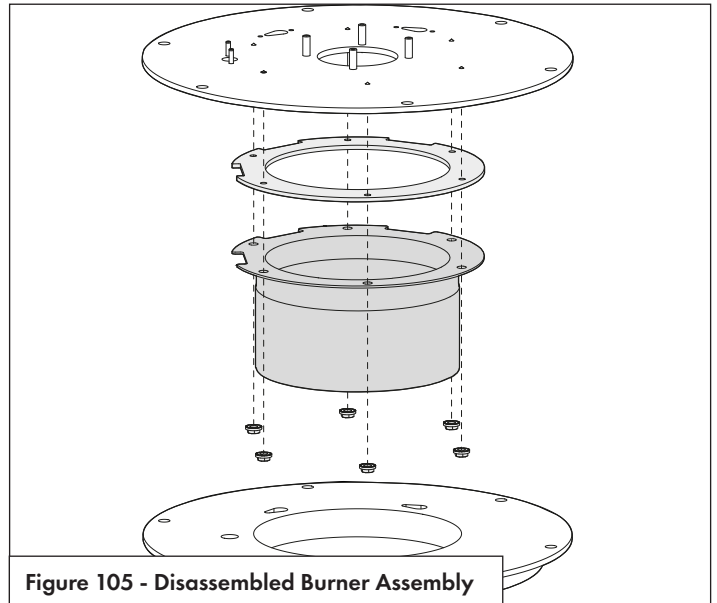

**Figure 105 - Disassembled Burner Assembly**

**Clean the Condensate Trap**

- Remove the condensate drain hose from the bottom of the boiler.

**! WARNING**


Take care when removing the condensate hose, as condensate may escape. Failure to do so could result in property damage due to leaks, personal injury, or death.

- Working from below the boiler, remove the siphon cap retaining clip. Then remove the siphon cap by depressing the two (2) lateral hinges (use a tool if necessary).
- Remove the cone and the ball.
- Clean each part.
- When the condensate trap is sufficiently clean, reassemble in the reverse order.

**NOTE:** Ensure all parts shown in Figure 106 are installed with the boiler. If any parts are missing DO NOT operate the boiler. Replace the entire condensate trap assembly.

**! WARNING**

Do not install the condensate assembly if a component is lost or missing. Replace the entire assembly. Failure to follow this warning could result in property damage, serious personal injury, or death.

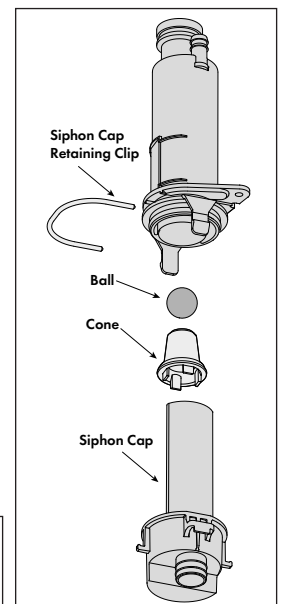

**Figure 106 - Clean the Condensate**

- If a condensate neutralizer kit is installed, check the assembly when cleaning the condensate trap, and replenish the limestone chips if necessary. When replacing the limestone chips, take care to ensure chips are no smaller than 1/2" to avoid blockage in condensate piping. See Figure 46 for piping details.

## Part 14 - Maintenance

7. Check condensate piping for sagging and/or leakage. Repair any sags or leaks before restoring power to the boiler.
8. If the boiler has a condensate pump, ensure the pump operates properly before considering maintenance complete.

### **!** DANGER

When servicing is complete, make sure the siphon cap and retaining clip are replaced securely. **The condensate trap assembly MUST BE PROPERLY INSTALLED** according to these instructions when operating the boiler. Operating the boiler without the condensate trap assembly will cause flue gases to leak and result in serious personal injury or death.

### CAUTION

It is very important that the condensate piping be no smaller than  $\frac{3}{4}$ ". To prevent sagging and maintain pitch, condensate piping should be supported with pipe supports, and pitched  $\frac{1}{4}$ " per foot to allow for proper drainage.

The condensate line must remain unobstructed, allowing free flow of condensate. If condensate freezes in the line, or if line is obstructed in any other manner, condensate can exit from the tee, resulting in potential water damage to property.


### **!** WARNING

Ensure the combi boiler DHW heating system has been valved off from the system and drained BEFORE attempting to remove the DHW filter. Failure to do so could result in property damage, serious personal injury, or death.

Water drained from the boiler could be scalding hot. Wait for the boiler to cool before draining water, and take precautions when draining water. Failure to do so could result in property damage, personal injury, or death.

#### Cleaning the DHW Filter (Combi Models ONLY)

1. Remove the clip on the flow meter (1).
2. Remove the flow meter cap (2).
3. Remove the flow meter turbine (3).
4. Remove and clean the filter (4).

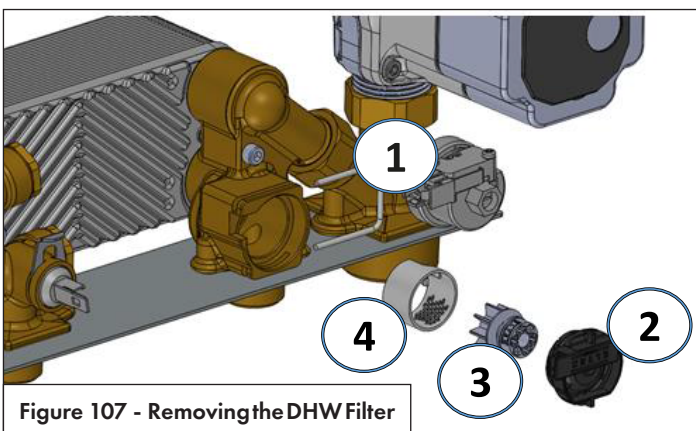

5. Clean the filter with a toothbrush and clean running water.
6. Reinstall the DHW inlet filter.
7. Refill the DHW circuit following the filling and purging instructions in this manual.
8. Restore gas and power to the boiler.

## **>** D. Replacing Components

At any point in time over the boiler's service life it may be necessary to replace boiler components. If the boiler displays an error message, determine its cause and possible remedies.

If the remedy is replacement of a component, ensure:

1. That the boiler is powered OFF. Press the ON/OFF button to turn the boiler off. Then turn the main electrical power to the boiler off at the circuit breaker.
2. The boiler electrical connection is connected properly. A loose electrical connection could be the root cause of problems.
3. The front cover has been removed.
4. The main shutoff gas valve is closed.
5. All water valves to and from the boiler (supply, return, inlet, outlet) are closed.
6. If necessary, the water has been drained from the boiler and/or appropriate circuit.
7. No water can get into the display / control panel.

#### Replacing the Burner

1. Remove the front cover and pivot the electronic housing following the instructions described in **Removing the Cabinet Cover and Inspecting the Boiler**.
2. Remove the combustion assembly as described in **Cleaning the Heat Exchanger Combustion Chamber**.
3. Remove, inspect, and replace the burner as described in **Checking the Burner**.
4. Replace all damaged seals that are damaged or showing signs of wear.

### **!** DANGER

Failure to replace a damaged sealing ring will result in exhaust gas leaks, substantial property damage, severe personal injury, or death.

5. Proceed in the reverse order to reinstall the components.

### Replacing the Fan

1. Remove the silencer and gas line as described in Cleaning the Heat Exchanger Combustion Chamber.
2. Loosen the three [3] screws to release the Mixer (1) from the fan (5). Ensure the O-Ring (4) is not damaged or deteriorating.

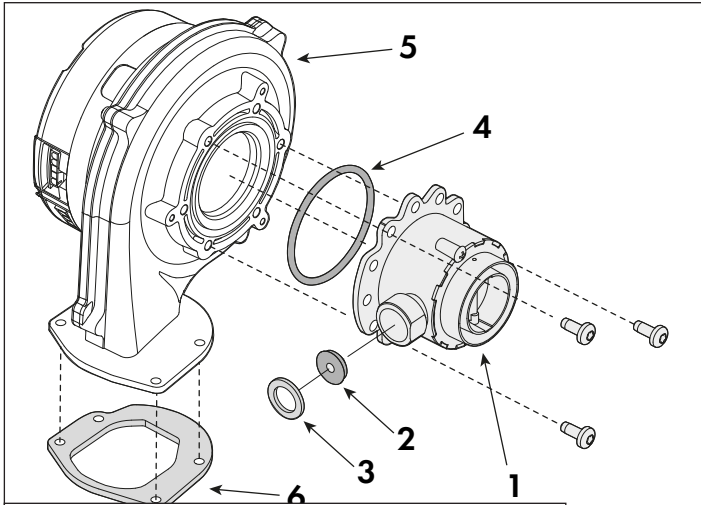


Figure 108 - Removed Fan, Mixer, and Components

#### Legend:

- 1 - Mixer (when converting to Propane, install the Mixer included in the Natural Gas to Propane Conversion Kit)
- 2 - Gas Diaphragm if applicable (NC150 / NC150C Natural Gas Models include a Gas Diaphragm. All Models converted to Propane require a Gas Diaphragm - see Natural Gas to Propane Conversion Instructions)
- 3 - Gas Seal
- 4 - O-Ring
- 5 - Fan
- 6 - Fan to Top Plate Gasket

3. Depending on the model, loosen the three [3] or four [4] screws to release the fan from the heat exchanger.

### **!** DANGER

Ensure that the correct gas diaphragm and mixer are used for the correct fuel type for the boiler - Natural Gas or Propane. See Conversion Kit Instructions. Failure to do so will result in substantial property damage, severe personal injury, or death.

4. Reassemble the mixer and fan assembly in the reverse order. Ensure the O-Ring (4) is installed between the mixer and fan.
5. Reinstall the fan and combustion assembly components as described in Cleaning the Heat Exchanger Combustion Chamber. Ensure the gasket (6) is assembled between the fan and air inlet channel.

### **!** DANGER

Failure to replace damaged or deteriorating gaskets or O-Rings will result in exhaust gas leaks, substantial property damage, severe personal injury, or death.

### Replacing the Main Heat Exchanger

1. Drain the boiler and remove the combustion assembly as described in **Cleaning the Heat Exchanger Combustion Chamber**.
2. Remove the combustion assembly as described in **Cleaning the Heat Exchanger Combustion Chamber**.
3. Remove the exhaust vent adapter on the top of the boiler.

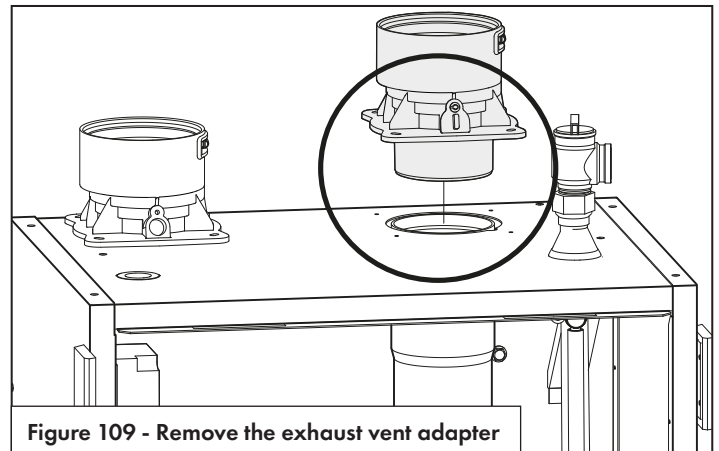


Figure 109 - Remove the exhaust vent adapter

4. Disconnect the CH supply and return pipes.

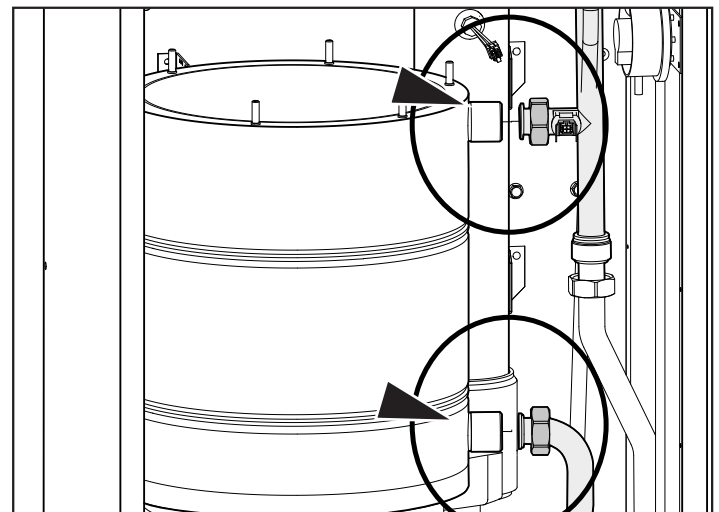


Figure 110 - Remove the CH Supply and Return Pipes

5. Remove the gas pipe.

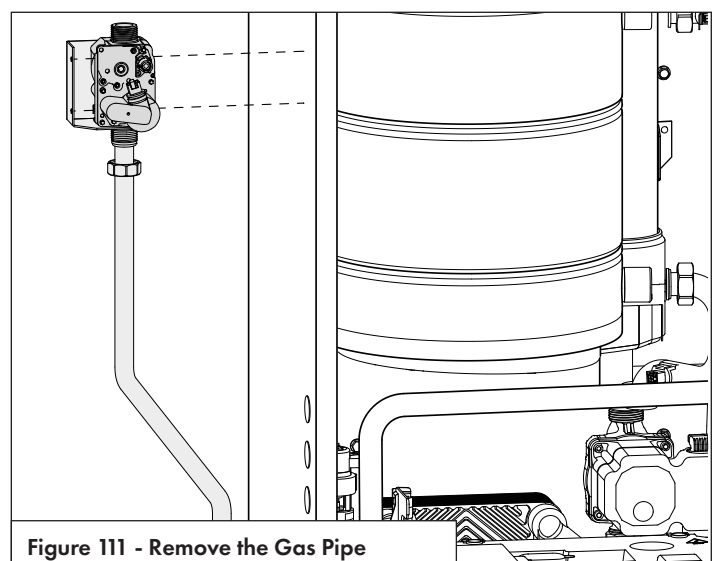


Figure 111 - Remove the Gas Pipe

## Part 14 - Maintenance

6. Disconnect the condensate line.

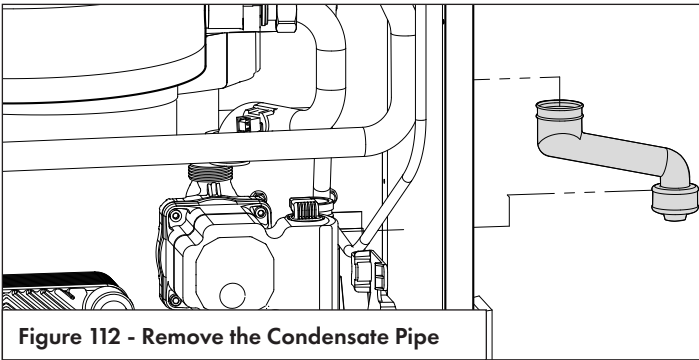


Figure 112 - Remove the Condensate Pipe

7. Remove the electrical junction box.

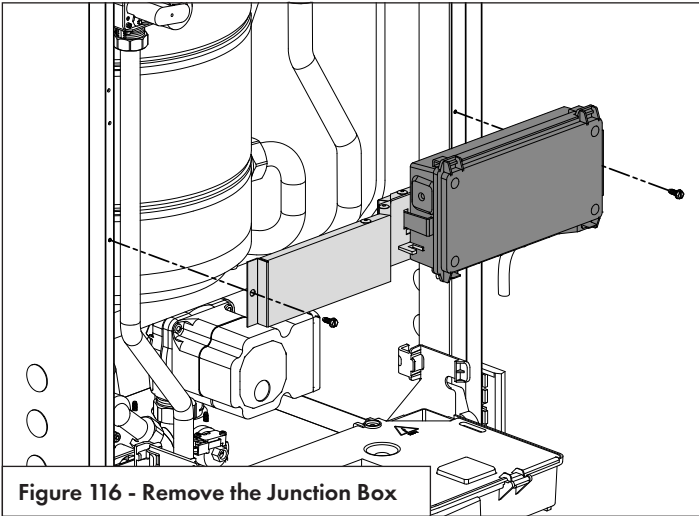


Figure 116 - Remove the Junction Box

8. Remove the bolts mounting the heat exchanger to the cabinet.  
9. Proceed in the reverse order to install the new heat exchanger.

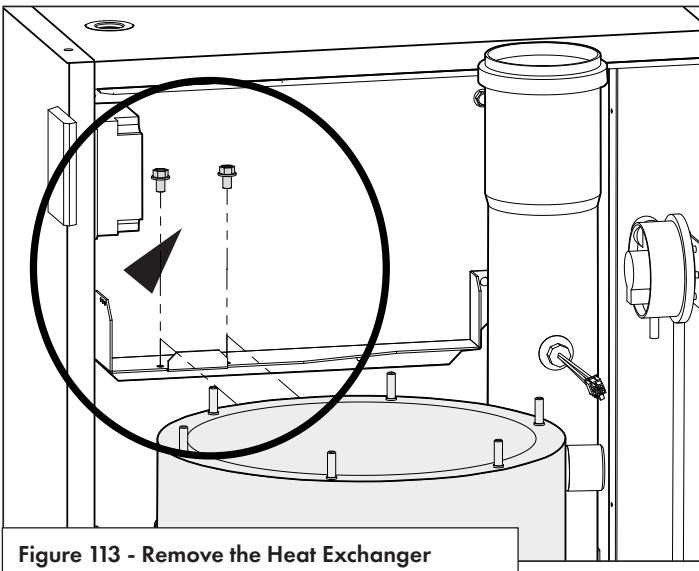


Figure 113 - Remove the Heat Exchanger

### Replacing the Gas Valve

1. Remove the electrical connection from the gas valve.
2. Remove the two (2) nuts above and below the gas valve.
3. Remove the two (2) screws securing the gas valve to the bracket.
4. Remove the gas valve.
5. Reinstall the new gas valve in reverse order.
6. **BE SURE TO USE NEW SEALING RINGS.**
7. Ensure there are no gas leaks.

## **!** DANGER

Failure to replace the sealing rings will result in gas leaks, and could cause an explosion or fire, substantial property damage, severe personal injury, or death.

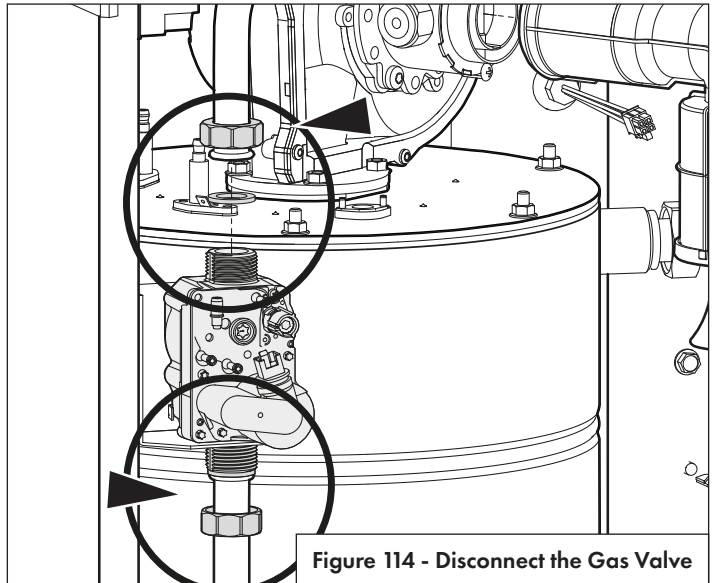


Figure 114 - Disconnect the Gas Valve

### Replace the Main PCB

1. Fold down the electronics box.
2. Unlock the two clips and open the electronics box cover.
3. Disconnect the electrical connections.
4. Unhook the controller board and remove it.
5. Proceed in reverse order to install the new PCB.

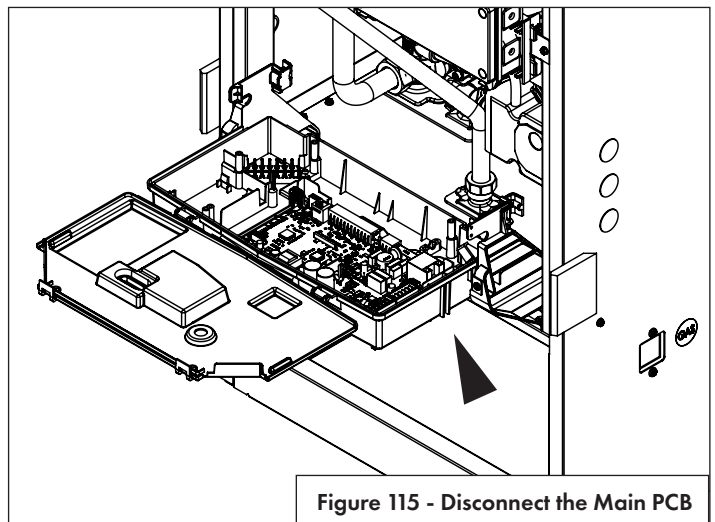


Figure 115 - Disconnect the Main PCB

6. Follow the instructions provided with the replacement PCB kit for setting all necessary parameters.

## E. After Maintenance is Complete

### Functional Test

After maintenance is complete, ensure the CH circuit is filled and purged with a pressure of 12 psi. Ensure the DHW circuit is filled and purged.

1. Power the boiler on.
2. If necessary, purge air again from the CH and DHW circuits.
3. Check the boiler and system settings and components. Ensure all adjustments are working properly.
4. Ensure the exhaust pipe is connected properly.
5. Reinstall the boiler front cover.
6. If necessary, set the maintenance interval.

### Inform the User

1. Inform the user of any changes / adjustments / replacements in the system.
2. Ensure the user understands how the system works.
3. Hand the instructions to the user. Ensure the instructions will be kept close to the unit.
4. Have the user perform these regular tasks:
  - Check the system water pressure regularly.
  - If necessary, restore pressure and vent the system.
  - Set the setpoints and control systems to ensure correct and economical control of the system.
  - Have the system serviced in accordance with regulations at regular intervals.
  - NEVER attempt to service the boiler or adjust the combustion system.

## CAUTION

In unusually dirty or dusty conditions, care must be taken to keep boiler cabinet door in place at all times. Failure to do so VOIDS WARRANTY!

## WARNING

Allowing the boiler to operate with a dirty combustion chamber will hurt operation. Failure to clean the heat exchanger as needed by the installation location could result in boiler failure, property damage, personal injury, or death. Such product failures ARE NOT covered under warranty.

The combustion chamber insulation in this product contains ceramic fiber material. Ceramic fibers can be converted to cristobalite in very high temperature applications. The International Agency for Research on Cancer (IARC) has concluded, "Crystalline silica inhaled in the form of quartz or cristobalite from occupational sources is carcinogenic to humans (Group 1)."

Avoid breathing dust and contact with skin and eyes. Use a NIOSH certified dust respirator (N95). This type of respirator is based on the OSHA requirements for cristobalite at the time this document was written. Other types of respirators may be needed depending on job site conditions. Current NIOSH recommendations can be found on the NIOSH website:

<http://www.cdc.gov/niosh/homepage.html>.

NIOSH approved respirators, manufacturers, and phone numbers are also listed on this website.

Wear long-sleeved, loose fitting clothing, gloves, and eye protection.

Apply enough water to the combustion chamber lining to prevent dust.

Wash potentially contaminated clothes separately from other clothing. Rinse clothes washer thoroughly.

NIOSH stated First Aid.

Eye: Irrigate immediately.

Breathing: Fresh air.

The boiler requires minimal periodic maintenance under normal conditions. However, in unusually dirty or dusty conditions, periodic vacuuming of the cover to maintain visibility of the display and indicators is recommended.

Periodic maintenance should be performed once a year by a qualified service technician to ensure that all the equipment is operating safely and efficiently. The owner should make necessary arrangements with a qualified heating contractor for periodic maintenance of the boiler. Installer must also inform the owner that the lack of proper care and maintenance of the boiler may result in a hazardous condition.

## Part 15 - Maintenance Report

| INSPECTION ACTIVITIES   |   | DATE LAST COMPLETED  |                      |                      |                       |
|---|---|----------------------|----------------------|----------------------|-----------------------|
| PIPING  |   | 1 <sup>st</sup> YEAR | 2 <sup>nd</sup> YEAR | 3 <sup>rd</sup> YEAR | 4 <sup>th</sup> YEAR* |
| Near boiler piping  | Check boiler and system piping for any sign of leakage. Leaking pipes could cause property damage. Make sure all piping is properly supported. See User's Information manual for instructions.  |                      |                      |                      |                       |
| Vent  | Check condition of all vent pipes and joints. Ensure all vent piping is properly supported. Check for obstructions at exhaust and intake termination points.  |                      |                      |                      |                       |
| Gas   | Check Gas piping, test for leaks and signs of aging. Make sure all pipes are properly supported.  |                      |                      |                      |                       |
| SYSTEM  |   |                      |                      |                      |                       |
| Visual  | Do a full visual inspection of all system components.   |                      |                      |                      |                       |
| Functional  | Test all functions of the system (central heat, water heating, Safeties)  |                      |                      |                      |                       |
| Temperatures  | Verify safe settings on boiler or Anti-Scald Valve  |                      |                      |                      |                       |
| Temperatures  | Verify programmed temperature settings  |                      |                      |                      |                       |
| ELECTRICAL  |   |                      |                      |                      |                       |
| Connections   | Check wire connections. Make sure they are tight.   |                      |                      |                      |                       |
| Smoke and CO detector   | Verify devices are installed and working properly. Change batteries if necessary.   |                      |                      |                      |                       |
| Circuit Breakers  | Ensure the circuit breaker is clearly labeled. Exercise circuit breaker.  |                      |                      |                      |                       |
| Switch and Plug   | Verify ON/OFF switch and convenience plug are both functional   |                      |                      |                      |                       |
| CHAMBER/BURNER  |   |                      |                      |                      |                       |
| Combustion Chamber  | Check burner tube and combustion chamber coils. Clean according to maintenance section of manual. Vacuum combustion chamber.  |                      |                      |                      |                       |
| Spark Electrode   | Clean. Set gap at 1/8".   |                      |                      |                      |                       |
| CONDENSATE  |   |                      |                      |                      |                       |
| Condensate Trap   | Clean debris from the condensate trap. Fill with clean water.   |                      |                      |                      |                       |
| Neutralizer   | Check condensate neutralizer. Replace if necessary.   |                      |                      |                      |                       |
| Condensate hose   | Disconnect condensate hose. Clean out dirt and re-install.<br><b>(NOTE: Verify the flow of condensate, making sure that the hose is properly connected during final inspection.)</b>  |                      |                      |                      |                       |
| GAS   |   |                      |                      |                      |                       |
| Pressure  | Measure incoming gas pressure (3.5 to 10.5" W.C. NG, 8 to 13" W.C. LP)  |                      |                      |                      |                       |
| Pressure Drop   | Measure drop in pressure on light off (no more than 1" W.C.)  |                      |                      |                      |                       |
| Check for leaks   | Check gas piping for leaks. Verify that all are properly supported.   |                      |                      |                      |                       |
| COMBUSTION  |   |                      |                      |                      |                       |
| CO/CO <sub>2</sub> Levels   | Check CO and CO <sub>2</sub> levels in Exhaust. Record at high and low fire.  |                      |                      |                      |                       |
| SAFETIES  |   |                      |                      |                      |                       |
| ECO (Energy Cut Out)  | Check continuity on flue temperature sensor. Replace the flue gas temperature sensor if corroded.<br>Check continuity on Water ECO. Check position and sensor resistance.<br>Ensure air pressure switch is properly connected (electrical connections and silicone pipe).   |                      |                      |                      |                       |
| DHW LOOP - Combi Models   |   |                      |                      |                      |                       |
|   | It is recommended to flush the DHW heat exchanger annually if water hardness exceeds 12 grains per gallon (considered extremely hard water). If water hardness falls below 12 grains per gallon it is recommended to flush the heat exchanger every two to three years.<br>It is also recommended to clean the CH and DHW inlet filters annually. |                      |                      |                      |                       |
| FINAL INSPECTION  |   |                      |                      |                      |                       |
| Check list  | Verify that you have completed entire check list. WARNING: FAILURE TO DO SO COULD RESULT IN SERIOUS INJURY OR DEATH.  |                      |                      |                      |                       |
| Homeowner   | Review what you have done with the homeowner.   |                      |                      |                      |                       |
| TECH SIGN OFF   |   |                      |                      |                      |                       |
| Table 46 - * Continue annual maintenance beyond the 4 <sup>th</sup> year as required. |   |                      |                      |                      |                       |



### A. Shutdown Procedure

Turn the boiler off at the on/off power switch. Wait for the combustion blower to stop, so all latent combustion gases are purged from the system. This could take a maximum of 5 minutes.

### B. Failure to Operate

Should the burner fail to light, the control will perform four more ignition trials prior to entering a lockout state. Note that each subsequent ignition trial will not occur immediately. After a failed ignition trial, the blower must run for approximately 5 seconds to purge the system.

If the burner lights during any one of these five ignition trails, normal operation will resume.

If the burner does not light after the fifth ignition trial, the control will enter a lockout state.

This lockout state indicates that a problem exists with the boiler, the controls, or the gas supply.

Under such circumstances, a qualified service technician should be contacted immediately to properly service the boiler and correct the problem. If a technician is not available, press a button on the display to wake it. Then press the RESET button to remove the lockout state so additional trials for ignition can be performed.

If the RESET key is not pressed (error code 501 or 503), the boiler will reset automatically after an hour.

### C. Important

#### WARNING

It is extremely important that whenever work is performed on the plumbing system that either:  
 The appliance is powered off, and,  
 The area that is being worked on is valved off and isolated.

Failure to take these measures could result in a dry-firing condition, explosion or fire, substantial property damage, severe personal injury, or death.

| Outdoor Sensor           |                   | Supply/Return Temperature Sensors Tank Sensor DHW Outlet Sensor |                   |
|--------------------------|-------------------|---|-------------------|
| Outside Temperature (°F) | Resistance (ohms) | Water Temp. (°F)  | Resistance (Ohms) |
| -22                      | 178605            | 32  | 27219             |
| -13                      | 132045            | 41  | 22021             |
| -4                       | 98438             | 50  | 17926             |
| 5                        | 73995             | 59  | 14674             |
| 14                       | 56079             | 68  | 12081             |
| 23                       | 42846             | 77  | 10000             |
| 32                       | 32997             | 86  | 8315              |
| 41                       | 25609             | 95  | 6948              |
| 50                       | 20027             | 104   | 5834              |
| 59                       | 15777             | 113   | 4917              |
| 68                       | 12517             | 122   | 4161              |
| 77                       | 10000             | 131   | 3535              |
| 86                       | 8042              | 140   | 3014              |
| 95                       | 6510              | 149   | 2586              |
| 104                      | 5302              | 158   | 2228              |
| 113                      | 4343              | 167   | 1925              |
|                          |                   | 176   | 1669              |
|                          |                   | 185   | 1452              |
|                          |                   | 194   | 1268              |
|                          |                   | 202   | 1110              |
|                          |                   | 212   | 974               |

Table 47 - Sensor Temperature Resistance



### Customer Installation Record Form

The following form should be completed by the qualified installer / service technician for you to keep as a record of the installation in case of a warranty claim. After reading the important notes at the bottom of the page, please also sign this document.

|                                 |  |
|---------------------------------|--|
| Customer's Name                 |  |
| Date of Installation            |  |
| Installation Address            |  |
| Product Name / Serial Number(s) |  |
| Comments                        |  |
| Installer's Code / Name         |  |
| Installers Phone Number         |  |
| Signed by Installer             |  |
| Signed by Customer              |  |
| Installation Notes              |  |

#### **IMPORTANT**

Customer: Please only sign after the qualified installer / service technician has fully reviewed the installation, safety, proper operation, and maintenance of the system. If the system has any problems please call the qualified installer / service technician. If you are unable to make contact, please call your sales representative.

Distributor / Dealer: Please insert contact details.



**NTI Boilers Inc.**

30 Stonegate Drive Saint John,  
NB E2H 0A4 Canada

Technical Assistance: 1-800-688-2575

Website: [www.ntiboilers.com](http://www.ntiboilers.com)

Fax: 1-506-432-1135



Visit us online