

A CSW Industrials Company

INSTALLATION INSTRUCTIONS




120/240 Single Phase, 60 Amp Double Pole Capacity Relays (handles loads 15-60 Amps)


PRODUCT CODE 96420







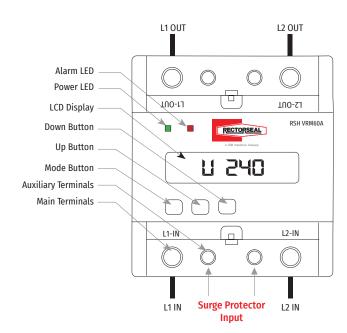

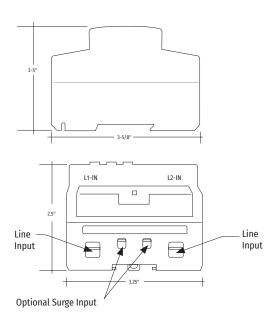

Installation Instructions

- 1. Device must be installed on din-rail.
- Device must be installed in an enclosure suitable for the application and environment for which it is being used. Connected load shall not exceed 60 amps.
- 3. Confirm power is OFF prior to performing the installation.
- 4. Use the appropriate wire size and type based on the connected load and torque to the specified ratings.
- Connect input and output connections, replace finger guard covers and then restore power.
- 6. Confirm power LED is illuminated and proceed to programming functions.

Programming Instructions

Start Up: At power up, load will remain disconnected for 4 minutes. This delay is not adjustable. To view event logs, press UP button. El - Over voltage events, E2 - Under voltage events, E3 - Outages

To enter program mode - Press and hold MODE button for 2 seconds

Mode 🚻 - Utility over-voltage set point. Use the UP & DOWN buttons to set the desired over-voltage cut off point between 85–300 vac Press MODE button to advance to next setting.

Mode LL - Utility under-voltage set point. Use the UP & DOWN buttons to set the desired under-voltage cut off point between 85–300 vac. Press MODE button to advance to next setting.

Mode 5U - Over/under delay. Use the UP & DOWN buttons to adjust the delay time between .5 and 60 seconds before the load is disconnected when an under or over voltage condition is present. Press MODE button to advance to next setting.

Mode $\frac{5P}{}$ - Load restore delay. Use the UP & DOWN buttons to adjust the delay time between 1 and 600 seconds before the load is restored after normal power levels have returned.

Mode EC - Event-log clear. To retain stored events, set to 1. To clear ALL stored events, set to 0. Press and hold the MODE button for 2 seconds to save changes and exit.

Diagrams

Main Terminals CU7 Copper Conductors Only 10–14 AWG 35 IN. LBS 8 AWG 40 IN. LBS. 4–6 AWG 45 IN. LBS. 2–3 AWG 50 IN. LBS

Auxiliary Terminals CU7 Copper Conductors Only 10–16 AWG 20 IN. LBS.

Specifications

- A. Purpose of control: Operating Control
- B. Construction of control: Independently Mounted
- C. Type 1 Action
- D. Pollution Degree: PD2
- E. Impulse Voltage: 2500 V



120/240 Single Phase, 60 Amp Double Pole Capacity Relays (handles loads 15-60 Amps)

WARRANTY INFORMATION & SAFETY NOTICE



Voltage or current hazard, follow these instructions or it could result in serious bodily injury or death.

Most electric product-related incidents are caused by failure to observe basic safely rules or precautions. Rectorseal cannot anticipate every possible circumstance that might involve a potential hazard.



Requirement

Installation MUST be completed by a qualified licensed tradesman in the field of electrical installation. This would include a thorough understanding of the requirements of NFPA 70: National Electrical Code® and all local codes.

Installation Process

The Installation must conform to these instructions and the local code authority having jurisdiction and the requirements of the power company. In the absence of code requirements follow NFPA 70 (latest edition) National Electric Code.

The Code which may be ordered from: National Fire Protection Association, 1 Batterymarch Park, Quincy, MA 02269.

Limited Warranty



For more information on our product limited warranty, visit RectorSeal.com